

SUZUKI

PARTS CATALOGUE

SUZUKI
A100

SUZUKI
AS100

SUZUKI
A100-2

SUZUKI
ASS100

SUZUKI
A100-3

持 出 禁 止

永 久 保 存 版

部 品 部 計 画 課

PREFACE

This parts catalogue covers the list of all service parts for SUZUKI A100 AS100, A100-2 and ASS100. Specification subject to change without notice.


A. INSTRUCTIONS FOR QUOTING THE CATALOGUE

1. COMPOSITION OF THE PART NUMBER

Parts are divided into the following seven types and the composition of part numbers for the various types differs.

- (1) Regular Parts (2) Standard Parts (3) Special Standard Parts
- (4) Parts Assemblies (5) Special Tools (6) Miscellaneous
- (7) Outdated Parts.

1-1. REGULAR PARTS

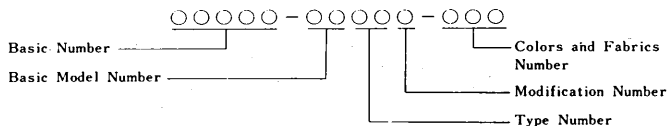

BASIC NUMBER

The basic number indicates the function of the part. The first digit of the basic number denotes the block to which the part belongs, the second digit indicates the section, the third digit shows the group and the fourth and fifth digits are used to differentiate in parts within the group. Block and Section Numbers are shown in the next page.

BASIC MODEL NUMBER

This shows the original model for which the part was designed.

Generally models are indicated by a combination of letters and numbers (i.e., T20, L20 Etc.), but with the part number the models are indicated by numerals only.

Block and Section Numbers

Block No.		Section No.								
	0000	1000	2000	3000	4000	5000	6000	7000	8000	9000
1	Engine	Engine non-moving	Engine moving	Inlet	Exhaust	Fuel	Lubrication	Cooling		
2	Clutch Transmission	Primary Clutch (No.1)	Clutch (No.2)	Clutch release	Transmission (No.1)	Transmission (No.2)	Transmission (No.3)	Drive		
3	Electric	Starting Charging (No.1)	Starting Charging (No.2)	Ignition Battery	Meter	Lamp (No.1)	Lamp(No.2) Wiring harness	Switch	Relay	
4	Chassis (No.1)	Frame	Stand	Brake control Footrest	Tank	Seat	Carrier	Frame cover	Legshield Wind shield	
5	Chassis (No.2)	Front fork	Front suspension	Front fender	Front hub	Front wheel	Handlebar	Handlebar control	Cable	
6	Chassis (No.3)	Rear swinging arm	Rear suspension	Rear fender	Rear hub	Rear wheel			Emblem	
7										
8										
9	Miscellaneous	Engine	Electric	Chassis (No.1)	Chassis (No.2)					

Example: 1. Engine moving section 12000
 2. Seat section 45000

TYPE NUMBER AND MODIFICATION NUMBER

The type number indicates vehicles developed from another model, manufacturer, export destination, special customer vehicle, optional part, etc.

The modification number indicates the number of times the part has been redesigned.

COLORS AND FABRICS

Colors are numbered from 001 to 299. Fabrics, including vinyl products, are numbered from 301 up. Fabrics with more than one color or finish are numbered from 699 down.

1-2. ISO STANDARD PARTS

★○○○○○-○○○○○
 └─Indicate ISO Standard Parts

Part numbers headed with asterisk (★) indicate threaded parts such as screws, bolts, nuts and threaded general parts manufactured in conformity with ISO standard.

These ISO threaded parts are different in their pitches from others inconformed to this standard and the former is not interchangeable with the latter.


1-3. STANDARD PARTS

Numbers of all standard parts begin with 0 except beginning with 09 or 000.

Standard parts are shown in the end part of this parts catalogue.

1-4. SPECIAL STANDARD PARTS

Special standard parts are parts which are similar to standard parts but differ in some respect. All special standard parts numbers begin with 09 except 099.

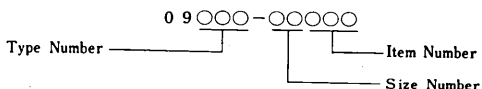


Special Standard Part Type Numbers

Part	Type No.	Part	Type No.
Bolt	100~119	Clamp	400~419
Screw	120~139	Key	420~439
Nut	140~159	Coil spring	440~459
Washer	160~179	Cable	460
Spacer, shim	180~189	Turnbuckle	461
Pin	200~219	Band	462
Rivet	220~239	Bulb	471
Plug	240~259	Fuse	481
Ball bearing, roller bearing	260~279	Spark plug	482
"O"ring, oil seal	280~299	Main jet	491
Bushing, grommet	300~319	Pilot jet	492
Shock absorber rubber	320~339	Air jet	493
Tube, hose	340~359	Needle jet	494
Pipe joint	360~379	Standard tool	800
Snap ring, clip	380~399		


1-5. PARTS ASSEMBLIES

The eighth digit of numbers of parts assemblies is always 8.




1-6. SPECIAL TOOLS

Part numbers begin with 099.



1-7. MISCELLANEOUS

Part numbers begin with 99000.



2. DIMENSIONS

Dimensions of the parts in this catalogue are indicated in unit millimeters. For the convenience of reader, however, measurements in inches are also listed in brackets.

3. ABBREVIATIONS


Abbreviations used in this catalogue are as follows;

Ass'y : Assembly	L. : Length	N.T. : Number of teeth
Comp. : Complete	T. : Thickness	OPT. : Optional
I.D. : Inside diameter	W. : Width	H. : Height
O.D. : Outside diameter	d. : Diameter of Material	Inc. : Includes
E.No. : Engine Number		

A100-12345~ : From E.No.A100-12345

~A100-12345 : Up to E.No.A100-12345

Figures in the remarks' column show the dimensions of parts as follows;

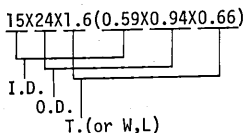


B. INSTRUCTIONS FOR ORDERING PARTS

1. The correct parts number and description of each part should be listed on the formal order sheet when ordering.
The relative numbers are as follows.


Color Code	Color Name	Mancel Color No.	Color	Model			
				A100	AS100	A100-2	AS100
019	Black	NI		0	0	0	0
002	Light Blue	5PB 3/7		0	0		0
061	Permanent Red	5R 4/14		0	0		0
075	Light Permanent Blue	7.5PB 3/10		0	0		
078	Candy Red					0	0
079	Candy Blue					0	
126	Pearl Metallic			0	0	0	0
676	Combination of 019 and 126					0	0
678	Combination of 079 and 126					0	
681	Combination of 078 and 126					0	0

There may be a slight difference between the actual body color and the above printed color due to the printing ink.


A 100

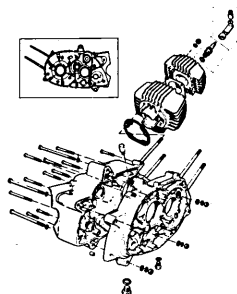


①

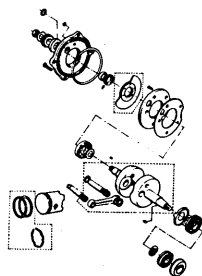


②

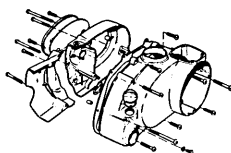


③

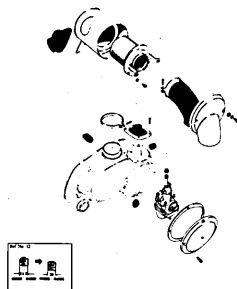


④

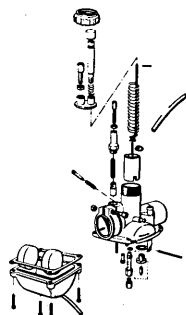


⑤

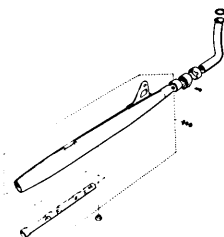










⑥

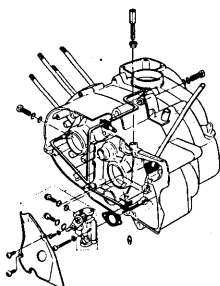


⑦

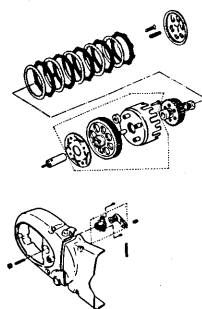


⑧

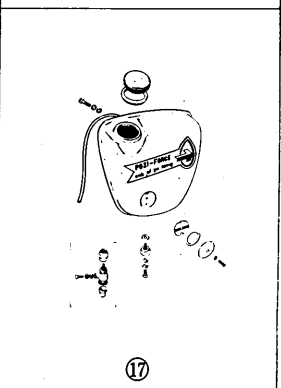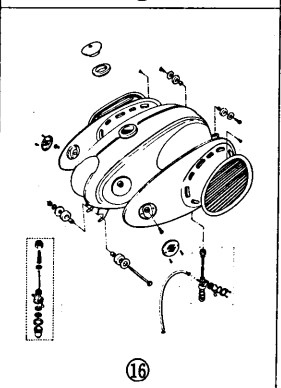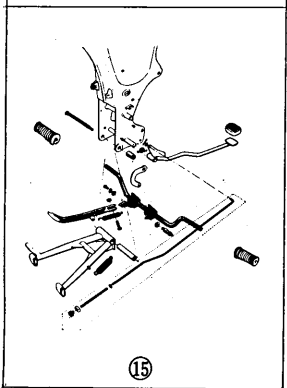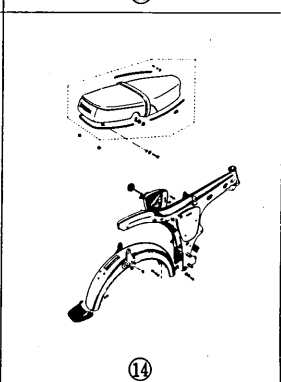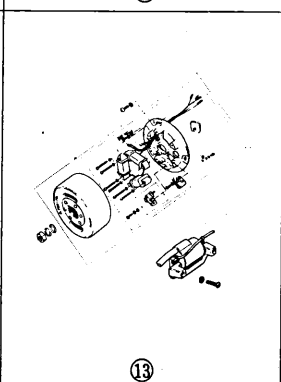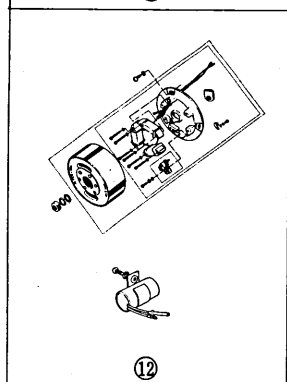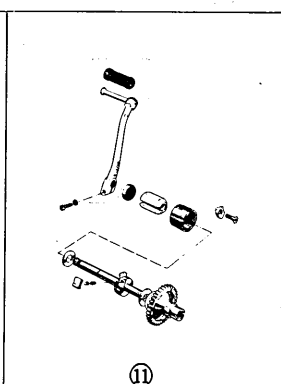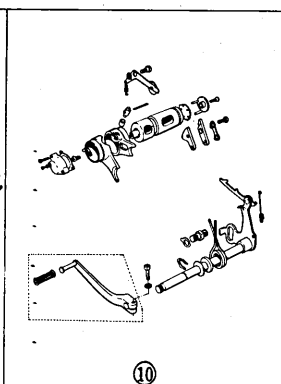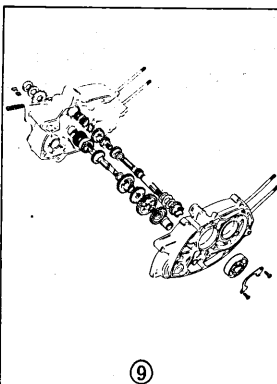


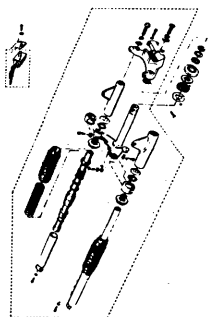


18

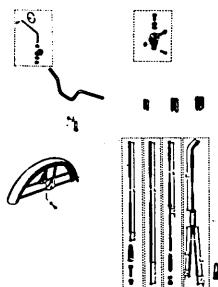


19

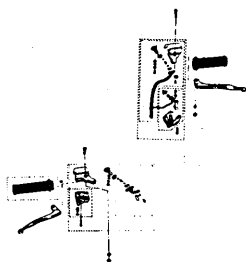


20

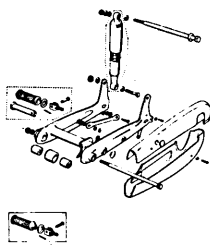


21

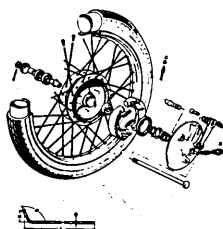


22

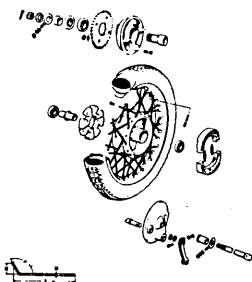


23

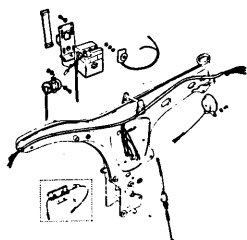


24

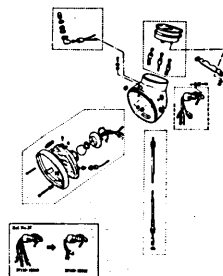

25

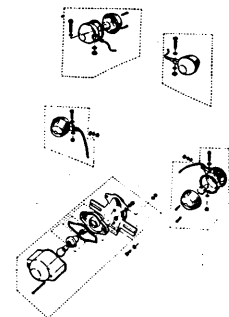


26

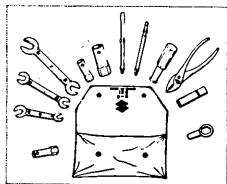


27

AS 100

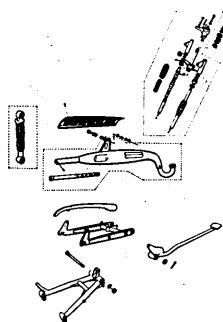


28


A 100-2

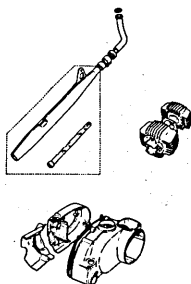


29

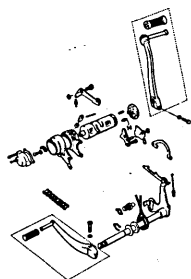


30

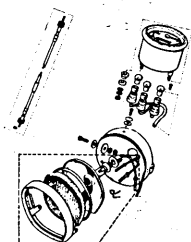


31

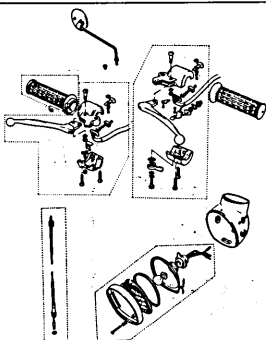


32

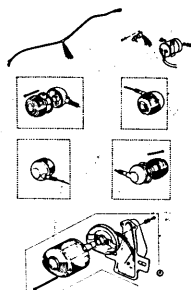


33

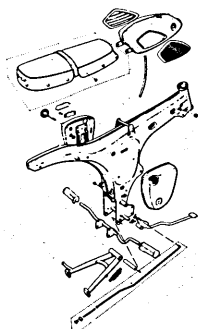


34

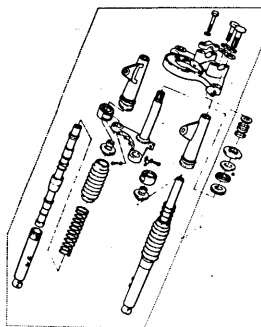

35

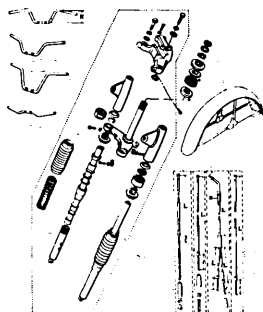


36

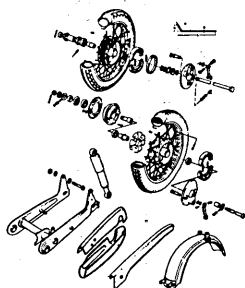


37

A100
Racing kit

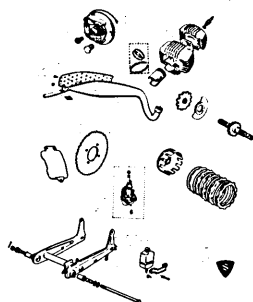










38


A100
Motocross kit

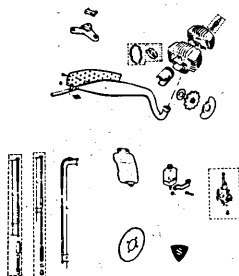




39

ASS100

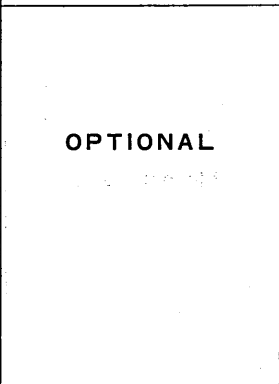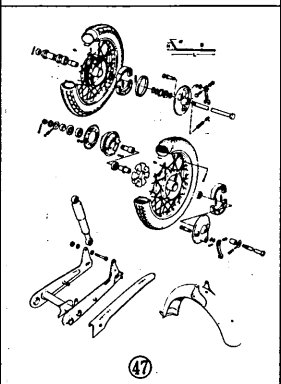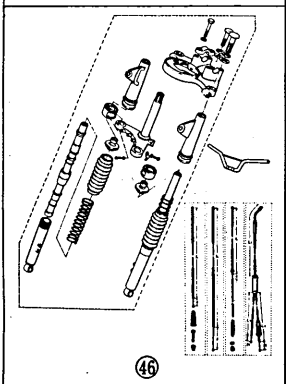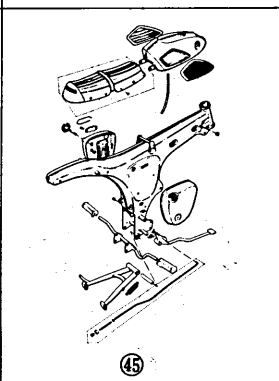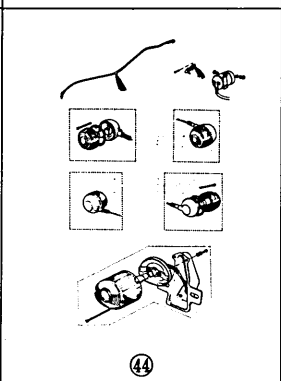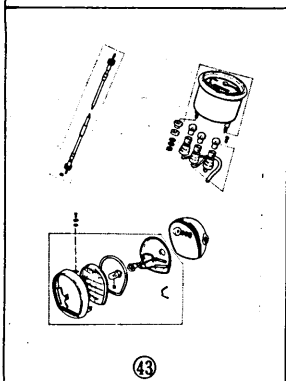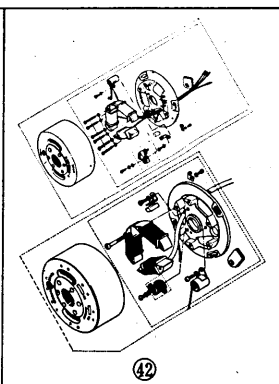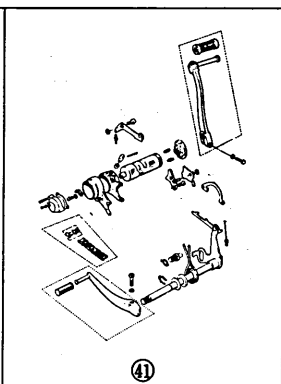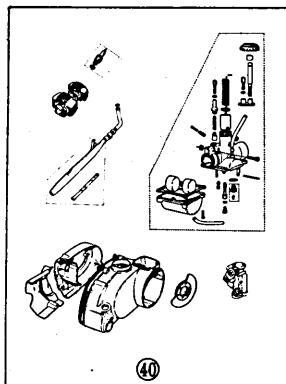


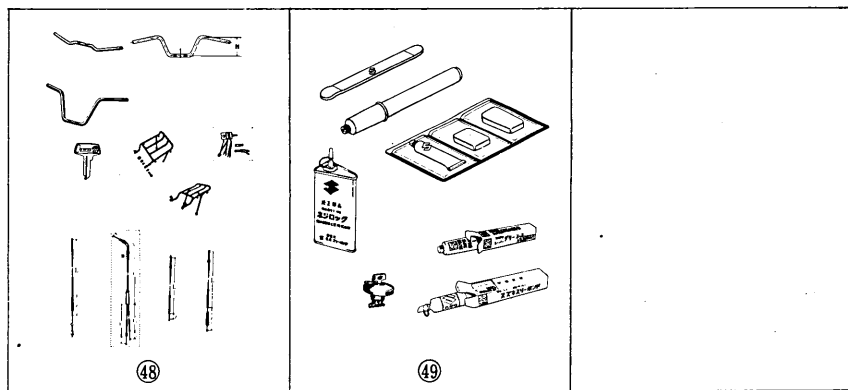

SUZUKI A100

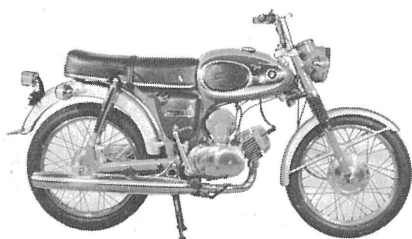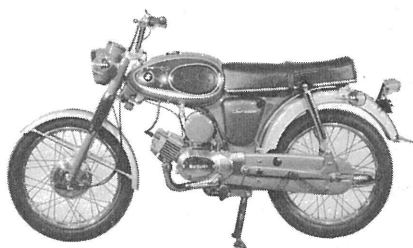


Cylinder - Crankcase

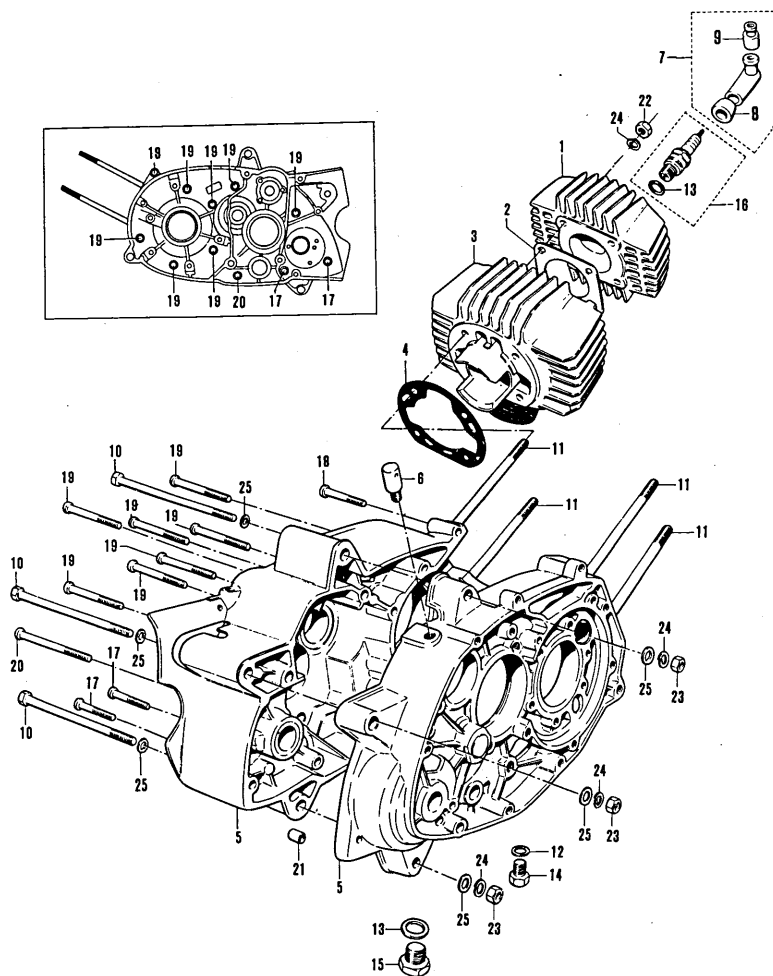

Cylinder - Crankcase

Ref.No.	Part No.	Description	Q'ty				Remarks
			A100	AS100	A100-1	AS5100	
1	11111-12000	Cylinder Head	1	1	1		
2	11141-12000	Cylinder Head Gasket	1	1			
3	11210-12001	Cylinder	1	1	1	1	
4	11241-12000	Cylinder Gasket	1	1	1	1	
5	11301-12802	Crankcase Ass'y	1	1	1	1	Inc.Nos.17 21&09319-15002
6	24821-09000	Breather Plug	1	1	1	1	
7	33501-10801	Plug Cap Ass'y	1	1	1	1	
8	33541-11000	Spark Plug Cap Seal	1	1	1	1	
9	33542-51000	High Tension Cord Seal	1	1	1	1	
10	09100-08024	Engine Mounting Bolt	3	3	3	3	8screw.L.=105(4.13)
11	09108-08006	Cylinder Stud Bolt	4	4	4	4	
12	09168-10002	Crank Drain Plug Gasket	1	1	1	1	
13	09168-14002	Spark Plug Gasket	2	2	2	2	
14	09247-10001	Crank Drain Plug	1	1	1	1	
15	09247-14001	Drain Plug	1	1	1	1	
16	09482-00003	Spark Plug Ass'y	1	1	1		NGK B-77HC
17	02112-06358	Strong Cross Head Screw	2	2	2	2	
18	02112-06408	Strong Cross Head Screw	1	1	1	1	
19	02112-06458	Strong Cross Head Screw	7	7	7	7	
20	02112-06608	Strong Cross Head Screw	1	1	1	1	
21	04211-09129	Dowel Pin	2	2	2	2	
22	08311-11088	Hexagon Nut	4	4	4	4	
23	08312-11088	Small Hexagon Nut	3	3	3	3	
24	08321-21088	Lock Washer	7	7	7	7	
25	08322-21088	Flat Washer	6	6	6	6	


Piston - Crankshaft - Valve

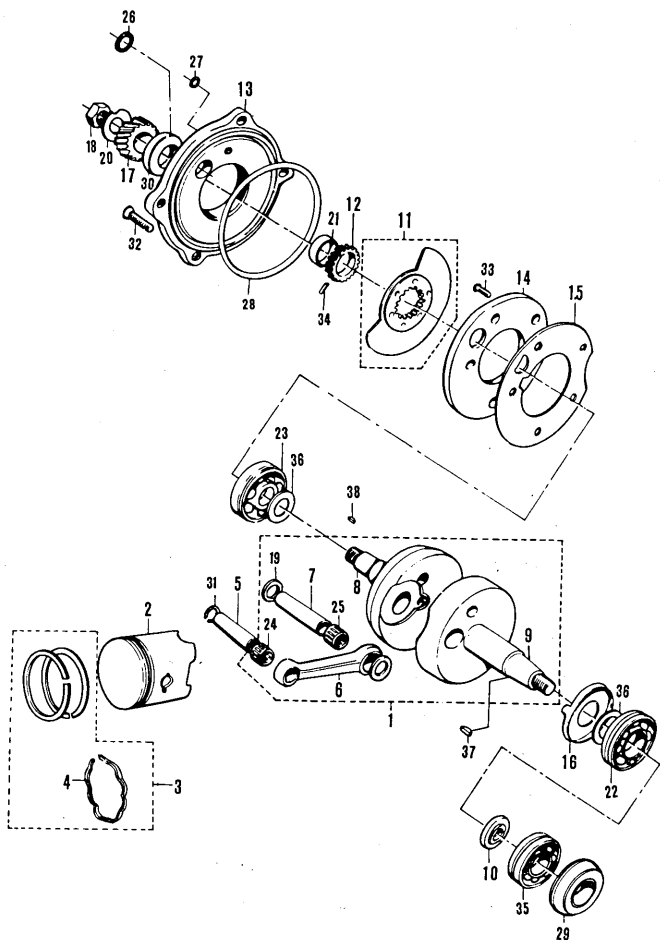

Piston - Crankshaft - Valve

Ref.No.	Part No.	Description	Q'ty				Remarks
			A100	A5100	AUX-1	A55100	
1	12000-12801	Crankshaft Ass'y	1	1	1	1	
2-1	12110-12000	Piston	1	1	1	1	STD
2-2	12110-12700	Piston	1	1	1	1	OS.0.5(0.02)
2-3	12110-12710	Piston	1	1	1	1	OS.1.0(0.04)
3-1	12140-12818	Piston Ring Set	1	1	1	1	STD
3-2	12140-12819	Piston Ring Set	1	1	1	1	OS.0.5(0.02)
3-3	12140-12820	Piston Ring Set	1	1	1	1	OS.1.0(0.04)
4	12149-12010	Piston Expander Ring	1	1	1	1	
5	12151-12000	Piston Pin	1	1	1	1	10.5X14X38.5(0.39X0.55X1.51)
6	12161-12000	Connecting Rod	1	1	1	1	
7	12211-03300	Crank Pin	1	1	1	1	
8	12220-12000	RH Crankshaft	1	1	1	1	
9	12260-12000	LH Crankshaft	1	1	1	1	
10	12353-12001	LH Crankshaft Spacer	1	1	1	1	21X47X7(0.81X1.85X0.27)
11	12410-12000	Valve Plate	1	1	1	1	
12	12421-05001	Valve Guide	1	1	1	1	
13	12450-12000	Outer Valve Seat	1	1	1	1	
14	12460-12000	Inner Disk Valve Seat	1	1	1	1	
15	12471-12000	Inner Valve Seat Gasket	1	1	1	1	
16	12511-03100	Oil Guide Plate	1	1	1	1	
17	21111-07000	Primary Drive Gear	1	1	1	1	N.T.=16
18	09140-14002	Primary Drive Gear Nut	1	1	1	1	
19	09160-19001	Connecting Rod Thrust Washer	2	2	2	2	19X32X1(0.74X1.25X0.04)
20	09166-14004	Primary Drive Gear Washer	1	1	1	1	
21	09180-20006	Primary Drive Gear Spacer	1	1	1	1	20X25X10(0.78X0.98X0.39)
22	09262-200030	LH Crankshaft Inner Bearing	1	1	1	1	20X52X15(0.78X2.05X0.59)
23	09262-20015	RH Crankshaft Bearing	1	1	1	1	20X52X15(0.78X2.05X0.59)
24	09263-14001	Piston Pin Bearing	1	1	1	1	


Piston - Crankshaft - Valve

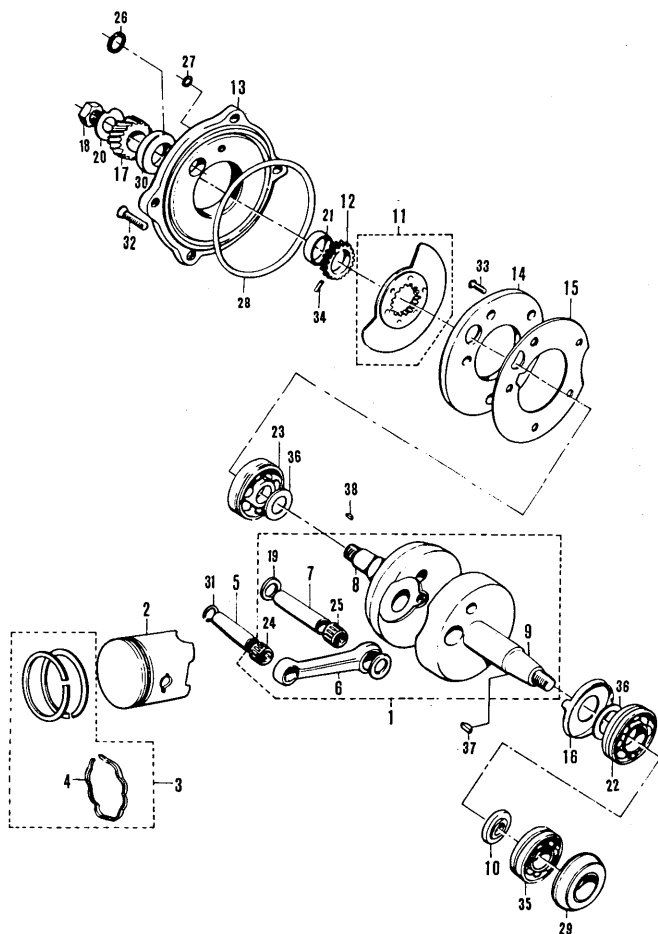

Piston - Crankshaft - Valve

Ref.No.	Part No.	Description	Q'ty				Remarks
			A100	AS100	A100-2	AS5100	
25	09263-19001	Crank Pin Bearing	1	1	1	1	19X25X16(0.74X0.98X0.62)
26	09280-22002	Valve Seat Outer O Ring	1	1	1	1	I.D.=22.5(0.87),d.=1.5(0.06)
27	09280-10002	Check Valve O Ring	1	1	1	1	I.D.=10(0.39),d.=1.5(0.06)
28	09280-99001	Valve Seat Inner O Ring	1	1	1	1	I.D.=99(3.89),d.=2(0.08)
29	09283-20011	LH Crankshaft Oil Seal	1	1	1	1	20X37X7(0.98X1.46X0.27)
30	09283-25009	RH Crankshaft Oil Seal	1	1	1	1	25X44X7(0.98X1.73X0.27)
31	09381-14001	Piston Pin Circlip	2	2	2	2	
32	02121-06168	Cross Head Screw	6	6	6	6	
33	02121-06208	Cross Head Screw	5	5	5	5	
34	04221-03059	Roller	1	1	1	1	
35	08113-62040	Ball Bearing	1	1	1	1	
36	08221-20285	Thrust Washer	2	2	2	2	
37	08341-31039	Key	1	1	1	1	
38	08341-31049	Key	1	1	1	1	

Crankcase RH Cover - Crankcase LH Cover

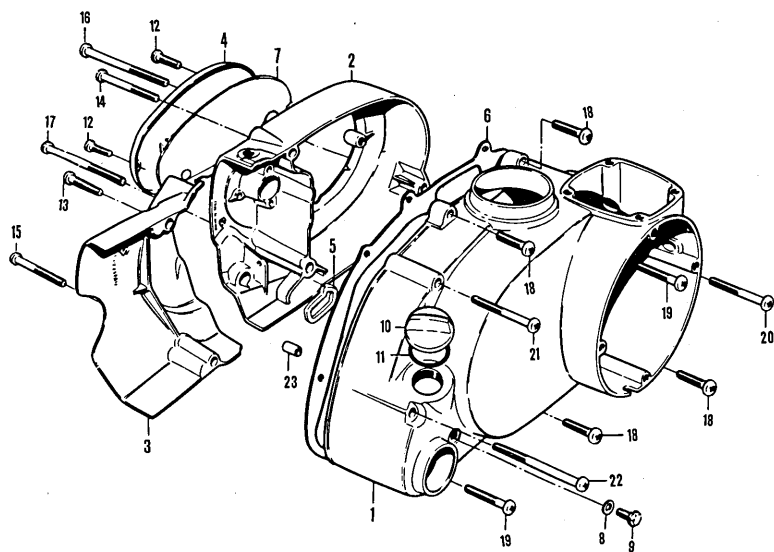


Crankcase RH Cover - Crankcase LH Cover


Ref.No.	Part No.	Description	Q'ty				Remarks
			A10	AS10	A10-2	AS510	
1	11341-12603	Crankcase RH Cover	1	1			
2	11351-12602	Crankcase LH Cover	1	1			
3	11361-12601	Engine Sprocket Cover	1	1			
4	11381-12001	Dynamo Inspection Cap	1	1	1	1	
5	11393-12000	Crankcase LH Cover	1	1	1	1	
		Rubber Seal					
6	11482-12000	Crankcase RH Cover Gasket	1	1	1	1	
7	11491-12000	Dynamo Inspection Cap	1	1	1	1	
		Gasket					
8	09168-06001	Oil Level Screw Gasket	1	1	1	1	6.2X11X1(0.24X0.43X0.04)
9	09247-06001	Oil Level Screw	1	1	1	1	
10	09259-20003	Oil Plug	1	1	1	1	
11	09280-22001	Oil Plug O Ring	1	1	1	1	I.D.=21.8(0.84), d.=2.4(0.09)
12-1	*02111-05088	Cross Head Screw	2	2	2	2	
12-2	02111-05081	Cross Head Screw	2	2			
13	02111-06308	Cross Head Screw	1	1	1	1	
14	02111-06408	Cross Head Screw	1	1	1	1	
15	02111-06458	Cross Head Screw	1	1	1	1	
16	02111-06508	Cross Head Screw	1	1	1	1	
17	02111-06658	Cross Head Screw	1	1	1	1	
18	02112-06258	Strong Cross Head Screw	4	4	4	4	
19	02112-06358	Strong Cross Head Screw	2	2	2	2	
20	02112--6458	Strong Cross Head Screw	1	1	1	1	
21	02112-06508	Strong Cross Head Screw	1	1	1	1	
22	02112-06708	Strong Cross Head Screw	1	1	1	1	
23	04211-09129	Dowel Pin	3	3	3	3	

Note:Asterisk(*) indicates Parts with ISO thread changed in its Pitch by adopting ISO standard.

Air Cleaner

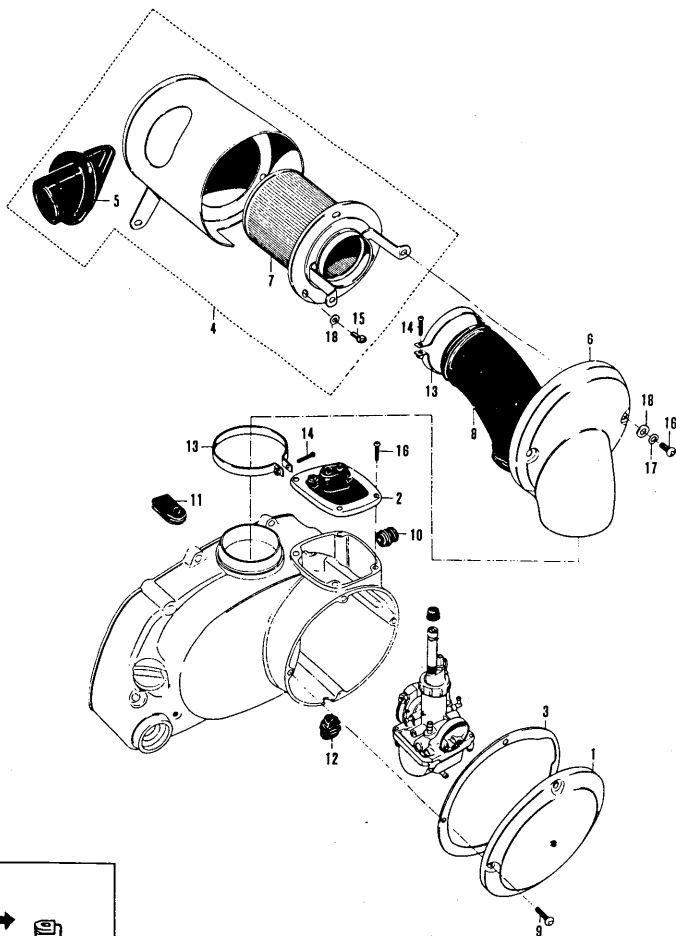

Ref No. 12




Air Cleaner


Ref.No.	Part No.	Description	Q'ty				Remarks
			A100	AS100	A100-2	AS5100	
1	11383-12000	Carburetor Cover	1	1	1	1	
2	11440-12001	Carburetor Top Cover Comp.	1	1	1	1	
3	11492-12002	Carburetor Cover Gasket	1	1	1	1	
4-1	13700-12021-002	Air Cleaner Ass'y	1	1			
4-2	13700-12021-019	Air Cleaner Ass'y	1	1			
4-3	13700-12021-061	Air Cleaner Ass'y	1	1			
4-4	13700-12021-075	Air Cleaner Ass'y	1	1			
4-5	13700-12021-676	Air Cleaner Ass'y			1	1	
4-6	13700-12021-678	Air Cleaner Ass'y			1	1	
4-7	13700-12021-681	Air Cleaner Ass'y			1	1	
5	13721-12020	Air Cleaner Inlet Pipe	1	1	1	1	
6-1	13771-12000-019	Air Cleaner RH Cap	1	1			
6-2	13771-12000-061	Air Cleaner Rh Cap	1	1			
6-3	13771-12000-075	Air Cleaner RH Cap	1	1			
6-4	13771-12000-002	Air Cleaner RH Cap	1	1			
6-5	13771-12000-126	Air Cleaner RH Cap			1	1	
7	13780-12021	Air Cleaner Element	1	1	1	1	
8	13881-12000	Air Cleaner Tube	1	1	1	1	
9-1*	09125-05102	Carburetor Cover Screw	4	4	4	4	5screw, L.=14(0.55)
9-2	09125-05002	Carburetor Cover Screw	4	4			5screw, L.=14(0.55)
10	09250-14002	Carburetor Set Plug	1	1	1	1	
11	09309-04001	Air Vent Pipe Grommet	1	1	1	1	
12-1	09309-04004	Overflow Pipe Grommet	1	1	1	1	
12-2	09309-04002	Overflow Pipe Grommet	1	1	1	1	
13	09402-00133	Air Cleaner Tube Clamp	2	2	2	2	
14-1*	02111-04208	Cross Head Screw	2	2	2	2	
14-2	02111-04201	Cross Head Scrww	2	2			

Note; Asterisk (*) indicates Parts with ISO thread changed in its Pitch by adopting ISO standard.

Air Cleaner

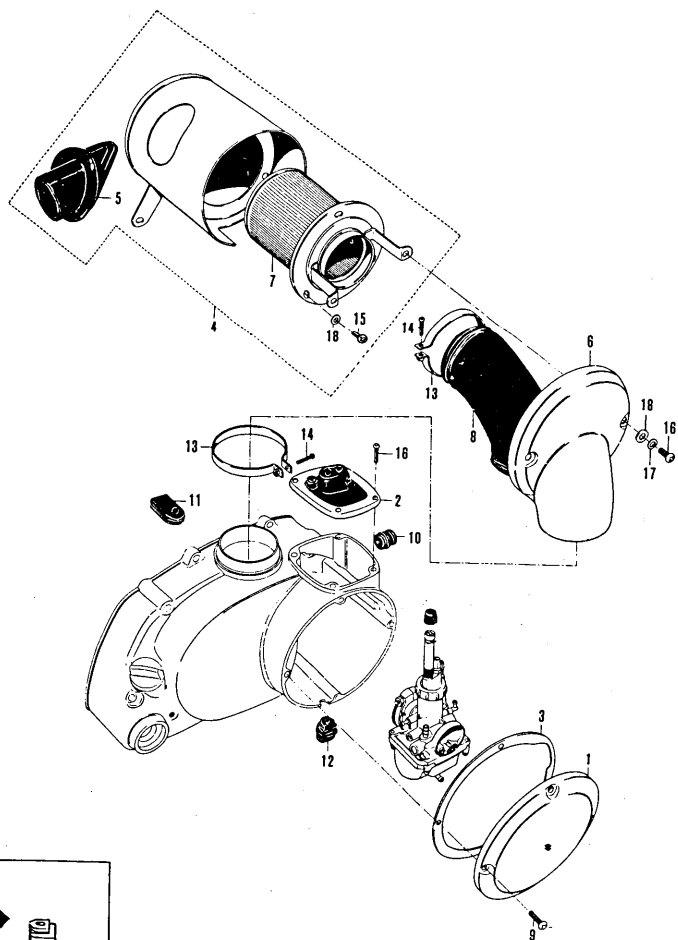

Ref No. 12




Air Cleaner

Ref.No.	Part No.	Description	Q'ty				Remarks
			A100	AS100	A100-2	AS100	
15-1	* 02111-05128	Cross Head Screw	3	3	3	3	
15-2	02111-05121	Cross Head Screw	3	3			
16-1	* 02111-05168	Cross Head Screw	6	6	6	6	
16-2	02111-05161	Cross Head Screw	6	6			
17	08321-21058	Lock Washer	2	2	2	2	
18	08322-21058	Flat Washer	5	5	5	5	

Note; Asterisk (*) indicates Parts with ISO thread changed in its Pitch by adopting ISO standard.


Carburetor

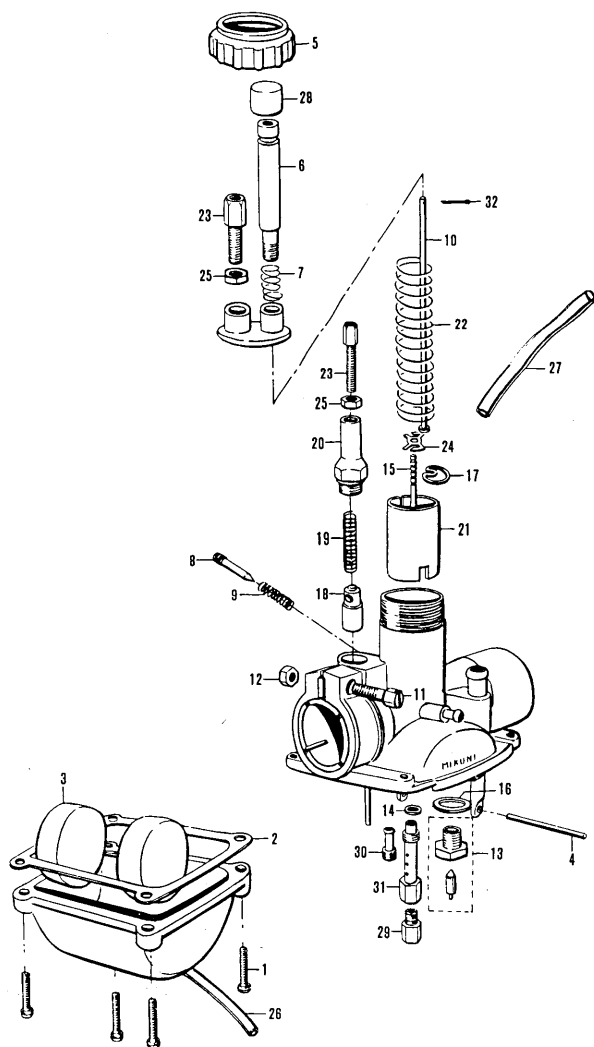

Carburetor

Ref.No.	Part No.	Description	Q'ty				Remarks
			A100	AS100	A100-2	ASS100	
	13200-12600	Carburetor Ass'y	1	1	1		
1	13248-02010	Float Chamber Screw	4	4	4	4	
2	13251-09211	Float Chamber Gasket	1	1	1	1	
3	13252-09210	Float Comp.	1	1	1	1	
4	13254-01010	Float Pin	1	1	1	1	
5	13265-08210	Mixing Chamber Cap	1	1	1	1	
6	13267-05010	Throttle Valve Stop Screw	1	1	1	1	
7	13268-05010	Throttle Valve Stop Screw	1	1	1	1	
8	13269-01010	Spring Pilot Air Adjusting Screw	1	1	1	1	
9	13271-01010	Spring Pilot Air Adjusting Screw	1	1	1	1	
10	13296-11010	Throttle Valve Stop Rod	1	1	1	1	
11	13323-03010	Carburetor Clip Bolt	1	1	1	1	
12	13324-03010	Carburetor Clip Nut	1	1	1	1	
13	13370-09211	Needle Valve Ass'y	1	1	1		
14	13382-03110	Needle Jet Stop Washer	1	1	1	1	5.4x10x1.6(0.21x0.39x0.06)
15	13383-12011	Jet Needle	1	1	1		
16	13392-01010	Valve Seat Gasket	1	1	1	1	
17	13394-12110	Needle Clip	1	1	1	1	
18	13411-01010	Starter Plunger Comp.	1	1	1	1	
19	13417-01010	Plunger Spring	1	1	1	1	
20	13418-07010	Plunger Cap	1	1	1	1	


Carburetor

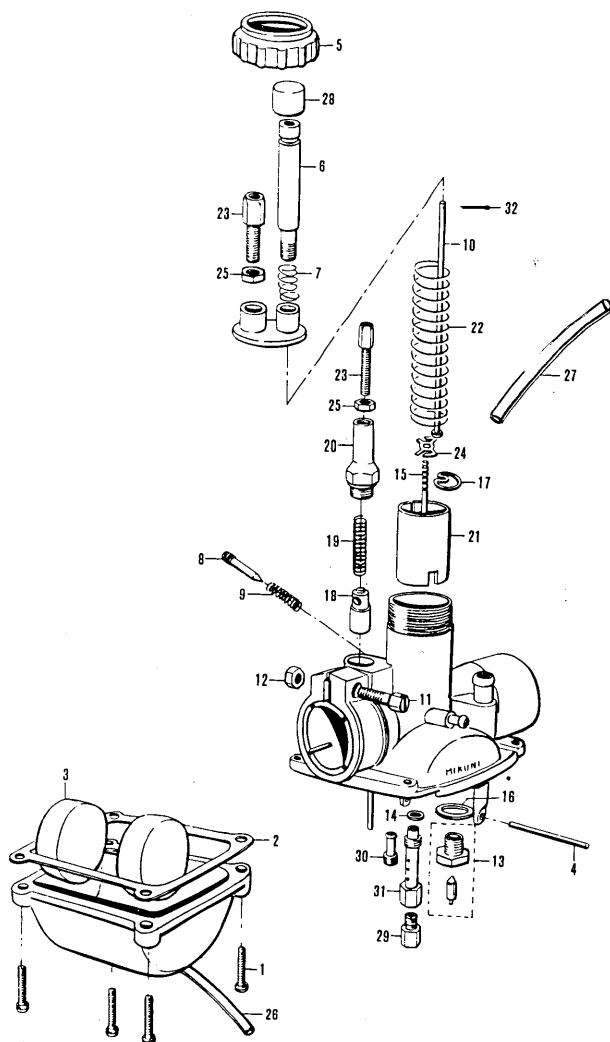

Carburetor

Ref.No.	Part No.	Description	Q'ty				Remarks
			A100	AS100	A100-2	AS5100	
21	13551-12110	Throttle Valve	1	1	1		
22	13573-09210	Throttle Valve Spring	1	1	1	1	16.4X18X72(0.64X0.70X2.83)
23	13577-03010	Cable Adjuster	2	2	2	2	
24	13581-09210	Spring Seat	1	1	1	1	
25	13661-03010	Cable Adjuster Lock Nut	2	2	2	2	
26	13684-12110	Overflow Vinyl Pipe	1	1	1	1	
27	13686-12110	Air Vent Vinyl Pipe	2	2	2	2	
28	13688-08010	Cap	1	1	1	1	
29-1	09491-80001	Main Jet	1	1	1		#80 STD
29-2	09491-70001	Main Jet	1	1	1		#70 OPT
29-3	09491-75001	Main Jet	1	1	1		#75 OPT
29-4	09491-85001	Main Jet	1	1	1		#85 OPT
29-5	09491-90001	Main Jet	1	1	1		#90 OPT
30	09492-40002	Pilot Jet	1	1	1		#40
31	09494-00029	Needle Jet	1	1	1		
32	04111-12088	Cotter Pin	1	1	1	1	

Exhaust Pipe - Muffler

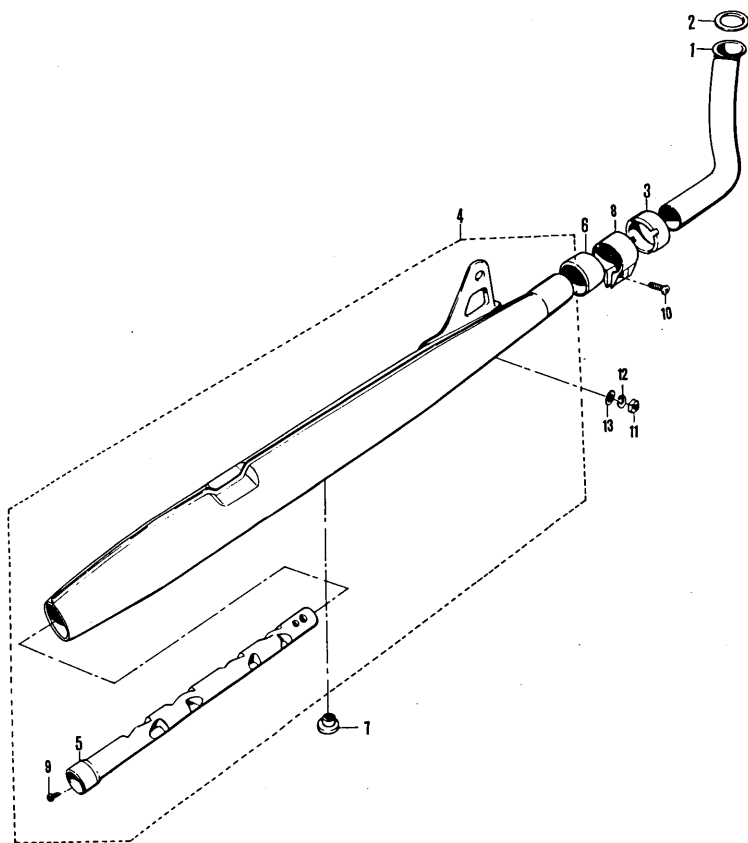


Exhaust Pipe - Muffler

Ref.No.	Part No.	Description	Q'ty				Remarks
			A100	A5100	A100-2	A55100	
1	14151-12000	Exhaust Pipe	1				
2	14181-12000	Exhaust Pipe Gasket	1	1	1	1	34.5X43.5X5(1.33X1.69X0.20)
3	14182-12600	Exhaust Pipe Joint Clamp	1		1	1	
4	14301-12002	Muffler Ass'y	1				
5	14510-12002	Baffle Pipe	1		1	1	
6	14771-12011	Muffler Connector	1		1	1	
7	09321-10002	Center Stand Buffer	1	1	1	1	
8	09402-00080	Muffler Connector Stopper	1		1	1	
9-1	★02111-05058	Cross Head Screw	1	1	1	1	
9-2	02111-05051	Cross Head Screw	1	1			
10	02111-06258	Cross Head Screw	1		1	1	
11	08321-11088	Small Hexagon Nut	2		2	2	
12	08321-21088	Lock Washer	2		2	2	
13	08322-21088	Small Flat Washer	2		2	2	

Note:Asterisk(★) indicates Parts with ISO thread changed in its Pitch by adopting ISO standard.

Oil Pump

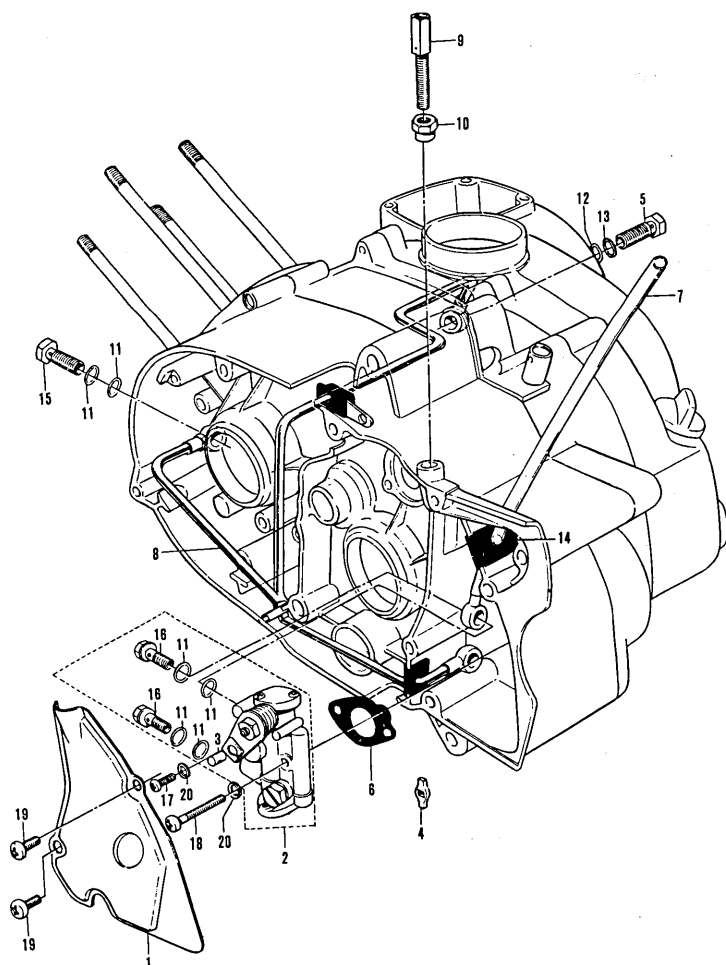


Oil Pump

Ref.No.	Part No.	Description	Q'ty				Remarks
			A100	AS100	A100-2	AS100	
1	11385-12000	Oil Pump Cover	1	1	1	1	
2	16003-12810	Oil Pump Ass'y	1	1	1		
3	16292-03110	Oil Pump Cable Terminal	1	1	1	1	
4	16391-05030	Oil Pump Driving Piece	1	1	1	1	
5	16710-11011	Inlet Check Valve	1	1	1	1	
6	16731-03100	Oil Pump Gasket	1	1	1	1	
7	16810-12630	Oil Pump Inlet Pipe	1	1	1	1	
8	16820-12032	Oil Pump Outlet Pipe	1	1	1	1	
9	09119-08003	Throttle Cable Adjuster	1	1	1	1	
10	09159-08003	Throttle Cable Adjuster	1	1	1	1	
		Lock Nut					
11	09168-06002	Union Bolt Gasket	6	6	6	6	6.2X12X1.5(0.24X0.47X0.06)
12	09168-10005	Check Valve Gasket	2	2	2	2	10X16X3(0.39X0.62X0.12)
13	09280-08003	Inlet Check Valve O Ring	1	1	1	1	I.D.=7.6(0.29),d.=1.3(0.05)
14	09309-08002	Oil Inlet Pipe Grommet	1	1	1	1	
15	09360-06003	Union Bolt	1	1	1	1	
16	09360-06005	Oil Pump Union Bolt	2	2	2	2	
17-1	*02111-05168	Cross Head Screw	1	1	1	1	
17-2	02111-05161	Cross Head Screw	1	1			
18-1	*02111-05308	Cross Head Screw	1	1	1	1	
18-2	02111-05301	Cross Head Screw	1	1			
19	02111-06108	Cross Head Screw	2	2	2	2	
20	08321-21058	Lock Washer	2	2	2	2	

Note:Asterisk (*) indicates Parts with ISO thread changed in its Pitch by adopting ISO standard.

Clutch

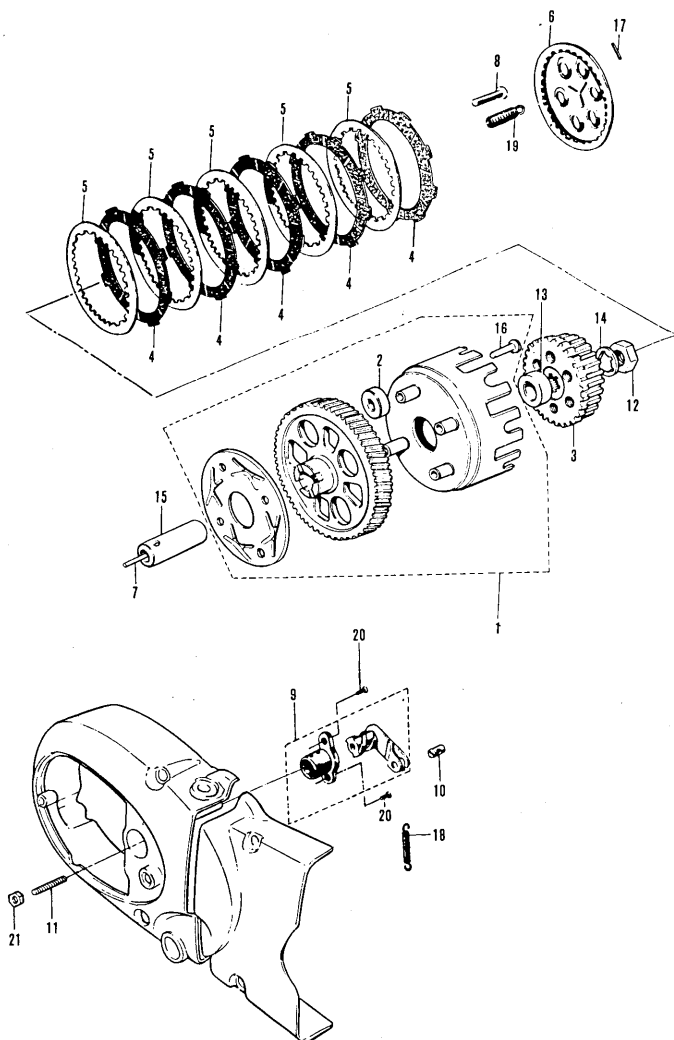


Clutch

Ref.No.	Part No.	Description	Q'ty				Remarks
			A100	AS100	A100-2	AS100	
1	21200-12000	Primary Driven Gear	1	1	1	1	
2	21231-07040	Primary Driven Gear Damper	4	4	4	4	
3	21411-12000	Clutch Sleeve Hub	1	1	1	1	
4	21441-12000	Clutch Drive Plate	5	5	5	5	
5	21451-03000	Clutch Driven Plate	5	5	5	5	
6	21460-03001	Clutch Pressure Plate	1	1	1	1	
7	23111-12000	Clutch Push Rod	2	2	2	2	
8	23121-09210	Clutch Release Rod	1	1	1	1	
9	23200-05030	Clutch Release Screw Ass'y	1	1	1	1	
10	23222-07000	Clutch Release Arm hook	1	1	1	1	
11	09134-06001	Clutch Adjusting Screw	1	1	1	1	
12	09140-16001	Clutch Sleeve Hub Nut	1	1	1	1	
13-1	09160-17003	Primary Driven Gear Spacer	1	1	1	1	17x29x1.5(0.67x1.14x0.06)
13-2	09180-17012	Primary Driven Gear Spacer	1	1			17x32x7(0.67x1.26x0.27)
14	09167-17002	Clutch Sleeve Hub Washer	1	1	1	1	14x33x0.8(0.55x1.29x0.03)
15	09180-17011	Clutch Sleeve Hub Spacer	1	1	1	1	17x21x52(0.67x0.82x2.05)
16	09221-05003	Gear Damper Rivet	4	4	4	4	
17	09261-02001	Clutch Spring Pin	6	6	6	6	O.D.=2.5(0.10), L.=19.8(0.79)
18	09443-08001	Clutch Release Return Spring	1	1	1	1	
19	09443-12003	Clutch Spring	6	6	6	6	
20-1	*02121-05128	Cross Head Screw	2	2	2	2	
20-2	02121-05121	Cross Head Screw	2	2			
21	08311-31068	Hexagon Nut	1	1	1	1	

Note: Asterisk (*) indicates Parts with ISO thread changed in its Pitch by adopting ISO standard.


Transmission - Drive Chain

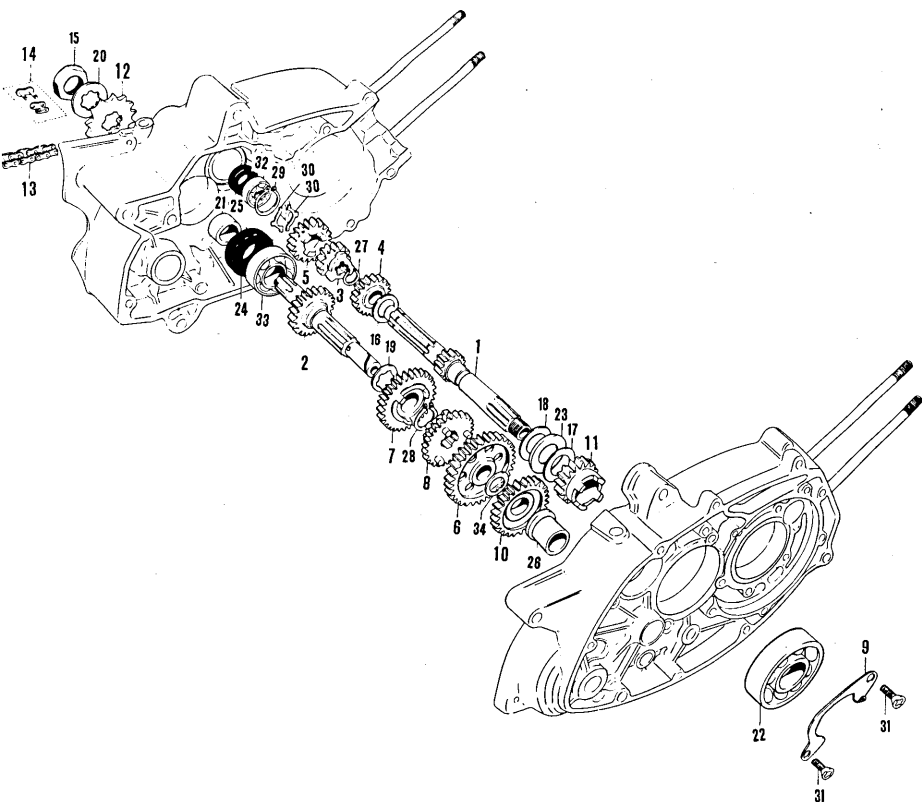

Transmission - Drive Chain

Ref.No.	Part No.	Description	Q'ty				Remarks
			A100	A5100	A100-2	A55100	
1	24121-12000	Counter Shaft	1	1	1	1	N.T.=11
2	24131-07000	Drive Shaft	1	1	1	1	N.T.=22
3	24221-07000	2nd Drive Gear	1	1	1	1	N.T.=15
4	24231-07000	3rd Drive Gear	1	1	1	1	N.T.=18
5	24241-07000	4th Drive Gear	1	1	1	1	N.T.=20
6	24310-07600	1st Driven Gear	1	1	1	1	N.T.=32
7	24321-07000	2nd Driven Gear	1	1	1	1	N.T.=28
8	24331-07000	3rd Driven Gear	1	1	1	1	N.T.=25
9	24741-12000	Countershaft Bearing Plate	1	1			
10	26260-12000	Kick Starter Idle Gear	1	1	1	1	N.T.=26
11	26280-03002	Kick Starter Gear	1	1	1	1	N.T.=17
12	27511-08710	Engine Sprocket	1	1	1	1	N.T.=13
13	27600-07610	Drive Chain Ass'y	1	1			#428X102L
14	27620-08011	Chain Joint Ass'y	1	1	1	1	#428
15	09140-20001	Engine Sprocket Nut	1	1	1	1	
16	09160-17002	3rd Drive Gear Thrust Washer	1	1	1	1	17X23X1(0.66X0.90X0.04)
17	09160-20005	Kick Starter Gear Thrust Washer	1	1	1	1	20X30X1(0.78X1.18X0.03)
18	09160-20007	Thrust Bearing Spacer	1	1	1	1	20X34.5X0.8(0.78X1.35X0.03)
19	09160-20009	2nd Driven Gear Thrust Washer	1	1	1	1	29X27X0.2(0.78X1.06X0.01)
20	09167-20006	Engine Sprocket Washer	1	1	1	1	13X33X0.8(0.51X1.25X0.03)
21	09180-20016	Engine Sprocket Spacer	1	1	1	1	20X25X15.5(0.78X0.98X0.61)
22	09262-30002	Countershaft RH Bearing	1	1	1	1	30X62X10(1.18X2.44X0.39)
23	09263-20002	Kick Starter Gear Thrust Bearing	1	1	1	1	
24	09283-25003	Drive Shaft Oil Seal	1	1	1	1	25X40X9(0.98X1.57X0.35)
25	09285-05004	Push Rod Oil Seal	1	1	1	1	4.2X16X8(0.17X0.62X0.32)


Transmission - Drive Chain

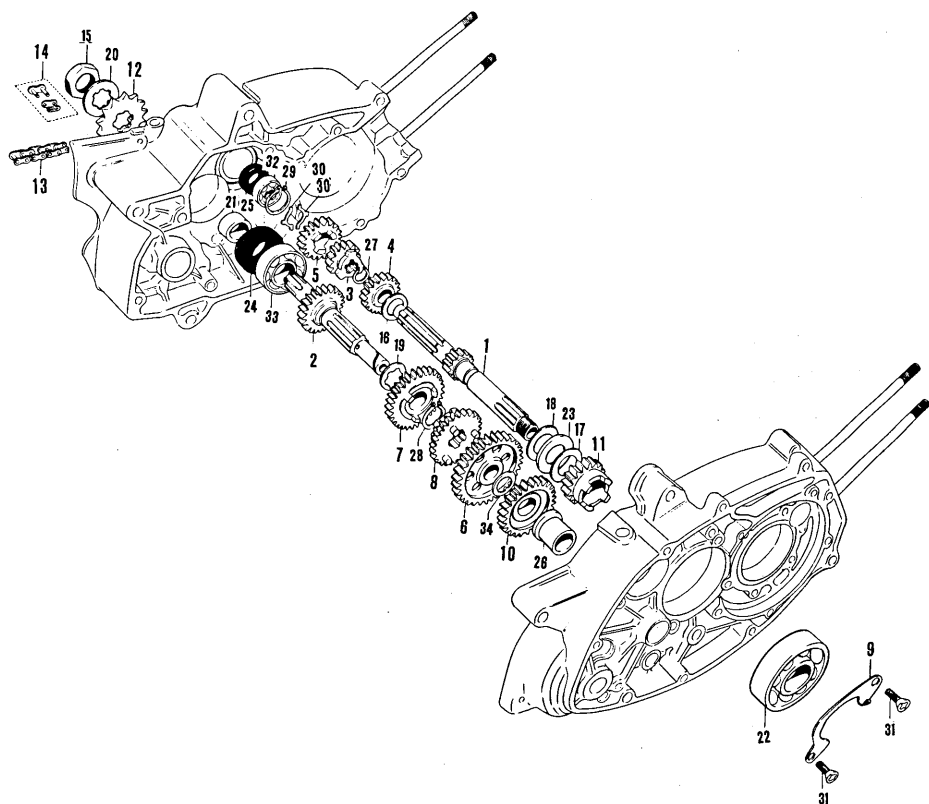

Transmission - Drive Chain

Ref.No.	Part No.	Description	Q'ty				Remarks
			A100	AS100	A100-2	ASS100	
26	09319-15002	Drive Shaft Bushing	1	1	1	1	
27	09380-17001	3rd Drive Gear Circlip	1	1	1	1	
28	09380-20003	2nd Driven Gear Circlip	1	1	1	1	
29	09380-26001	4th Drive Gear	1	1	1	1	
30	09399-14001	4th Drive Gear Knock Ring	2	2	2	2	
31	02121-06108	Cross Head Screw	2	2	2	2	
32	08113-60010	Ball Bearing	1	1	1	1	
33	08113-62040	Ball Bearing	1	1	1	1	
34	08211-15241	Thrust Washer	1	1	1	1	


Gear Shifting - Neutral Switch

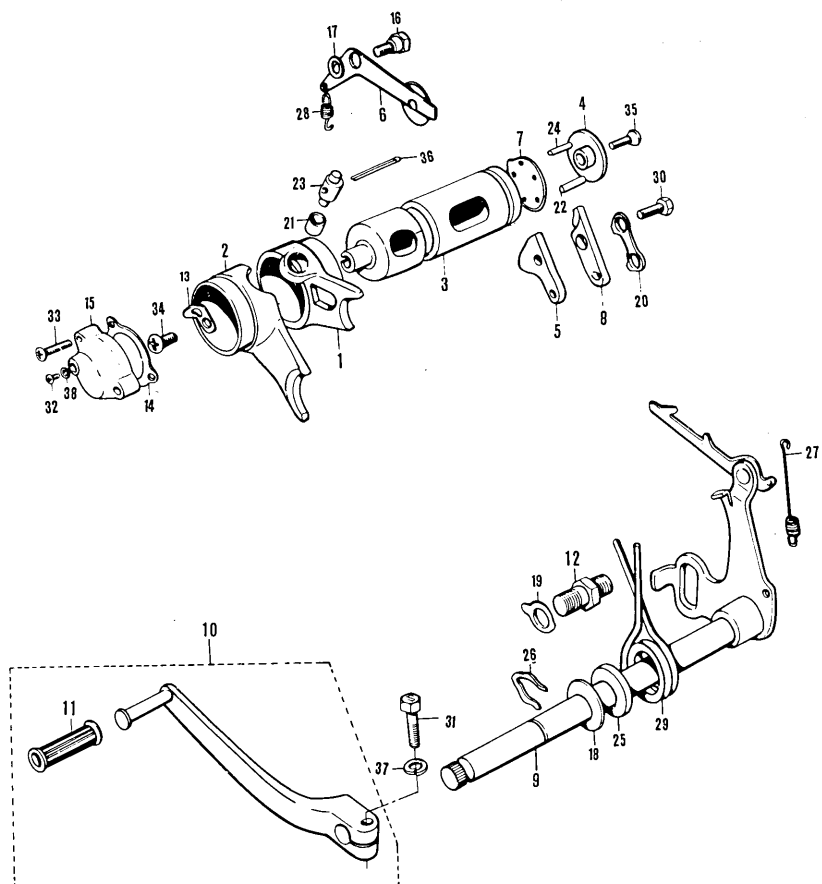

Gear Shifting - Neutral Switch

Ref.No.	Part No.	Description	Q'ty				Remarks
			A100	AS100	A100-2	AS5100	
1	25211-07000	Low Speed Gear Shifting Fork	1	1			
2	25221-03600	High Speed Gear Shifting Fork	1	1			
3	25311-07600	Gear Shifting Cam	1	1			
4	25322-03000	Shifting Cam Pin Retainer	1	1			
5	25341-03000	Shifting Cam Guide	1	1			
6	25350-12000	Shifting Cam Stopper	1	1			
7	25361-07600	Shifting Cam Side Plate	1	1			
8	25362-07600	Shifting Cam Stopper Plate	1	1			
9	25510-12001	Shifting Shaft Comp.	1	1			
10	25600-01602	Shifting Lever Ass'y	1	1			
11	25652-03201	Shifting Lever Rubber	1	1	1	1	
12	25671-19000	Shifting Arm Stopper	1	1	1	1	
13	37711-05100	Neutral Indicator Switch Contact	1	1	1	1	
14	37712-01000	Neutral Switch Gasket	1	1	1	1	
15	37721-05100	Neutral Indicator Switch	1	1	1	1	
16	09111-06003	Shifting Cam Stopper Bolt	1	1	1	1	
17	09160-06008	Shifting Cam Stopper Washer	1	1			6.5X13X1(0.25X0.51X0.04)
18	09160-12020	Shifting Shaft Thrust Washer	1	1	1	1	12.5X25X1.5(0.50X0.90X0.06)
19	09167-10001	Shifting Arm Stopper Washer	1	1	1	1	10X14X1.2(0.39X0.55X0.05)
20	09169-06003	Shifting Cam Guide Washer	1	1			
21	09180-06004	Shifting Guide Roller	2	2	2	2	5x9.8x6(0.20X0.38X0.24)
22	09201-04002	Shifting Cam Pin	1	1			
23	09209-10003	Shifting Fork Guide	2	2	2	2	
24	09261-04003	Shifting Cam Pin	4	4	3	3	O.D.=4(0.15),L.=20(0.78)
25	09285-12001	Shifting Shaft Oil Seal	1	1	1	1	12X22X7(0.47X0.86X0.27)

Gear Shifting - Neutral Switch

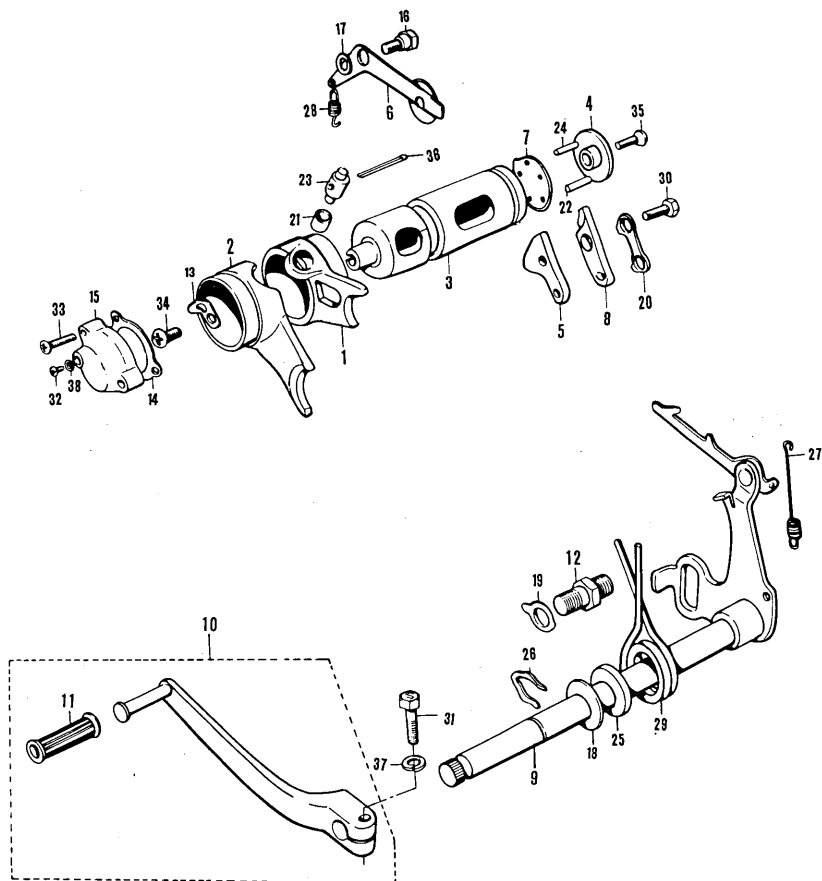


Gear Shifting - Neutral Switch

Ref.No.	Part No.	Description	Q'ty				Remarks
			A100	AS100	A100-2	AS100	
26	09384-12001	Shifting Shaft Circlip	1	1	1	1	
27	09443-06008	Shifting Pawl Return Spring	1	1	1	1	
28	09443-07003	Shifting Cam Stopper Spring	1	1	1	1	
29	09444-26006	Shifting Arm Return Spring	1	1			
30	01111-06208	Hexagon Bolt	2	2			
31	01112-06208	Strong Hexagon Bolt	1	1	1	1	
32-1★	02111-03068	Cross Head Screw	1	1	1	1	
32-2	02111-03061	Cross Head Screw	1	1			
33-1★	02111-04168	Cross Head Screw	3	3	3	3	
33-2	02111-04161	Cross Head Screw	3	3			
34	02121-06128	Cross Head Screw	1	1	1	1	
35	02121-06208	Cross Head Screw	1	1	1	1	
36	04111-25208	Cotter Pin	2	2	2	2	
37	08321-21068	Lock Washer	1	1	1	1	
38	08322-21038	Flat Washer	1	1	1	1	

Note: Asterisk (★) indicates parts with ISO thread changed in its Pitch by adopting ISO standard.



Kick Starter

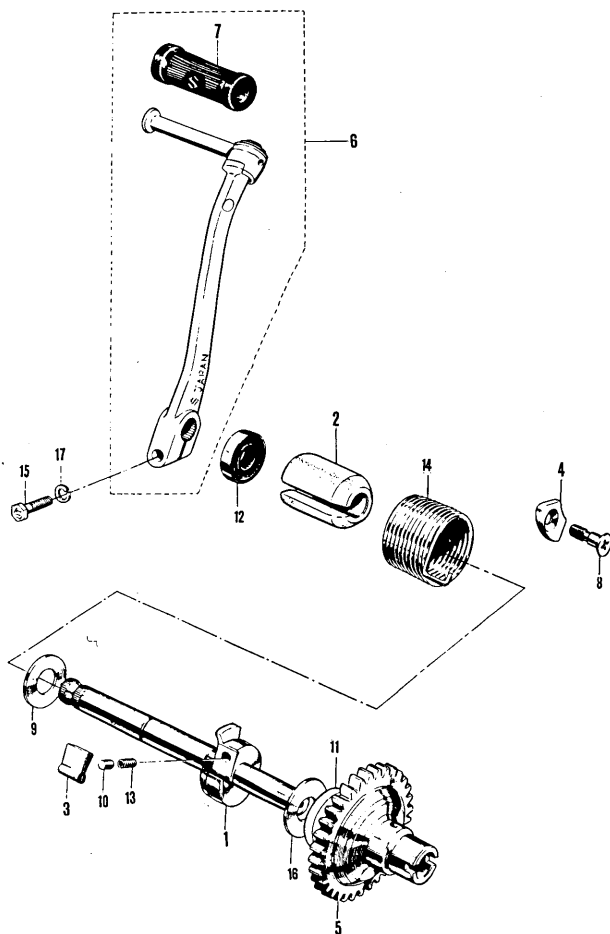

Kick Starter

Ref.No.	Part No.	Description	Q'ty				Remarks
			A100	AS100	A100-2	AS5100	
1	26211-12000	Kick Starter Shaft	1	1	1	1	
2	26221-08030	Kick Shaft Return Spring Guide	1	1	1	1	
3	26231-08001	Kick Starter Pawl	1	1	1	1	
4	26232-01000	Kick Starter Stopper	1	1	1	1	
5	26241-12001	Kick Starter Drive Gear	1	1	1	1	N.T.=32
6	26300-12000	Kick Starter Lever Ass'y	1	1			
7	26352-01000	Kick Starter Pedal Rubber	1	1	1	1	
8	09139-06002	Kick Starter Pawl Screw	1	1	1	1	
9	09160-16003	Kick Shaft Thrust Washer	1	1	1	1	16X30.5X1(0.60X1.20X0.04)
10-1	09209-05011	Kick Starter Pawl Roller	1	1	1	1	L.=15.5(0.61)
10-2	09202-05003	Kick Starter Pawl Roller	1	1	1	1	O.D.=5(0.19),L.=10.5(0.41)
11	09284-12006	Kick Starter Drive Gear Rubber	1	1	1	1	
12	09285-16002	Kick Shaft Oil Seal	1	1	1	1	14.5X30X8(0.57X1.18X0.31)
13-1	09440-04010	Kick Starter Pawl Spring	1	1	1	1	O.D.=4.5(0.18),L.=12.5(0.49)
13-2	09440-04002	Kick Starter Pawl Spring	1	1	1	1	O.D.=4.4(0.17),L.=13(0.51)
14	09448-37005	Kick Shaft Return Spring	1	1	1	1	
15	01122-08258	Strong Small Hexagon Bolt	1	1	1	1	
16	08211-12302	Thrust Washer	1	1	1	1	
17	08321-21088	Lock Washer	1	1	1	1	

Flywheel Magneto

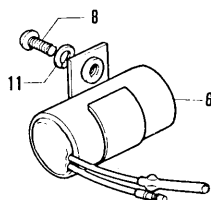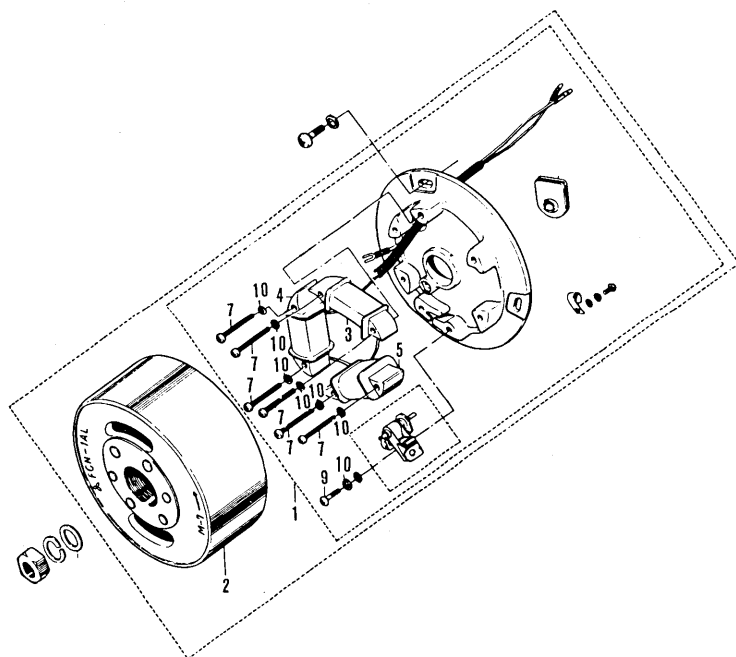


Flywheel Magneto

Ref.No.	Part No.	Description	Q'ty			Remarks
			A100	AS100	A100-2ASS100	
1	32101-12730	Stater Ass'y	1	1		
2	32102-12030	Flywheel Rotor	1	1		
3	32120-12730	Lighting Coil (A)	1	1		
4	32130-12730	Lighting Coil (B)	1	1		
5	32140-12730	Primary Coil	1	1		
6-1	32341-12730	Condenser	1	1		
6-2	32341-12031	Condenser	1	1		~A100-20787 Built in Stater
7-1	*32351-12031	Magneto Coil Fitting Screw	6	6		
7-2	32351-12030	Magneto Coil Fitting Screw	6	6		
8	02112-06128	Storing Cross Head Screw	1	1		A100-20788~
9-1	*02311-04128	Slotted Pan Head Screw	1	1		
9-2	02311-04121	Slotted Pan Head Screw	1	1		
10	08321-21048	Lock Washer	7	7		
11	08321-21068	Lock Washer	1	1		A100-20788~

Note: Asterisk (*) indicates Parts with ISO thread changed in its Pitch by adopting ISO standard.

Flywheel Magneto - Ignition Coil


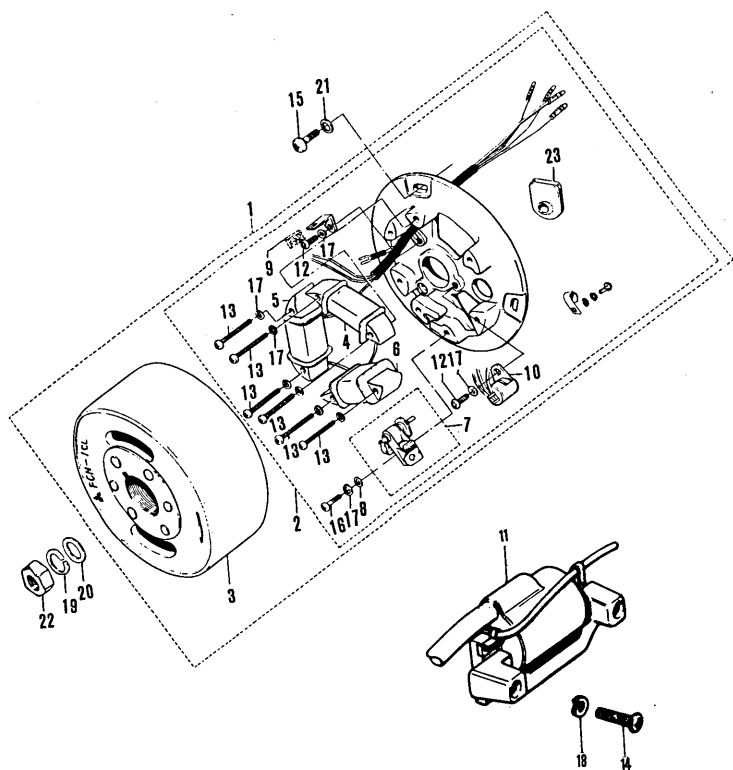


Flywheel Magneto - Ignition Coil

Ref.No.	Part No.	Description	Q'ty				Remarks
			A100	AS100	A100-2	AS5100	
1	32100-12130	Flywheel Magneto Ass'y	1	1	1	1	
2	32101-12130	Stator Ass'y	1	1	1	1	
3	32102-12130	Flywheel Rotor	1	1	1	1	
4	32120-12130	Lighting Coil (A)	1	1	1	1	
5	32130-12130	Lighting Coil (B)	1	1	1	1	
6	32140-12130	Primary Coil	1	1	1	1	
7	32240-12030	Contact Point Ass'y	1	1	1	1	
8	32254-02030	Contact Point Washer	1	1	1	1	4.3X8X0.5(0.17X0.31X0.02)
9	32338-07030	Oil Felt	1	1	1	1	
10	32341-12130	Condenser	1	1	1	1	
11	33410-19020	Ignition Coil	1	1	1	1	
12	02111-04088	Cross Head Screw	6	6	6	6	
13	02111-04258	Cross Head Screw	6	6	6	6	
14-1	★02111-05128	Cross Head Screw	2	2	2	2	
14-2	02111-05121	Cross Head Screw	2	2	2	2	
15	02112-06168	Strong Cross Head Screw	3	3	3	3	
16	02311-04128	Slotted Pan Head Screw	1	1	1	1	
17	08321-21048	Lock Washer	9	9	9	9	
18	08321-21058	Lock Washer	2	2	2	2	
19	08321-21108	Lock Washer	1	1	1	1	
20	08322-11108	Small Flat Washer	1	1	1	1	
21	08322-21068	Flat Washer	3	3	3	3	
22	09140-10003	Magneto Fitting Nut	1	1	1	1	
23	09309-09003	Magneto Wiring Harness Bush	1	1	1	1	

Note: Asterisk (★) indicates Parts with ISO thread changed in its Pitch by adopting ISO standard.

Frame - Dual Seat - Frame Cover - Rear Fender

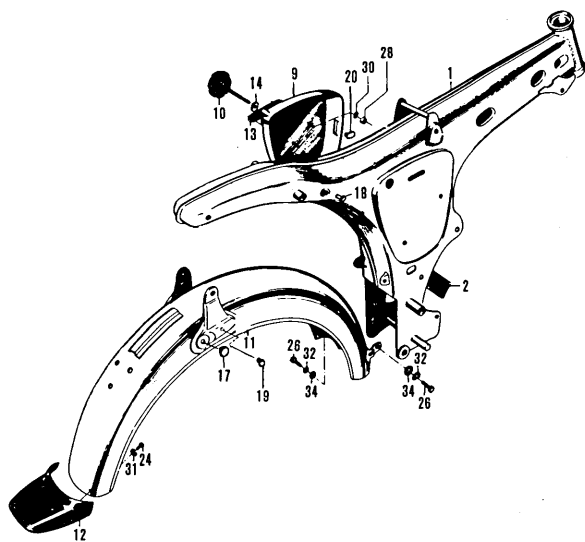
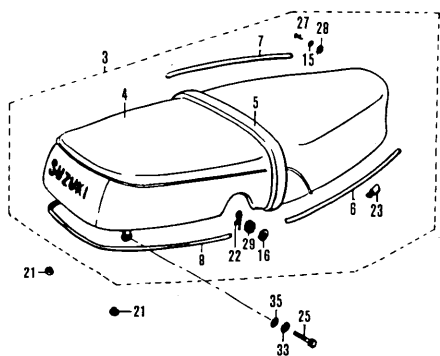


Frame - Dual Seat - Frame Cover - Rear Fender

Ref.No.	Part No.	Description	Q'ty				Remarks
			A100	AS100	A100-2	ASS100	
1-1	41100-05002-002	Frame	1	1			
1-2	41100-05002-019	Frame	1	1			
1-3	41100-05002-061	Frame	1	1			
1-4	41100-05002-075	Frame	1	1			
2	41531-05000	Frame Dust Seal	1	1	1	1	
3	45100-12600	Dual Seat Ass'y	1	1			
4	45160-12600	Dual Seat Leather	1	1			
5	45180-12600	Dual Seat Passenger Strap	1	1			
6	45191-12600	Dual Seat Front RH Rim	1	1			
7	45192-12600	Dual Seat Front LH Rim	1	1			
8	45193-12600	Dual Seat Rear Rim	1	1			
9-1	47210-12700-002	Frame LH Cover	1	1			
9-2	47210-12700-019	Frame LH Cover	1	1			
9-3	47210-12700-061	Frame LH Cover	1	1			
9-4	47210-12700-075	Frame LH Cover	1	1			
10	47230-01000	Frame Cover Knob	1	1			
11	63110-12600-126	Rear Fender	1	1			
12	63310-12701	Rear Fender Extension	1	1			
13	68131-07601	Frame Cover Emblem	1	1			
14	09152-06002	Frame Cover Knob Stopper	1	1			
15	09160-03001	Dual Seat Rim Washer	14	14			3.6X14X0.8(0.14X0.55X0.03)
16	09160-06011	Passenger Strap Fitting Washer	2	2			
17	09250-05001	Rear Fender Plug	4	4			
18	09250-08002	Seat Fitting Hole Plug	2	2			
19	09250-08004	Rear Fender Plug	2	2			
20	09321-05002	Frame Cover Buffer	4	4			
21	09321-10002	Dual Seat Buffer	2	2			
22	09385-06001	Strap Bolt Clip	2	2			

A100

Frame - Dual Seat - Frame Cover - Rear Fender

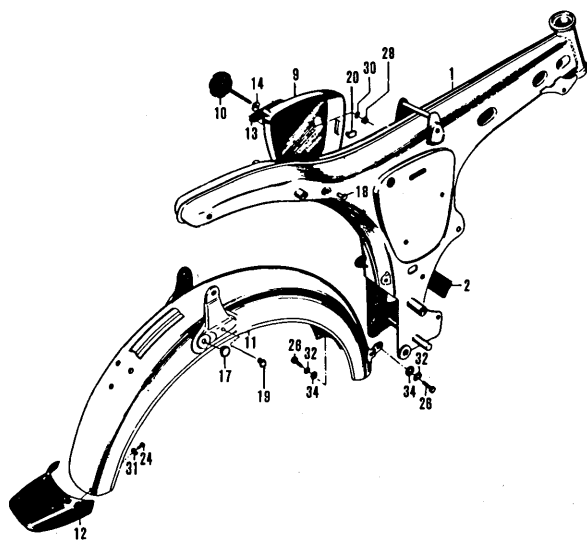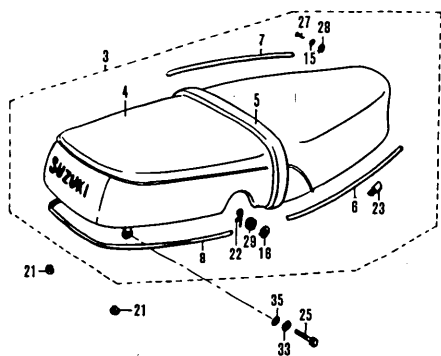


Frame - Dual Seat - Frame Cover - Rear Fender

Ref.No.	Part No.	Description	Q'ty				Remarks
			A100	AS100	A100-1	AS5100	
23	09410-00004	Dual Seat Reather Clip	16	16			
24-1	★01111-05108	Hexagon Bolt	2	2			
24-2	01111-05101	Hexagon Bolt	2	2			
25	01121-08258	Small Hexagon Bolt	2	2			
26	01211-06127	Crown Head Bolt	2	2	2	2	
27-1	★02141-03208	Cross Head Screw	14	14			
27-2	02141-03201	Cross Head Screw	14	14			
28-1	★08311-11038	Hexagon Nut	16	16			
28-2	08311-11031	Hexagon Nut	16	16			
29	08311-11068	Hexagon Nut	2	2			
30	08321-21038	Lock Washer	2	2			
31	08321-21058	Lock Washer	2	2			
32	08321-21068	Lock Washer	2	2	2	2	
33	08321-21088	Lock Washer	2	2			
34	08322-21068	Flat Washer	2	2	2	2	
35	08322-21088	Flat Washer	2	2			

Ref.Nos.17(2pcs),19 are used only when no turn signal lamp are installed.

Note: Asterisk (★) indicates Parts with ISO thread changed in its Pitch by adopting ISO standard.

Stand - Brake Pedal - Brake Rod - Footrest Bar

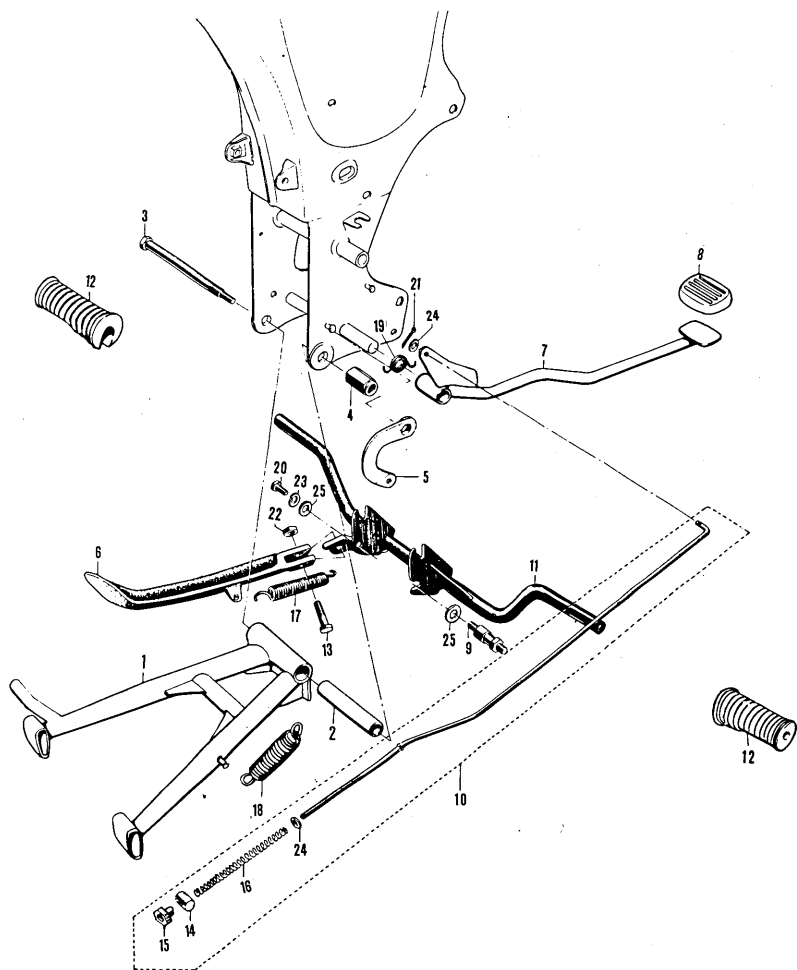

Stand - Brake Pedal - Brake Rod - Footrest Bar

Ref.No.	Part No.	Description	Q'ty				Remarks
			A/00	AS/00	A/00-2	AS/00	
1	42100-05000	Center Stand	1				
2	42211-03001	Center Stand Spacer	1	1	1	1	10.4X16X84.4(0.41X0.63X3.36)
3	42221-03000	Center Stand Bolt	1	1	1	1	L.=137(5.39)
4	42231-09000	Center Stand Nut	1	1	1	1	
5	42250-03001	Center Stand Spring Hook	1	1	1	1	
6	42310-19000	Prop Stand	1				
7	43110-12001	Brake Pedal	1	1	1	1	
8	43151-01000	Brake Pedal Rubber	1	1	1	1	
9	43221-03001	Brake Pedal Stopper	1	1	1	1	
10	43300-01003	Brake Rod Ass'y	1	1			
11	43510-12001	Footrest Bar	1	1			
12	43551-03000	Footrest Rubber	2	2	2	2	
13	09100-10007	Prop Stand Bolt	1				
14-1	*09150-05101	Brake Rod Adjuster Nut	1	1			
14-2	09150-05001	Brake Rod Adjuster Nut	1	1			
15	09209-10001	Brake Cam Lever Pin	1	1			
16	09440-09004	Brake Rod Adjuster Spring	1	1	1	1	
17	09443-14005	Prop Stand Spring	1				
18	09443-16002	Center Stand Spring	1	1	1	1	
19	09448-31002	Brake Pedal Return Spring	1	1			
20	01121-08168	Small Hexagon Bolt	1	1	1	1	
21	04111-20188	Cotter Pin	1	1	1	1	
22	08312-31108	Small Hexagon Nut	1				
23	08321-21088	Lock Washer	1	1	1	1	
24	08322-21058	Flat Washer	2	2	1	1	
25	08322-21088	Flat Washer	2	2	2	2	


Note: Asterisk (★) indicates Parts with ISO thread changed in its Pitch by adopting ISO standard.

Fuel Tank - Fuel Cock

Ref.No.	Part No.	Description	Q'ty				Remarks
			A100	AS100	A100-2	ASS100	
1-1	44110-12001-002	Fuel Tank	1	1			
1-2	44110-12001-019	Fuel Tank	1	1			
1-3	44110-12001-061	Fuel Tank	1	1			
1-4	44110-12001-075	Fuel Tank	1	1			
2	44170-12001	Fuel Tank RH Side Cover	1	1			
3	44180-12001	Fuel Tank LH Side Cover	1	1			
4	44210-12000	Fuel Tank Cap	1	1	1	1	
5	44248-12000	Fuel Tank Cap Gasket	1	1	1	1	
6	44251-05000	Knee Grip	2	2			
7	44300-05110	Fuel Cock Ass'y	1	1	1	1	
8	44330-01011	Inlet Pipe Strainer Net	1	1	1	1	
9	44341-05110	Fuel Cock Lever Gasket	1	1	1	1	
10	44344-05110	Strainer Net	1	1	1	1	
11	44344-01021	Strainer Net	1	1	1	1	~A100-75848
12	44346-05110	Strainer Cup Gasket	1	1	1	1	I.D.=15(0.59),O.D.=19(0.71)
13	44346-01020	Strainer Cup Gasket	1	1	1	1	I.D.=14(0.55),O.D.=19.5(0.77),~A100-75848
14	44347-01600	Fuel Cock Strainer Cup	1	1	1	1	
15	44348-01010	Fuel Cock Gasket	1	1	1	1	8.2X13.5X2.5(0.32X0.53X0.09)
16	44362-05110	Fuel Cock Lead Pipe Net	1	1	1	1	
17	44394-01020	Fuel Cock Joint Nut	1	1	1	1	
18	68110-11000	Fuel Tank Emblem	2	2	2	2	
19-1	*09125-03106	Fuel Tank Emblem Screw	4	4	4	4	3screw,L.=8(0.31)
19-2	09125-03001	Fuel Tank Emblem Screw	4	4			3screw,L.=8(0.31)
20	09140-08001	Fuel Tank Front Mounting Nut	1	1			
21	09160-06004	Fuel Tank Rear Washer	2	2	2	2	6.5X24X1.6(0.26X0.95X0.06)
22	09160-08005	Fuel Tank Front Washer	2	2			8.2X26X1.6(0.32X1.02X0.06)
23	09180-06002	Fuel Tank Rear Spacer	2	2	2	2	7X10X7(0.28X0.39X0.28)
24	09180-08001	Fuel Tank Front Spacer	2	2			8.8X12X11(0.35X0.47X0.43)

A100

Fuel Tank - Fuel Cock

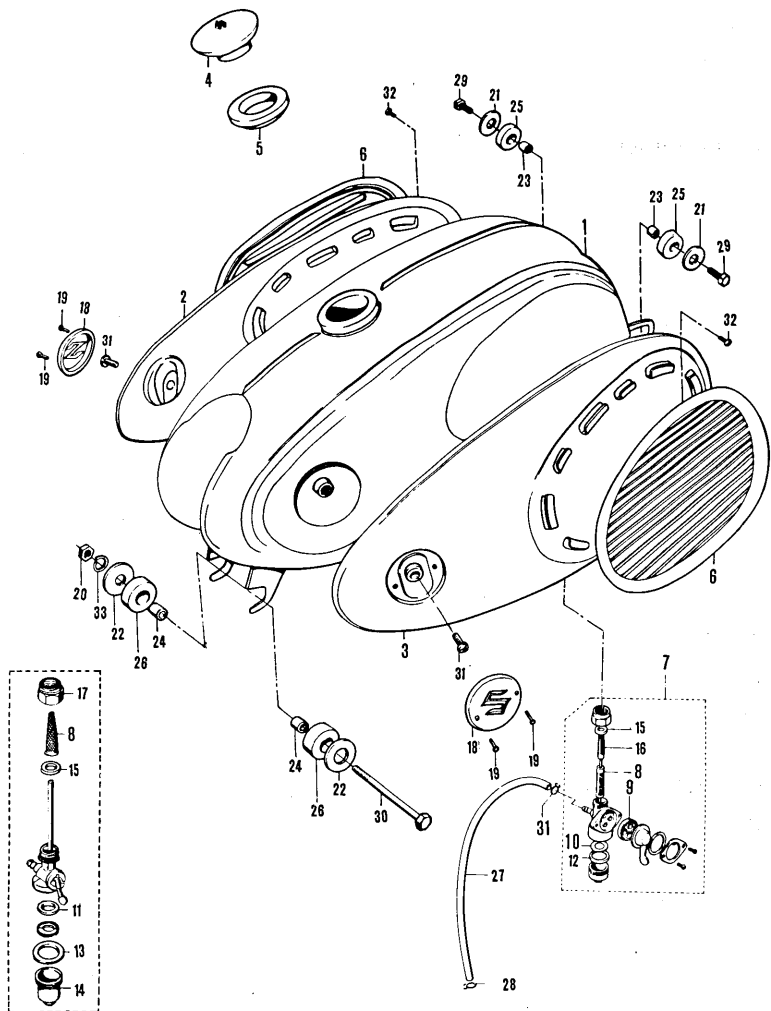


Fuel Tank - Fuel Cock

Ref.No.	Part No.	Description	Q'ty				Remarks
			A100	A5100	A100-2	A55100	
25	09320-09002	Fuel Tank Rear Damper	2	2	2	2	9.5X12.8X8.5(0.38X0.50X0.34)
26	09320-11003	Fuel Tank Front Damper	2	2			11.5X26X12(0.45X1.02X0.47)
27	09343-05016	Fuel Hose	1	1			L.=135(5.31)
28	09386-08001	Fuel Hose Clip	2	2	2	2	
29	01111-06168	Hexagon Bolt	2	2	2	2	
30	01221-08857	Crown Bolt	1	1			
31	02111-06088	Cross Head Screw	2	2	2	2	
32-1	*02141-05068	Cross Head Screw	2	2	2	2	
32-2	02141-05061	Cross Head Screw	2	2			
33	08321-21088	Lock Washer	1	1			

Note: Asterisk (★) Indicates Parts with ISO thread changed in its Pitch by adopting ISO standard.

Oil Tank - Oil Tank Outlet

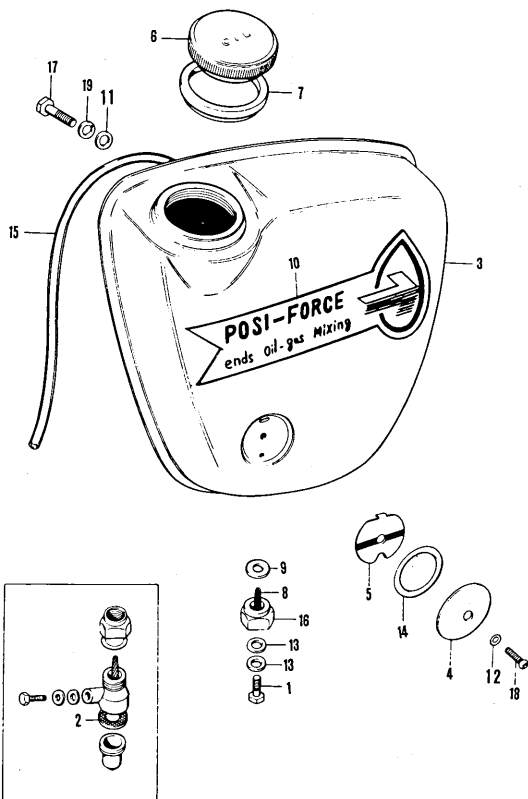


Oil Tank - Oil Tank Outlet

Ref.No.	Part No.	Description	Q'ty				Remarks
			A100	AS100	A100-2	AS5100	
1	16293-11010	Oil Tank Union Bolt	1	1	1	1	
2	44346-02030	Strainer Cap Gasket	1	1	1	1	~A100-50552 13.5X19X1.5(0.53X0.75X0.06)
3-1	44610-05601-002	Oil Tank Comp.	1	1			
3-2	44610-05601-019	Oil Tank Comp.	1	1			
3-3	44610-05601-061	Oil Tank Comp.	1	1			
3-4	44610-05601-075	Oil Tank Comp.	1	1			
4	44641-11000	Oil Level Inspection Lens	1	1	1	1	
5	44642-11000	Oil Level Inspection Plate	1	1	1	1	
6	44651-11040	Oil Tank Cap	1	1	1	1	
7	44661-11000	Oil Tank Cap Gasket	1	1	1	1	35X46X3.5(1.38X1.81X0.14)
8	44720-11030	Oil Tank Outlet Strainer Net	1	1	1	1	
9	44733-11030	Oil Tank Outlet Gasket	1	1	1	1	8.2X13.5X2.5(0.32X0.53X 0.10)
10	68171-11601	Oil Tank Emblem	1	1	1	1	
11	09161-08002	Oil Tank Rubber Washer	3	3	3	3	8X22X3(0.32X0.87X0.12) A100-22419~
12	09168-05001	Oil Level Inspection Lens Gasket	1	1	1	1	5X9.5X1(0.20X0.37X0.04)
13	09168-06002	Union Bolt Gasket	2	2	2	2	6.2X12X1.5(0.24X0.47X0.06)
14	09280-23001	Oil Inspection Lens O Ring	1	1	1	1	I.D.=23(0.9),d.=3(0.12)
15	09344-05002	Oil Tank Breather Line	1	1	1	1	
16	09361-14001	Oil Tank Outlet Joint Nut	1	1	1	1	A100-50553~
17	01111-06108	Hexagon Bolt	3	3	3	3	
18-1★	02111-05168	Cross Head Screw	1	1	1	1	
18-2	02111-05161	Cross Head Screw	1	1	1	1	
19	08321-21068	Lock Washer	3	3	3	3	

Note: Asterisk (★) indicates Parts with ISO thread changed in its Pitch by adopting ISO standard.


Front Fork

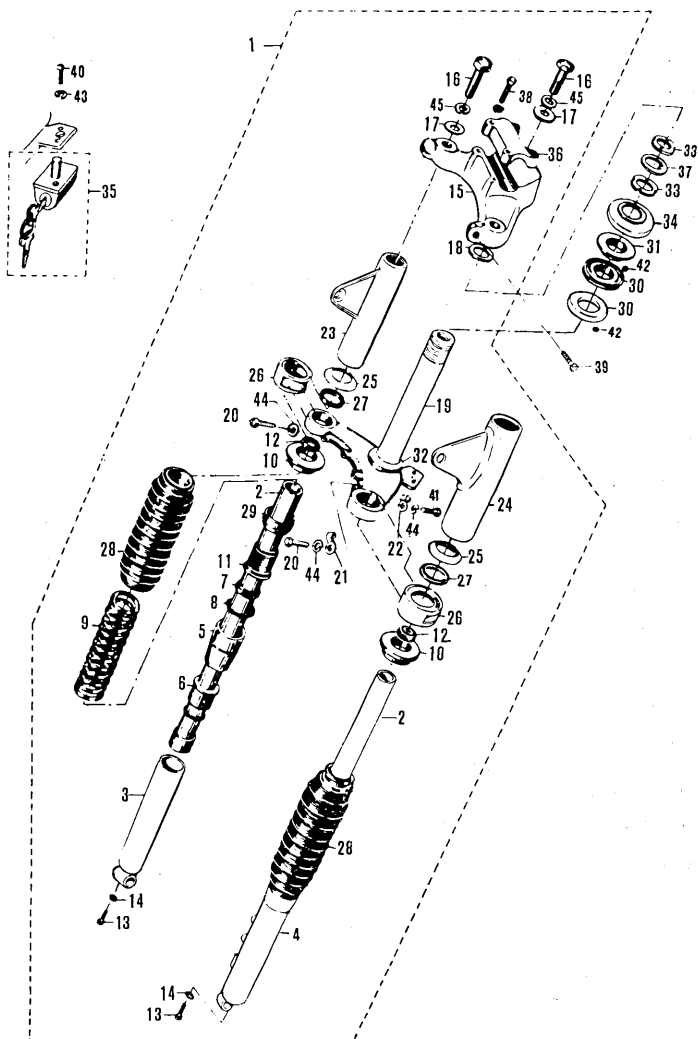

Front Fork

Ref.No.	Part No.	Description	Q'ty				Remarks
			A100	AS100	A100-1	AS100	
1-1	51100-12600-002	Front Fork Ass'y	1				
1-2	51100-12600-019	Front Fork Ass'y	1				
1-3	51100-12600-061	Front Fork Ass'y	1				
1-4	51100-12600-075	Front Fork Ass'y	1				
2	51110-05010	Fork Inner Tube	2	2			
3-1	51130-12601-002	Fork RH Outer Tube	1	1			
3-2	51130-12601-019	Fork RH Outer Tube	1	1			
3-3	51130-12601-061	Fork RH Outer Tube	1	1			
3-4	51130-12601-075	Fork RH Outer Tube	1	1			
4-1	51140-12601-002	Fork LH Outer Tube	1	1			
4-2	51140-12601-019	Fork LH Outer Tube	1	1			
4-3	51140-12601-061	Fork LH Outer Tube	1	1			
4-4	51140-12601-075	Fork LH Outer Tube	1	1			
5	51151-12010	Inner Tube Guide Housing	2	2	2	2	
6	51152-03011	Fork Inner Tube Guide	2	2	2	2	I.D.=17(0.67), L.=24(0.94)
7	51153-03011	Fork Oil Seal	2	2	2	2	25.2X39X10.5(0.99X1.54X0.41)
8	51154-12011	Fork Oil Seal Lower O Ring	2	2	2	2	
9	51171-03620	Fork Spring	2	2	2	2	31.5X38.5X14.9(1.24X1.52X5.87)
10	51172-01212	Fork Spring Guide	2	2	2	2	I.D.=27(1.06), T.=8(0.31)
11	51173-01211	Fork Dust Seal	2	2	2	2	
12	51181-03010	Inner Tube Shock Damper	2	2	2	2	10X20X9(0.39X0.79X0.35)
13-1	*51182-03621	Fork Drain Plug	2	2			
13-2	51182-03620	Fork Drain Plug	2	2			
14	51183-03010	Fork Drain Plug Gasket	2	2			4X9X1.2(0.16X0.35X0.05)
15	51311-12010	Steering Stem Head	1	1			
16	51351-07012	Fork Fitting Bolt	3	3	3	3	
17	51356-07010	Steering Stem Head Washer	3	3	3	3	10.5X26X2(0.41X1.02X0.09)
18	51361-03110	Steering Stem Upper Cover	1	1	1	1	


Front Fork

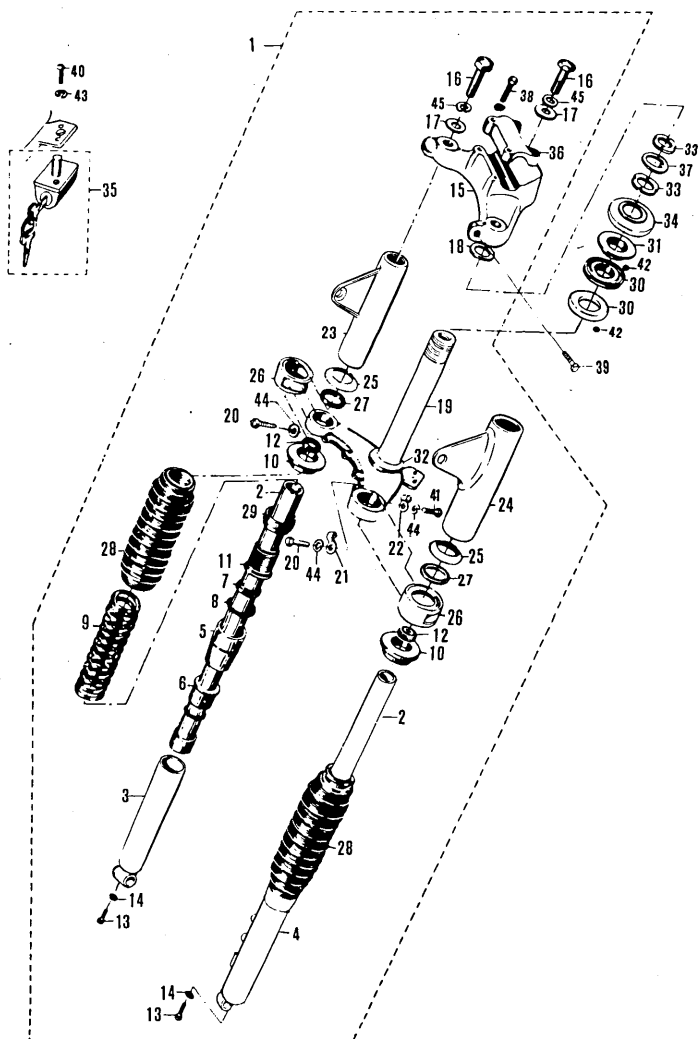

Front Fork

Ref.No.	Part No.	Description	Q'ty				Remarks
			A10	AS10	A10-1	AS510	
19	51410-12600	Steering Stem	1	1	1	1	
20	51451-03010	Fork Inner Tube Bolt	2	2	2	2	10screw,L.=28(1.10)
21	51452-08010	Speedometer Clip	2	2	2	2	
22	51453-03010	Brake Cable Clip	1	1	1	1	
23-1	51530-12010-002	Headlamp RH Bracket	1	1	1	1	
23-2	51530-12010-019	Headlamp RH Bracket	1	1	1	1	
23-3	51530-12010-061	Headlamp RH Bracket	1	1	1	1	
23-4	51530-12010-075	Headlamp RH Bracket	1	1	1	1	
24-1	51540-12010-002	Headlamp LH Bracket	1	1	1	1	
24-2	51540-12010-019	Headlamp LH Bracket	1	1	1	1	
24-3	51540-12010-061	Headlamp LH Bracket	1	1	1	1	
24-4	51540-12010-075	Headlamp LH Bracket	1	1	1	1	
25	51551-01211	Headlamp Bracket Seat	2	2	2	2	27.2X43X3.5(1.14X1.69X0.14)
26	51552-03110	Headlamp Bracket Chrome Band	2	2	2	2	
27	51553-01211	Headlamp Bracket Shock Damper	2	2	2	2	28X34X4(1.10X1.34X0.16)
28	51571-03110	Fork Spring Cover Boot	2	2	2	2	
29	51573-03110	Fork Spring Guide	2	2	2	2	
30	51611-20000	Steering Inner Race	2	2	2	2	
31	51621-05000	Steering Upper Outer Race	1	1	1	1	
32	51622-20000	Steering Lower Outer Race	1	1	1	1	
33	51631-05600	Steering Stem Nut	2	2	2	2	
34	51643-05000	Steering Upper Dust Seal	1	1	1	1	
35	51900-03012	Steering Lock Ass'y	1	1	1	1	
36	56211-03010	Handlebar Clamp	1	1	1	1	

Front Fork

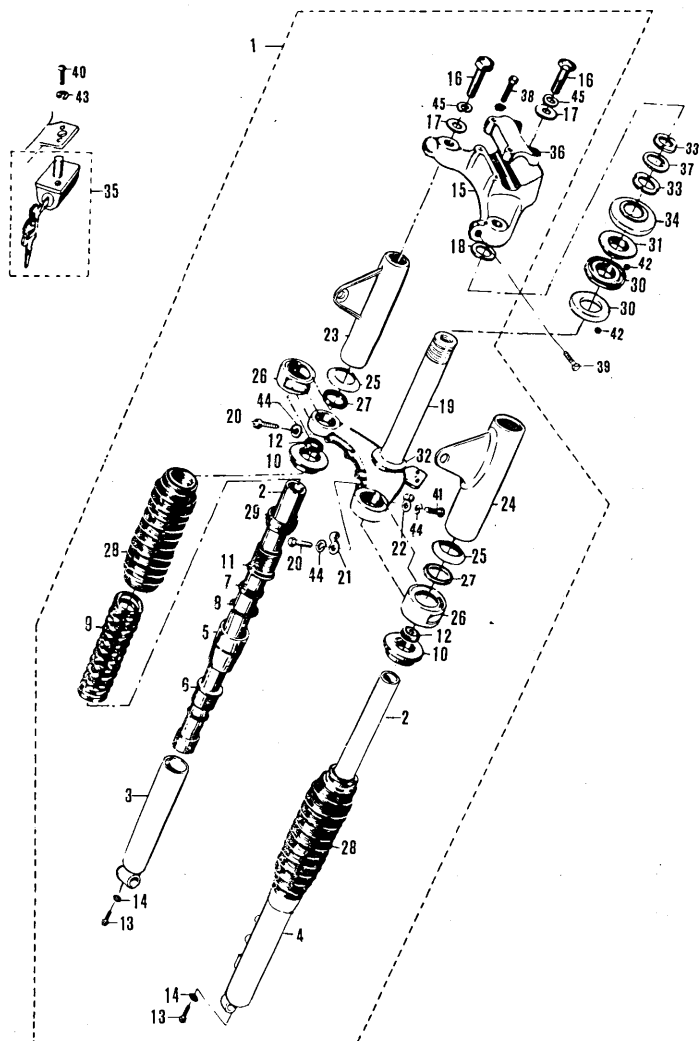


Front Fork

Ref.No.	Part No.	Description	Q'ty				Remarks
			A100	AS100	A100-2	AS100	
37	09166-24001	Steering Stem Lock Washer	1	1	1	1	
38	01211-06257	Crown Head Bolt	4	4	4	4	
39	01221-08127	Crown Head Bolt	2	2	2	2	
40-1	★02111-05128	Cross Head Screw	2	2	2	2	
40-2	02111-05121	Cross Head Screw	2	2			
41	02111-06108	Cross Head Screw	1	1	1	1	
42	06111-06004	Steel Ball	44	44	44	44	
43	08321-21058	Lock Washer	2	2	2	2	
44	08321-21068	Lock Washer	5	5	5	5	
45	08321-21108	Lock Washer	5	5	5	5	

Note: Asterisk (★) indicates Parts with ISO thread changed in its Pitch by adopting ISO standard.


Front Fender - Handlebar - Control Cable - Starter Lever

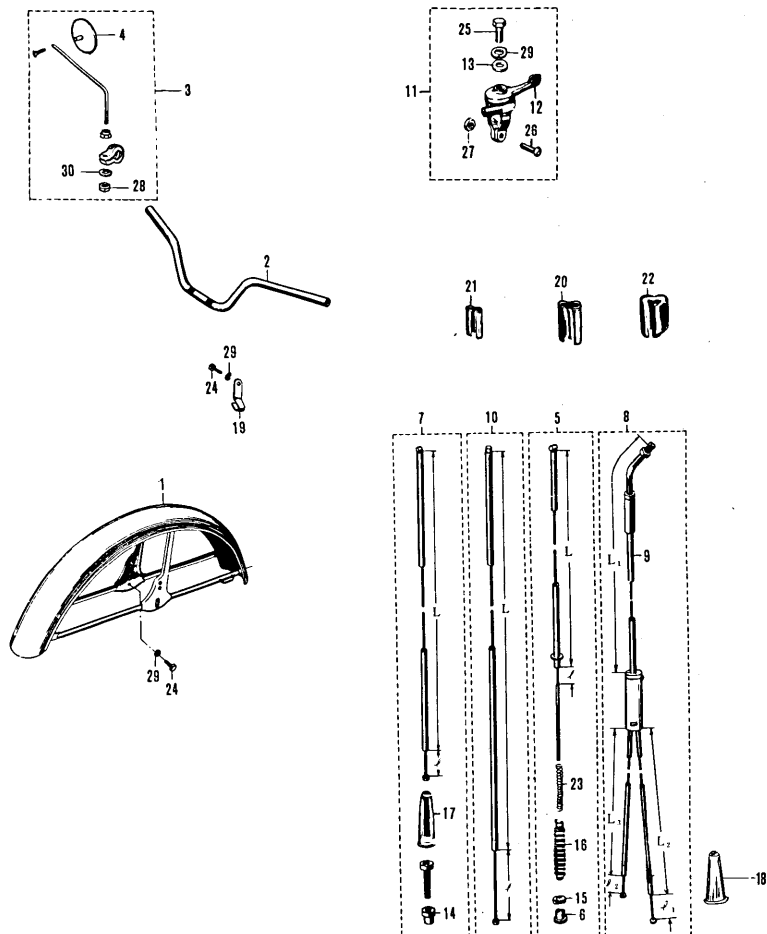

Front Fender - Handlebar - Control Cables - Starter Lever

Ref.No.	Part No.	Description	Q'ty				Remarks
			A100	AS100	A100-1	ASS100	
1	53110-03650-126	Front Fender	1	1			
2	56111-05000	Handlebar	1	1			
3	56500-03012	Rear View Mirror Ass'y	1	1	1	1	~A100-54054
4	56510-03012	Rear View Mirror	1	1	1	1	~A100-54054
5	58100-03731	Brake Cable Ass'y	1	1			L.=1,020(40.1), ℓ =40(1.57)
6	58165-50000	Brake Cam Adjusting Nut	1	1	1	1	
7	58200-05000	Clutch Cable Ass'y	1	1			L.=940(37.01), ℓ =96(3.78)
8	58300-12000	Throttle Cable Ass'y	1	1			L ₁ =600(23.62), L ₂ =335 (18.19), L ₃ =250(9.84) ℓ ₁ =112(4.31), ℓ ₂ =56(2.2)
9	58310-12000	Handlebar Side Throttle Cable	1	1			
10	58410-05000	Starter Cable	1	1			L.=840(33.07), ℓ =63(2.48)
11	58700-03010	Starter Lever Ass'y	1	1			
12	58721-03010	Starter Lever	1	1			
13	58723-03010	Starter Lever Washer	1	1			6.5X16X1(0.26X0.63X0.04)
14	09159-08007	Clutch Cable Adjusting Washer	1	1	1	1	
15	09209-10001	Brake Cam Lever Pin	1	1	1	1	
16	09287-07001	Brake Cable Boot	1	1	1	1	
17	09287-10002	Clutch Cable Boot	1	1	1	1	
18	09287-10003	Throttle Cable Boot	1	1	1	1	
19	09403-00019	Throttle Cable Clip Band	1	1	1	1	
20	09408-00001	Cable Holding Clip	2	2	2	2	
21	09408-00002	Speedometer/Brake Cable Clip	1	1	1	1	
22	09408-00003	Cable Holding Clip	1	1	1	1	
23	09440-06003	Brake Cable Spring	1	1	1	1	

Front Fender - Handlebar - Control Cable - Starter Lever

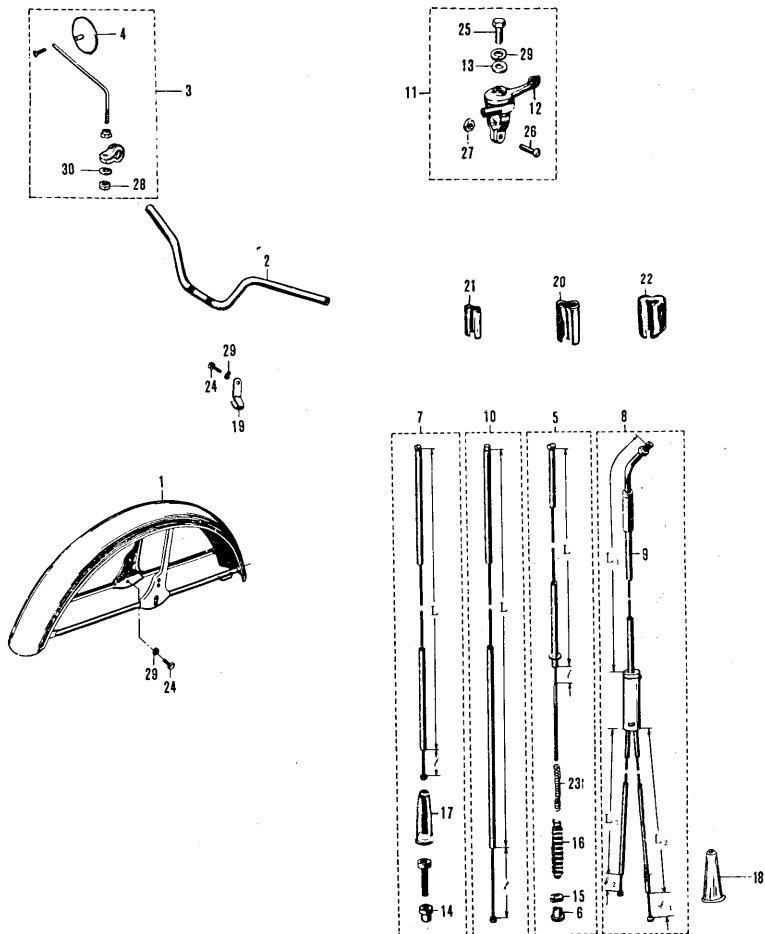


Front Fender - Handlebar - Control Cables - Starter Lever

Ref.No.	Part No.	Description	Q'ty		Remarks
			A100	AS100 A100-2 AS5100	
24	01111-06108	Hexagon Bolt	5	5	
25	01111-06127	Hexagon Bolt	1	1	
26-1	* 02111-05168	Cross Head Screw	1	1	
26-2	02111-05161	Cross Head Screw	1	1	
27-1	* 08311-11058	Hexagon Nut	1	1	
27-2	08311-11051	Hexagon Nut	1	1	
28	08312-11088	Small Hexagon Nut	1	1	~A100-54054
29	08321-21068	Lock Washer	6	6	
30	08322-11088	Small Flat Washer	1	1	~A100-54054

Note: Asterisk (*) indicates Parts with ISO thread changed in its Pitch by adopting ISO standard.

Throttle Grip - RH Switch - LH Switch


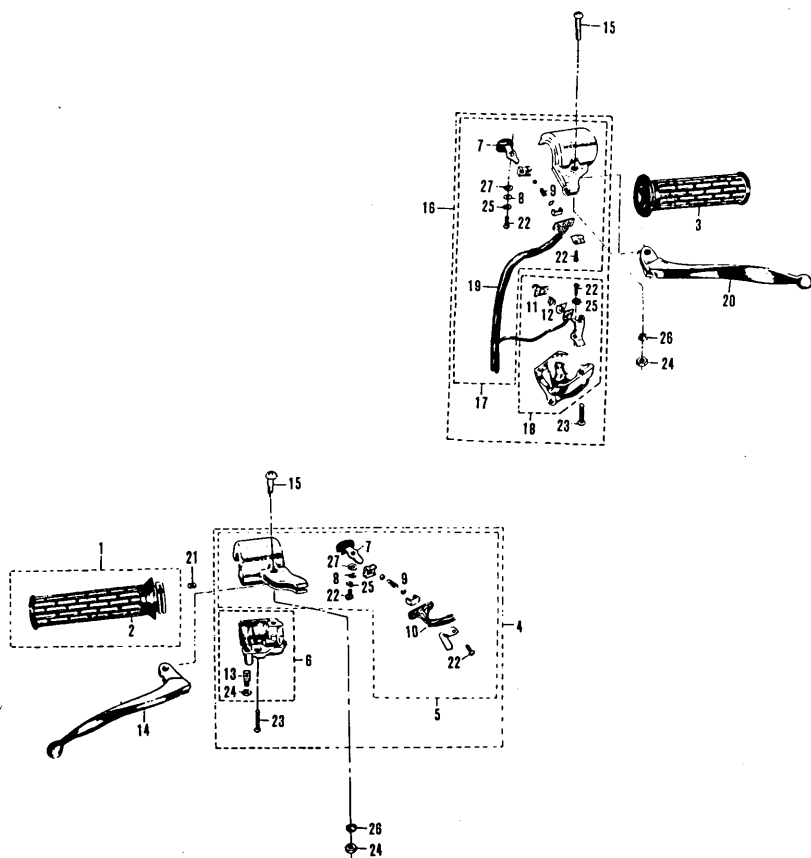


Throttle Grip - RH Switch - LH Switch

Ref.No.	Part No.	Description	Q'ty				Remarks
			A100	AS100	A100-2	AS5100	
1	57110-05010	Throttle Grip Ass'y	1	1	1	1	~A100-54054
2	57111-05010	Throttle Grip Rubber	1	1	1	1	~A100-54054
3	57211-05010	LH Grip	1	1	1	1	~A100-54054
4	57301-07823	RH Switch Ass'y	1	1	1	1	~A100-54054
5	57301-07620	RH Switch Upper Cover Ass'y	1	1	1	1	~A100-54054
6	57302-07011	RH Switch Lower Cover Ass'y	1	1	1	1	~A100-54054
7	57320-01011	Switch Knob	2	2	2	2	
8	57334-01010	Switch Knob Washer	2	2	2	2	
9	57337-01010	Switch Contact Spring	2	2	2	2	
10	57340-21010	RH Switch Wiring Harness	1	1	1	1	
11	57370-01311	Switch Push Button	1	1	1	1	
12	57382-01311	Switch Push Button Spring	1	1	1	1	
13	57390-07011	Throttle Grip Adjuster	1	1	1	1	
14	57421-05010	Brake Lever	1	1	1	1	~A100-54054
15-1★	57431-01011	Lever Pivot Bolt	2	2	2	2	
15-2	57431-01010	Lever Pivot Bolt	2	2			
16	57501-07827	LH Switch Ass'y	1	1	1	1	~A100-54054
17	57501-03700	LH Switch Upper Cover Ass'y	1	1	1	1	~A100-54054
18	57502-01602	LH Switch Lower Cover Ass'y	1	1	1	1	~A100-54054
19	57540-21010	LH Switch Wiring Harness	1	1	1	1	
20	57621-05010	Clutch Lever	1	1	1	1	~A100-54054
21	58631-07010	Throttle Grip End Piece	1	1	1	1	
22-1★	09125-03103	3X5 Cross Head Screw	5	5	5	5	
22-2	09125-03003	3X5 Cross Head Screw	5	5			

Note: Asterisk (★) Indicates Parts with ISO thread changed in its Pitch by adopting ISO standard.

Throttle Grip - RH Switch - LH Switch

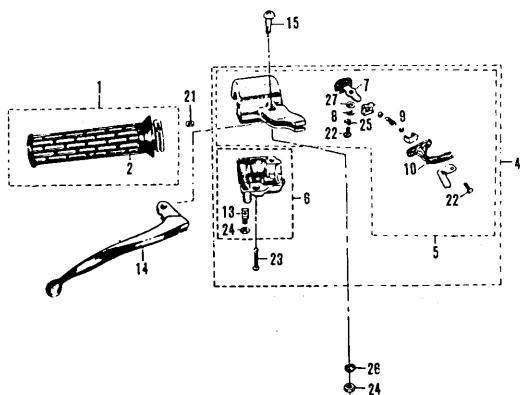
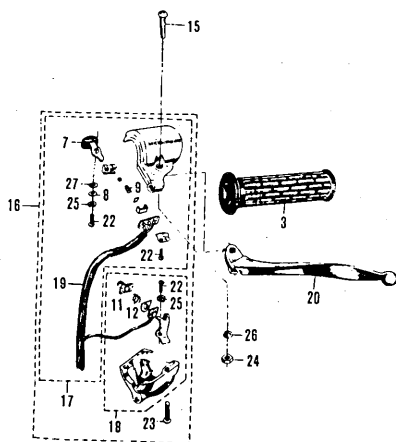


Throttle Grip - RH Switch - LH Switch

Ref.No.	Part No.	Description	Q'ty				Remarks
			A100	A5100	A100-1	A55100	
23-1	*09125-05105	5X22 Cross Head Screw	4	4	4	4	
23-2	09125-05005	5X22 Cross Head Screw	4	4			
24-1	*08311-11058	Hexagon Nut	3	3	3	3	
24-2	08311-11051	Hexagon Nut	3	3			
25	08321-21038	Lock Washer	3	3	3	3	
26	08321-21058	Lock Washer	2	2	2	2	
27	08322-21038	Flat Washer	2	2	2	2	

Note: Asterisk (★) indicates Parts with ISO thread changed in its Pitch by adopting ISO standard.

Rear Swinging Arm - Rear Shock Absorber


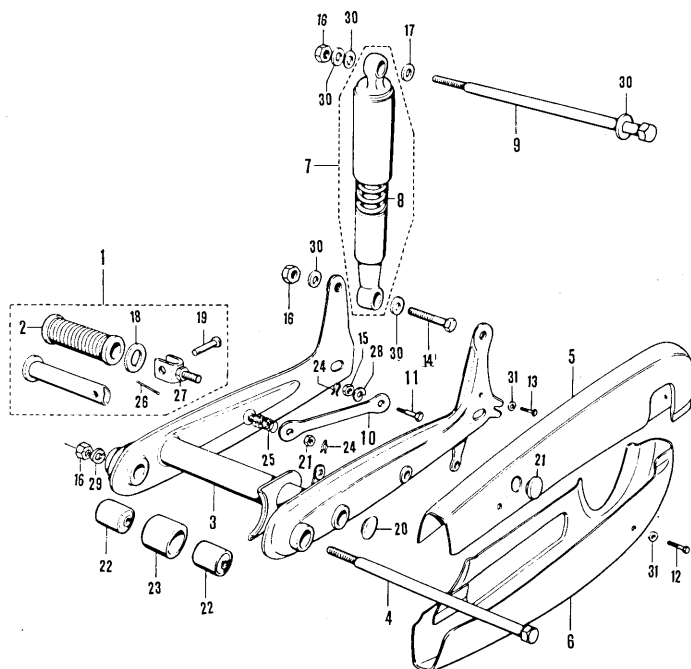


Old Type

Rear Swinging Arm - Rear Shock Absorber

Ref.No.	Part No.	Description	Q'ty				Remarks
			A100	AS100	A100-2	AS100	
1	43600-03001	Rear Footrest Ass'y	2	2	2	2	
2-1	43612-03001	Folding Footrest Rubber	2	2	2	2	
2-2	43610-03000	Folding Footrest Rubber	2	2	2	2	
3-1	61103-03815-002	Rear Swinging Arm	1				
3-2	61103-03815-019	Rear Swinging Arm	1				
3-3	61103-03815-061	Rear Swinging Arm	1				
3-4	61103-03815-075	Rear Swinging Arm	1				
4	61211-20000	Rear Swinging Arm Pivot Shaft	1	1	1	1	O.D.=10(0.39), L.=244(9.61)
5-1	61310-05001-002	Chain Case Upper Half	1				
5-2	61310-05001-019	Chain Case Upper Half	1				
5-3	61310-05001-061	Chain Case Upper Half	1				
5-4	61310-05001-075	Chain Case Upper Half	1				
6-1	61320-05001-002	Chain Case Lower Half	1				
6-2	61320-05001-019	Chain Case Lower Half	1				
6-3	61320-05001-061	Chain Case Lower Half	1				
6-4	61320-05001-075	Chain Case Lower Half	1				
7	62100-05601	Rear Shock Absorber Ass'y	2				
8	62211-01701	Rear Shock Absorber Spring	2				21X31X175.5(0.83X1.22X6.91)
9	62311-03001	Rear Shock Absorber Upper Shaft	1	1	1	1	O.D.=10(0.39), L.=186(7.32)
10	64310-01000	Rear Torque Link	1	1	1	1	
11	64331-01000	Rear Torque Link Bolt	1	1	1	1	
12	09100-06005	Chain Case Bolt (S)	3	1	3	3	6screw, L.=6(0.24)
13	09100-06007	Chain Case Bolt (L)	1	1	1	1	6screw, L.=15(0.59)
14-1	09100-10040	Rear Shock Absorber Lower Bolt	2	2			O.D.=10(0.39), L.=43(1.69)
14-2	09100-10019	Rear Shock Absorber Lower Bolt	2	2			O.D.=10(0.39), L.=40(1.57)
15	09140-08008	Rear Torque Link Nut	2	2	2	2	
16	09140-10001	Rear Shock Absorber Nut	4	4	4	4	
17	09160-10005	Rear Shock Absorber Upper Washer	2	2	2	2	10.5X20X3.2(0.41X0.79X0.13)

Rear Swinging Arm - Rear Shock Absorber

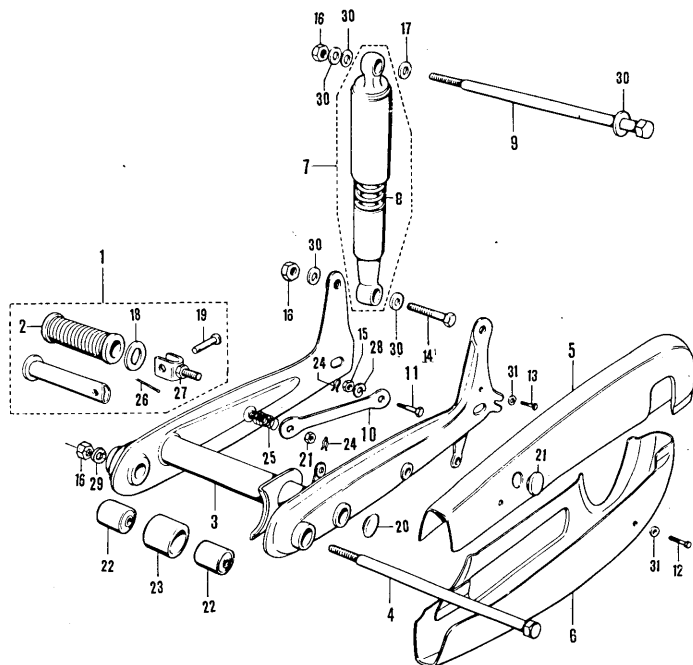


Old Type

Rear Swinging Arm - Rear Shock Absorber

Ref.No.	Part No.	Description	Q'ty				Remarks
			A100	AS100	A100-2	ASS100	
18	09160-19006	Footrest Rubber Washer	2	2	2	2	19.5X32X2(0.77X1.26X0.08)
19	09200-06010	Footrest Rubber Pin	2	2	2	2	O.D.=6(0.24),L.=31(1.22)
20	09250-22002	Swinging Arm Joint Cap	2	2	2	2	
21	09250-30001	Chain Inspection Hole Cap	1	1	1	1	
22	09319-10009	Rear Swinging Arm Bushing	2	2	2	2	
23	09320-22001	Rear Pivot Shaft Housing Buffer	1	1	1	1	
24	09384-06001	Rear Torque Link Clip	2	2	2	2	
25	09440-18002	Rear Torque Link Spring	1	1	1	1	
26	04111-20188	Cotter Pin	2	2	2	2	
27	08312-31108	Small Hexagon Nut	2	2	2	2	
28	08321-21088	Lock Washer	1	1	1	1	
29	08321-21108	Lock Washer	1	1	1	1	
30	08322-21108	Flat Washer	8	8	8	8	
31	08322-21068	Flat Washer	4	2	4	4	

Front Wheel

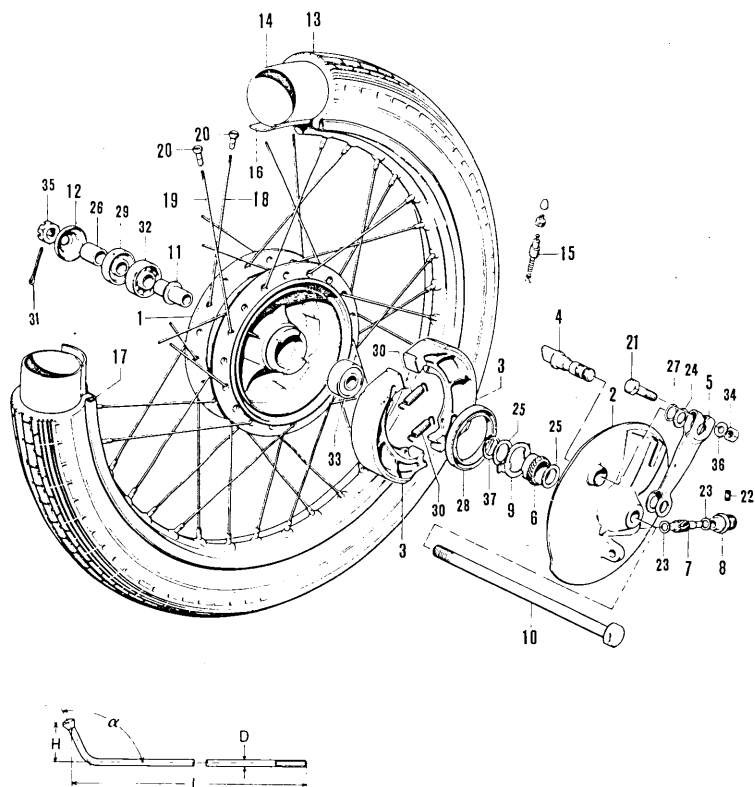


Front Wheel

Ref.No.	Part No.	Description	Q'ty				Remarks
			A'X	AS'X	A'X-1	ASS'X	
	54100-12602	Front Hub Ass'y	1	1			Inc. 1~12, 21~37
1	54110-07600	Front Hub Drum	1	1			
2	54210-12602	Front Hub Panel	1	1			
3	54410-07001	Brake Shoe	2	2	2	2	
4	54441-20000	Brake Cam Shaft	1	1	1	1	
5	54451-03601	Front Brake Cam Lever	1	1			
6	54611-07000	Speedometer Gear	1	1			N.T.=25
7	54621-03000	Speedometer Pinion	1	1	1	1	N.T.=10
8	54632-01001	Pinion Outer Bushing	1	1	1	1	
9	54661-07000	Speedometer Gear Driver	1	1	1	1	
10	54711-07611	Front Axle	1	1	1	1	
11	54730-07000	Front Hub Bearing Spacer	1	1	1	1	L.=47(1.85)
12	54892-07000	Front Hub Dust Seal	1	1	1	1	
13	55100-03010	Front Tire	1	1			2.50-17 4PR
14	55200-03600	Inner Tube	1	1			2.50-17
15	55250-01000	Inner Tube Valve	1	1	1	1	
16	55261-01010	Inner Tube Protector	1	1			
17	55311-07020	Wheel Rim	1	1			1.40-17
	55300-07808	Front Spoke Set	1	1			Inc. 18~20
18	55321-07020	Front Inner Spoke	18	18			D.=2.9(0.11), L.=153.5(6.04) α=103°, H.=5.3(0.21)
19	55322-07020	Front Outer Spoke	18	18			D.=2.9(0.11), L.=153.5(6.04) α=84°, H.=8.2(0.32)
20	55325-03020	Front Spoke Nipple	36	36	36	36	
21	09100-06050	Brake Cam Lever Bolt	1	1	1	1	6screw, L.=30(1.18)
22-1★	09134-03101	Pinion Outer Bushing Screw	1	1	1	1	
22-2	09134-03001	Pinion Outer Bushing Screw	1	1			

Note: Asterisk (★) indicates Parts with ISO thread changed in its Pitch by adopting ISO standard.

Front Wheel

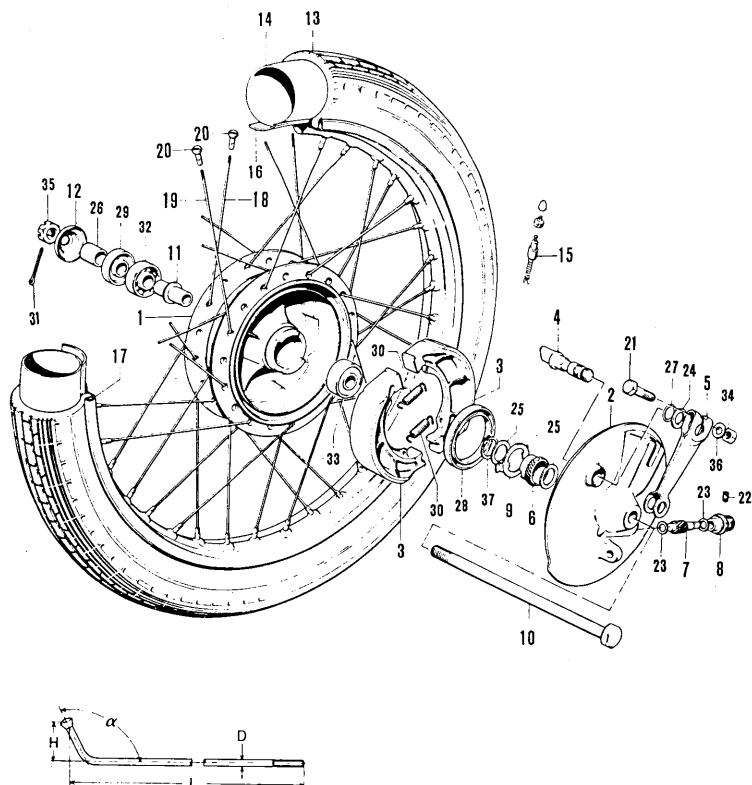


Front Wheel

Ref.No.	Part No.	Description	Q'ty				Remarks
			A/100	AS/100	A/100-2	ASS/100	
23	09160-05001	Pinion Thrust Washer	2	2	2	2	5.1X9X0.4(0.20X0.35X0.02)
24	09160-12011	Brake Cam Shaft Washer	1	1	1	1	12.5X20X1(0.49X0.79X0.04)
25	09160-18002	Gear Thrust Washer	2	2	2	2	18.5X24X1(0.73X0.94X0.04)
26	09180-12007	Front Axle Spacer	1	1	1	1	12X18X19.4(0.47X0.71X0.76)
27	09280-12001	Brake Cam Shaft Dust Seal	1	1	1	1	1.0.=11.4(0.45),d.=2.4 (0.09)
28	09283-48001	Front Hub Panel Oil Seal	1	1	1	1	48X62X7(1.89X2.44X0.28)
29	09284-18001	Front Hub Drum Oil Seal	1	1	1	1	18X37X5(0.71X1.46X0.20)
30	09443-07001	Brake Shoe Spring	2	2	2	2	
31	04111-30258	Cotter Pin	1	1	1	1	
32	08113-63010	Ball Bearing	1	1	1	1	
33	08143-63010	Ball Bearing	1	1	1	1	
34	08311-11068	Hexagon Nut	1	1	1	1	
35-1★	08314-31128	Castle Nut	1	1	1	1	
35-2	08314-31121	Castle Nut	1	1			
36	08322-21068	Flat Washer	1	1	1	1	
37	08331-11189	Circlip	1	1	1	1	

Note: Asterisk (★) indicates Parts with ISO thread changed in its Pitch by adopting ISO standard.


Rear Wheel

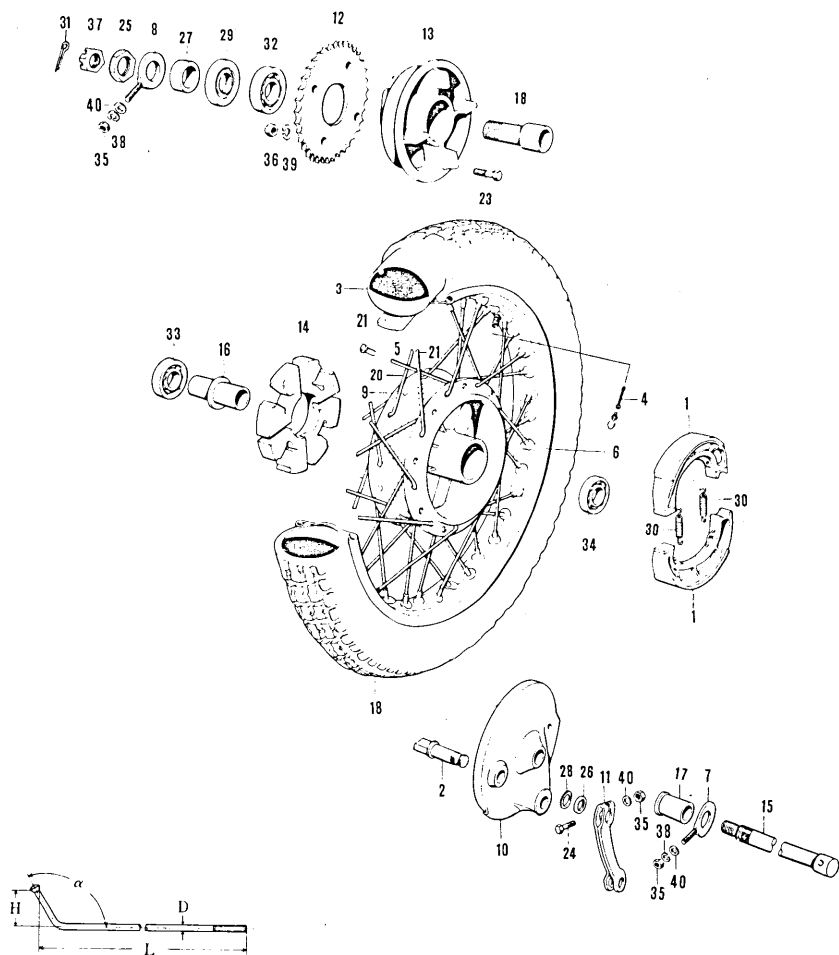

Rear Wheel

Ref.No.	Part No.	Description	Q'ty				Remarks
			A100	A5100	A100-2	A55100	
	64000-01850	Rear Hub Ass'y	1	1			Inc.1,2,9~11,13~18,24~35,37,38,40
1	54410-01002	Brake Shoe	2	2	2	2	
2	54441-01000	Brake Cam Shaft	1	1	1	1	
3	55200-03600	Inner Tube	1	1			2.50-17 Inc.4
4	55250-01000	Inner Tube Valve	1	1	1	1	
5	55261-01010	Inner Tube Protector	1	1			
6	55311-07020	Wheel Rim	1	1	1	1	1.40-17
7	61411-01001	Chain RH Adjuster	1	1	1	1	
8	61421-01001	Chain LH Adjuster	1	1	1	1	
9	64110-01000	Rear Hub Drum	1	1	1	1	
10	64210-01003	Rear Hub Panel	1	1	1	1	
11	64451-01002	Rear Brake Cam Lever	1	1	1	1	
12	64511-12001	Rear Sprocket	1				N.T.=32
13	64611-01000	Rear Sprocket Mounting Drum	1	1	1	1	
14	64651-01000	Rear Hub Shock Absorber	1	1	1	1	
15	64711-01603	Rear Axle	1	1	1	1	L.=217(8.54)
16	64730-01000	Rear Hub Bearing Spacer	1	1	1	1	12.7X17.3X58(0.50X0.68X2.28)
17	64741-01601	Rear Axle Spacer	1	1	1	1	I.D.=12.2(0.48),L.=30.5(1.20)
18	64761-01000	Rear Sprocket Mounting Drum Shaft	1	1	1	1	
19	65100-03010	Rear Tire	1	1			2.50-17 4PR
	65300-03817	Rear Spoke Set	1	1			Inc.20~22
20	65321-03020	Rear Inner Spoke	18	18			D.=3.2(0.13),L.=161(6.34) α=101°,H.=6.7(0.26)
21	65322-03020	Rear Outer Spoke	18	18			D.=3.2(0.13),L.=160.3(6.31) α=83.5°,H.=8.3(0.33)
22	65325-03020	Rear Spoke Nipple	36	36	36	36	
23	09105-08001	Rear Sprocket Bolt	4	4	4	4	
24	09100-06050	Brake Cam Lever Bolt	1	1	1	1	6screw,L.=30(1.18)
25	09140-16006	Rear Sprocket Mounting Drum Shaft Nut	1	1	1	1	

Rear Wheel

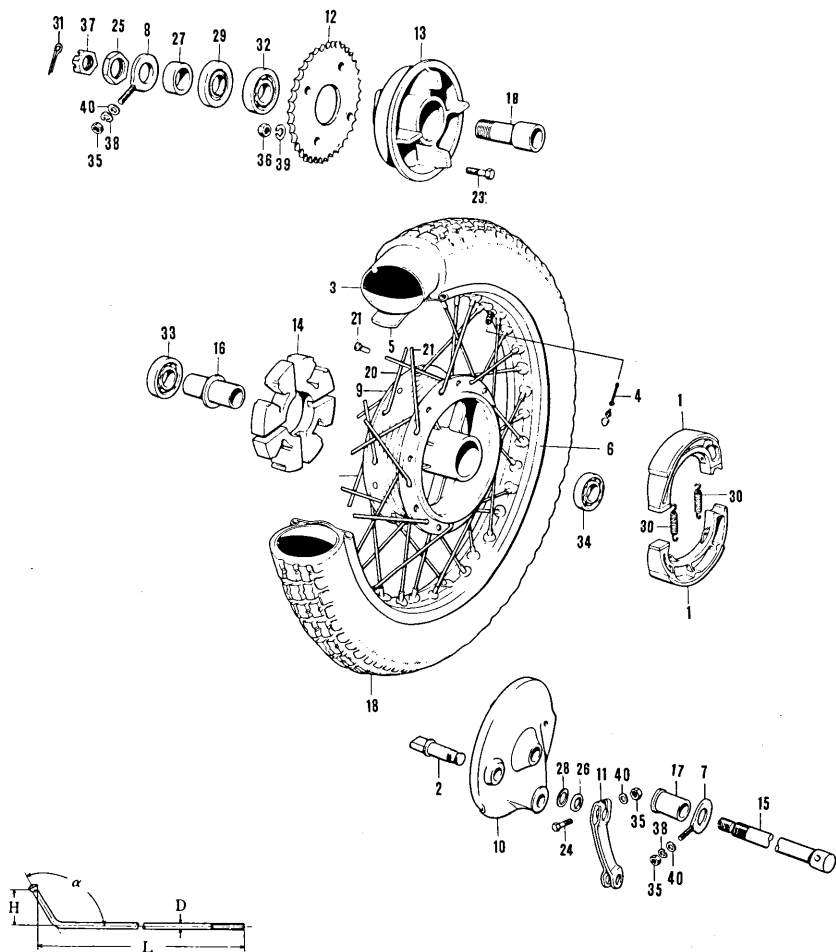


A100

Rear Wheel

Ref.No.	Part No.	Description	Q'ty				Remarks
			A100	AS100	A100-2	ASS100	
26	09160-12011	Brake Cam Shaft Washer	1	1	1	1	12.5X20X1(0.49X0.79X0.04)
27	09180-17004	Sprocket Mounting Drum Spacer	1	1	1	1	17X25X10.5(0.67X0.98X0.41)
28	09280-12001	Brake Cam Shaft Dust Seal	1	1	1	1	11.4X16.2X2.4(0.45X0.64X 0.09)
29	09283-25001	Sprocket Mounting Drum Oil Seal	1	1	1	1	25X40X6(0.98X1.57X0.24)
30	09443-07001	Brake Shoe Spring	2	2	2	2	
31	04111-20258	Cotter Pin	1	1	1	1	
32	08113-62030	Ball Bearing	1	1	1	1	
33	08143-62010	Ball Bearing	1	1	1	1	
34	08143-63010	Ball Bearing	1	1	1	1	
35	08311-11068	Hexagon Nut	3	3	3	3	
36	08312-31088	Small Hexagon Nut	4	4	4	4	
37	08314-11108	Castle Nut	1	1	1	1	
38	08321-21068	Lock Washer	2	2	2	2	
39	08321-21088	Lock Washer	4	4	4	4	
40	08322-21068	Flat Washer	3	3	3	3	

Rectifier - Battery - Main Wiring Harness - Horn


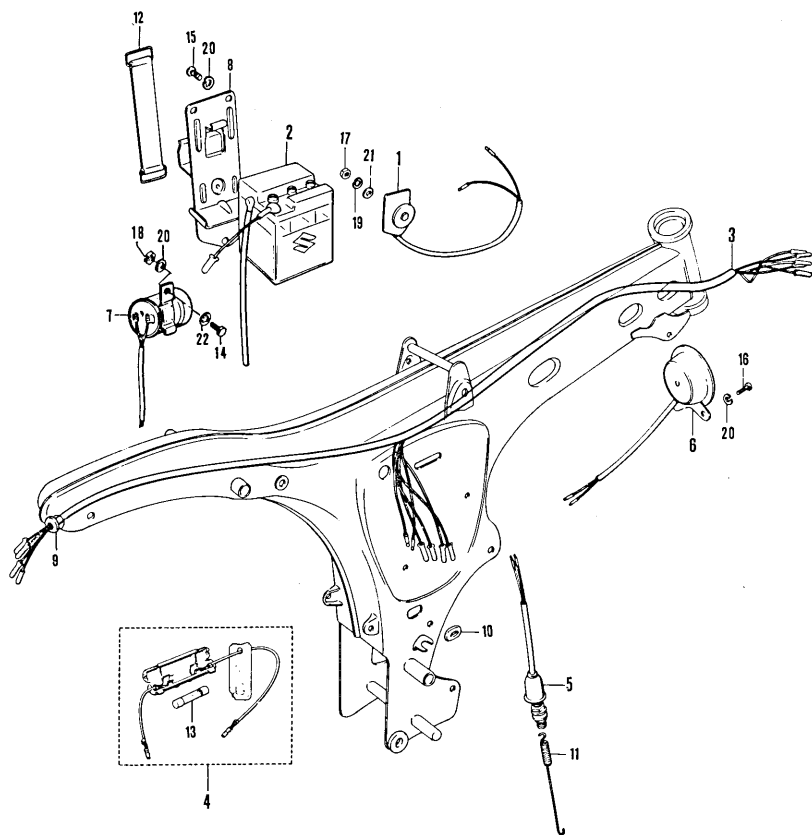


Rectifier - Battery - Main Wiring Harness - Horn

Ref.No.	Part No.	Description	Q'ty				Remarks
			A100	AS100	A1X100	AS1X100	
1	32800-01020	Selenium Rectifier	1	1	1	1	
2	33610-03010	Battery Ass'y	1	1	1	1	6V, 4AH
3	36610-12001	Main Wiring Harness	1	1			
4	36740-15010	Fuse Case Ass'y	1	1	1	1	
5	37740-10010	Brake Lamp Switch Ass'y	1	1	1	1	
6	38500-01030	Horn	1	1	1	1	
7	38610-05610	Turn Signal Relay	1	1			
8	41540-03000	Battery Holder	1	1			
9	09308-10001	Main Wiring Harness	1	1	1	1	
10	09308-12001	Grommet					
		Brake Lamp Switch Grommet	1	1	1	1	
11	09443-06006	Brake Lamp Switch Spring	1	1	1	1	
12	09462-00002	Battery Fitting Band	1	1	1	1	
13	09481-15001	Fuse	1	1	1	1	15A
14	01111-06128	Hexagon Bolt	1	1	1	1	
15	02111-06108	Cross Head Screw	3	3	3	3	
16	02111-06128	Cross Head Screw	2	2	2	2	
17-1	★08311-11058	Hexagon Nut	1	1	1	1	
17-2	08311-11051	Hexagon Nut	1	1	1	1	
18	08311-11068	Hexagon Nut	1	1	1	1	
19	08321-21058	Lock Washer	1	1	1	1	
20	08321-21068	Lock Washer	6	6	6	6	
21	08322-21058	Flat Washer	1	1	1	1	
22	08322-21068	Flat Washer	1	1	1	1	

Note: Asterisk (★) indicates Parts with ISO thread changed in its Pitch by adopting ISO standard.

Speedometer - Headlamp - High Beam Indicator - Ignition Switch

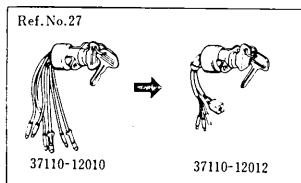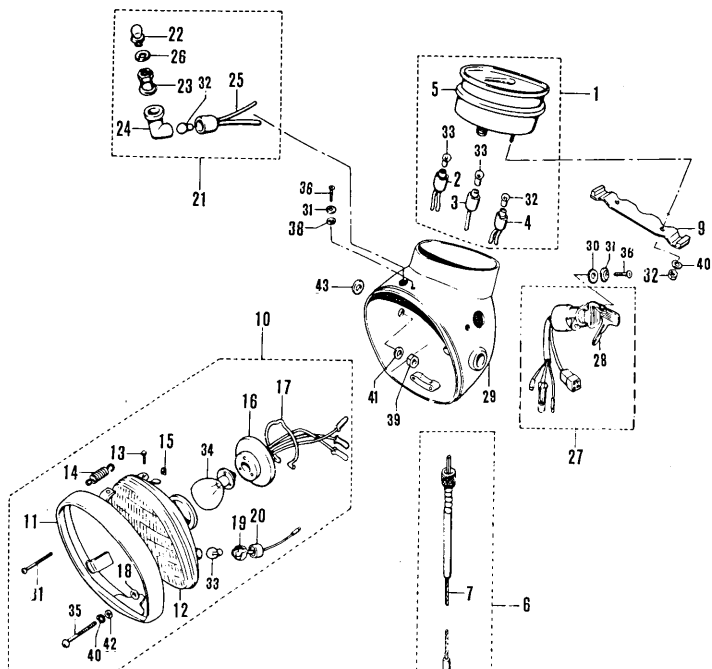


Speedometer - Headlamp - High Beam Indicator - Ignition Switch


Ref.No.	Part No.	Description	Q'ty			Remarks
			A100	AS100	A100-2 ASS100	
1-1	34100-12601	Speedometer Ass'y	1	1	1	Mile A100-2; A100-52506v
1-2	34100-12021	Speedometer Ass'y	1	1	1	Kilo A100-2; A100-52506v
2	34173-07020	Pilot Lamp Bulb Socket	1	1	1	A100-2; A100-52506v
3	34174-11020	Neutral Lamp Bulb Socket	1	1	1	A100-2; A100-52506v
4	34175-12020	Turn Signal Lamp Bulb Socket	1	1	1	A100-2; A100-52506v
5	34181-07010	Speedometer Gasket	1	1	1	A100-2; A100-52506v
6	34910-05030	Speedometer Cable Ass'y	1	1		
7	34911-03032	Speedometer Inner Cable	1	1		
8	34928-01030	Speedometer Cable Oil Seal	1	1	1	1
9	34951-07000	Speedometer Bracket	1	1	1	
10	35100-07691	Headlamp Ass'y	1	1		
11	35111-07691	Headlamp Rim	1	1		
12	35121-07690	Headlamp Unit	1	1		
13-1 *	35136-07691	Headlamp Unit Screw	2	2		
13-2	35136-07690	Headlamp Unit Screw	2	2		
14	35137-07690	Headlamp Spring	2	2		
15-1 *	35155-07691	Headlamp Adjuster Nut	2	2		
15-2	35155-07690	Headlamp Adjuster Nut	2	2		
16	35171-07690	Headlamp Socket	1	1		
17	35172-10620	Headlamp Socket Clamp	1	1		
18	35189-01320	Headlamp Spacer	1	1		
19	36118-01681	Parking Lamp Socket	1	1		
20	36119-07690	Parking Lamp Socket Boot	1	1		
21	36330-02610	High Beam Indicator Ass'y	1	1		
22	36331-01610	Indicator Lamp Lens	1	1		
23	36332-01610	Indicator Lamp Lens Nut	1	1		
24	36334-01610	Indicator Lamp Holder	1	1		

Note: Asterisk (*) Indicates Parts with ISO thread changed in its Pitch by adopting ISO standard.

Speedometer - Headlamp - High Beam Indicator - Ignition Switch

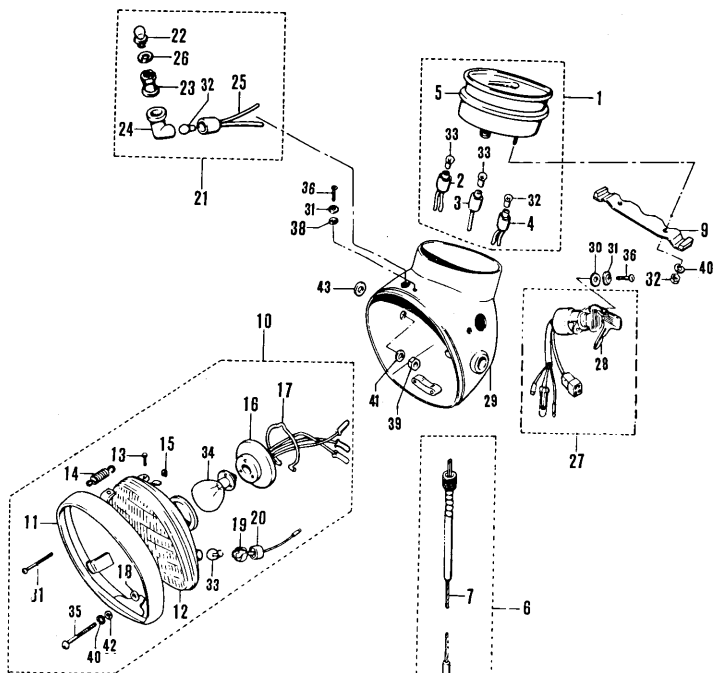

Ref.No.27



37110-12010


37110-12012

Speedometer - Headlamp - High Beam Indicator - Ignition Switch


Ref.No.	Part No.	Description	Q'ty				Remarks
			A100	AS100	A100-2	ASS100	
25	36335-01610	Indicator Lamp Socket	1	1			
26	36337-01610	Indicator Lamp Lens Gasket	1	1			
27-1	37110-12012	Ignition Switch Ass'y	1	1			
27-2	37110-12010	Ignition Switch Ass'y	1	1			~A100-10552
28	37141-07701	Ignition Switch Key	1	1	1	1	No.1153
	37141-07702	Ignition Switch Key	1	1	1	1	No.1315
	37141-07703	Ignition Switch Key	1	1	1	1	No.1353
	37141-07704	Ignition Switch Key	1	1	1	1	No.1531
	37141-07705	Ignition Switch Key	1	1	1	1	No.1551
	37141-07706	Ignition Switch Key	1	1	1	1	No.2153
	37141-07707	Ignition Switch Key	1	1	1	1	No.2315
	37141-07708	Ignition Switch Key	1	1	1	1	No.2353
	37141-07709	Ignition Switch Key	1	1	1	1	No.2531
	37141-07710	Ignition Switch Key	1	1	1	1	No.2551
	37141-07711	Ignition Switch Key	1	1	1	1	No.3153
	37141-07712	Ignition Switch Key	1	1	1	1	No.3315
	37141-07713	Ignition Switch Key	1	1	1	1	No.3353
	37141-07714	Ignition Switch Key	1	1	1	1	No.3531
	37141-07715	Ignition Switch Key	1	1	1	1	No.3551
	37141-07716	Ignition Switch Key	1	1	1	1	No.4153
	37141-07717	Ignition Switch Key	1	1	1	1	No.4315
	37141-07718	Ignition Switch Key	1	1	1	1	No.4353
	37141-07719	Ignition Switch Key	1	1	1	1	No.4531
	37141-07720	Ignition Switch Key	1	1	1	1	No.4551
29-1	51810-12601-002	Headlamp Housing	1	1			
29-2	51810-12601-019	Headlamp Housing	1	1			
29-3	51810-12601-061	Headlamp Housing	1	1			
29-3	51810-12601-075	Headlamp Housing	1	1			

A100

Speedometer - Headlamp - High Beam Indicator - Ignition Switch

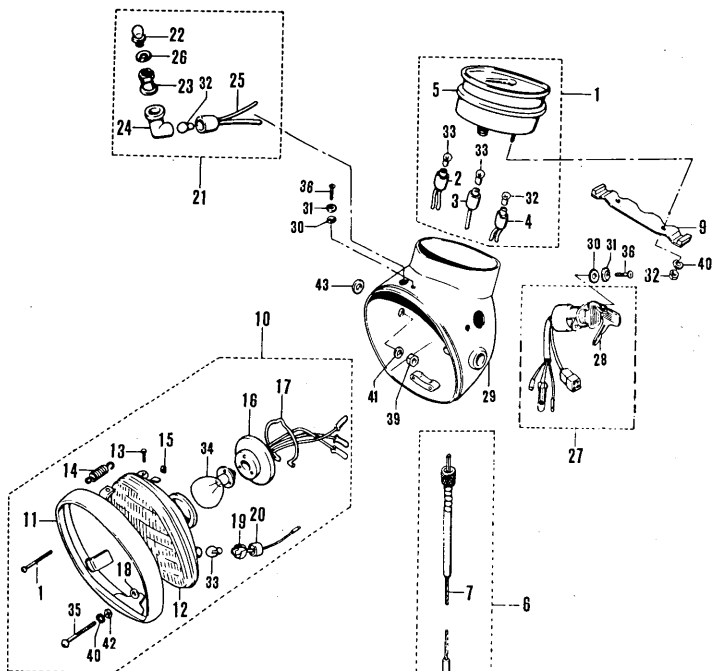

Ref.No.27



37110-12010


37110-12012

Speedometer - Headlamp - High Beam Indicator - Ignition Switch

Ref.No.	Part No.	Description	Q'ty				Remarks
			A100	AS100	A100-1	ASS100	
30	09161-04005	Headlamp Rim Screw Gasket	3	1	1	1	
31	09165-04004	Headlamp Rim Fitting Washer	3	1	1	1	
32	09471-06001	Turn Signal Indicator Lamp Bulb	2	2	2	1	6V, 1.5W
33	09471-06002	Speedometer Lamp Bulb	3	3	3	2	6V, 3W
34	09471-06010	Headlamp Bulb	1	1	1		6V, 25/25W
35-1★	02111-05357	Cross Head Screw	1	1			
35-2	02111-05352	Cross Head Screw	1	1			
36-1★	02131-04127	Cross Head Screw	3	3			
36-2	02131-04122	Cross Head Screw	3	3			
37-1★	02131-04408	Cross Head Screw	1	1			
37-2	02131-04401	Cross Head Screw	1	1			
38-1★	08311-11058	Hexagon Nut	2	2			
38-2	08311-11051	Hexagon Nut	2	2			
39	08312-11088	Small Hexagon Nut	2	2			
40	08321-21058	Lock Washer	3	3			
41	08321-21088	Lock Washer	2	2			
42	08322-21058	Flat Washer	1	1			
43	08322-21087	Flat Washer	2	2			

Note; Asterisk (★) indicates Parts with ISO thread changed in its Pitch by adopting ISO standard.

Turn Signal - Tail / Brake Lamp

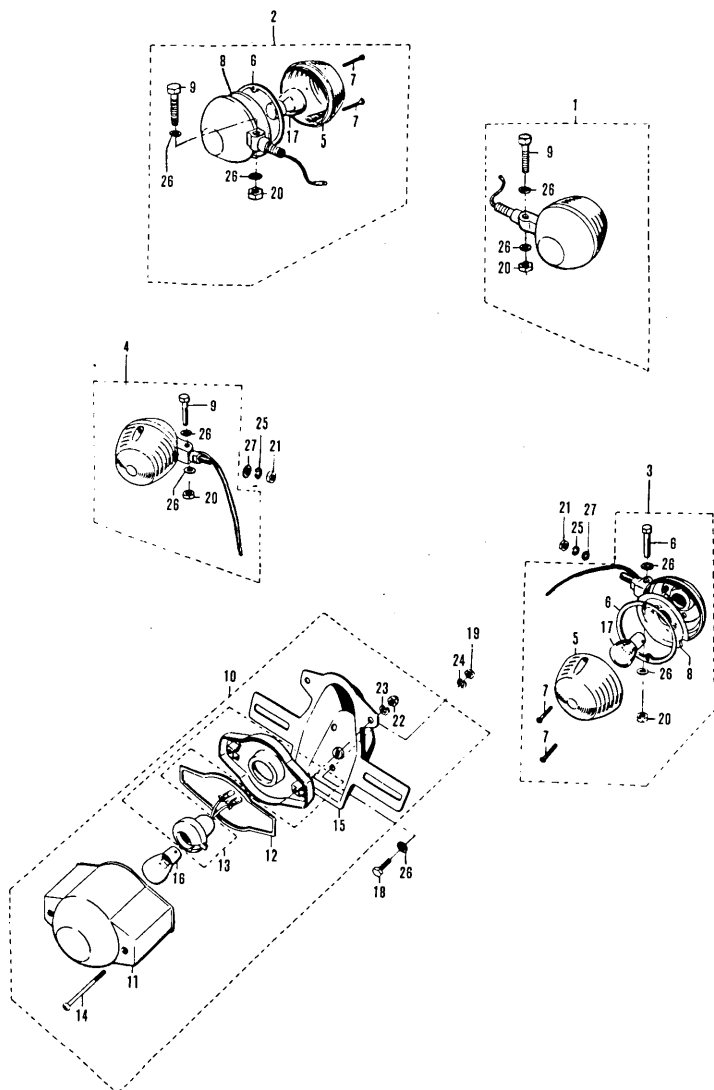


Turn Signal - Tail / Brake Lamp

Ref.No.	Part No.	Description	Q'ty		Remarks
			A100	AS100	
1	35601-03610	RH Turn Signal Ass'y	1	1	6V,21cp
2	35602-03610	LH Front Turn Signal	1	1	6V,21cp
3	35603-12610	RH Rear Turn Signal	1	1	6V,21cp
4	35604-12610	LH Rear Turn Signal	1	1	6V,21cp
5	35612-12611	Turn Signal Lens	4	4	
6	35613-03610	Turn Signal Lens Gasket	4	4	
7-1	★ 35623-12611	Turn Signal Lens Screw	8	8	
7-2	35623-12610	Turn Signal Lens Screw	8	8	
8	35624-03610	Turn Signal Lamp Reflector	4	4	
9	35625-12610	Turn Signal Bolt	4	4	
10	35710-12610	Tail / Brake Lamp Ass'y	1	1	6V,3/21cp
11	35712-11011	Tail / Brake Lamp Lens	1	1	
12	35713-11010	Tail / Brake Lamp Lens	1	1	
13	35715-11012	Gasket Tail / Brake Lamp Socket	1	1	
14-1	★ 35723-03312	Tail / Brake Lamp Lens	2	2	
14-2	35723-03310	Screw Tail / Brake Lamp Lens	2	2	
15	35726-11012	Screw Tail / Brake Lamp Bracket	1	1	
16	09471-06009	Tail / Brake Lamp Bulb	1	1	6V,3/21cp
17	09471-06011	Turn Signal Lamp Bulb	4	4	6V,21cp
18	01111-06128	Hexagon Bolt	3	3	
19	08311-11068	Hexagon Nut	3	3	
20	08311-31068	Hexagon Nut	4	4	
21	08312-11088	Small Hexagon Nut	2	2	
22-1	★ 08313-11047	Crown Nut	4	4	
22-2	08313-11042	Crown Nut	4	4	

Note; Asterisk (★) indicates Parts with ISO thread changed in its Pitch by adopting ISO standard.



Turn Signal - Tail / Brake Lamp

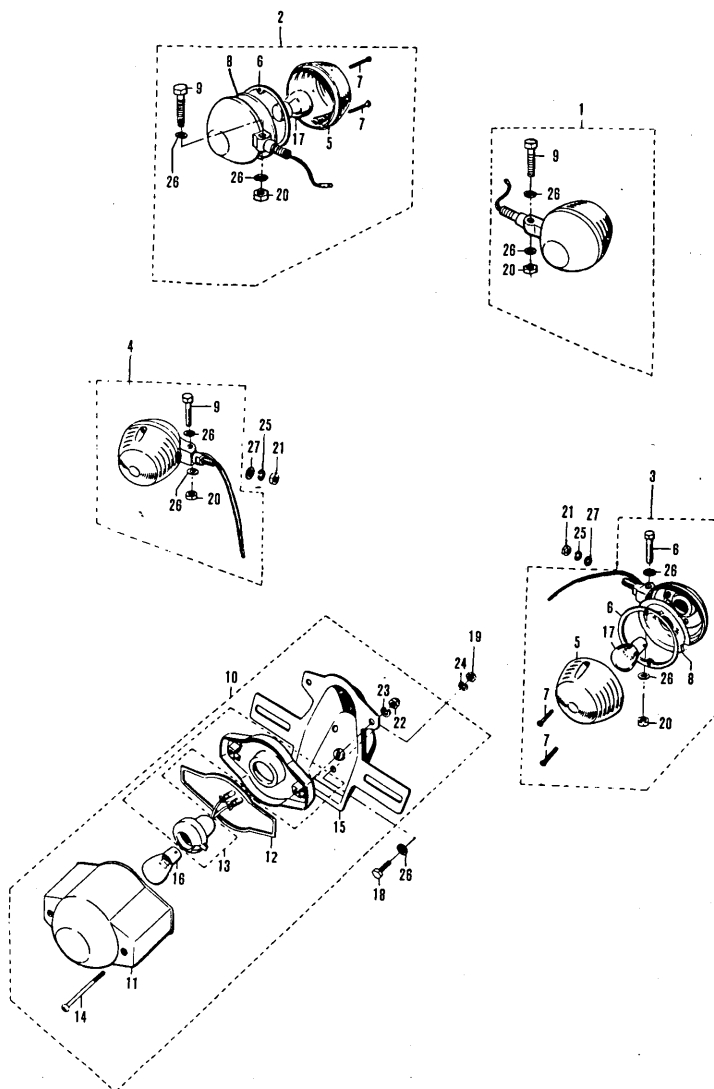

Turn Signal - Tail / Brake Lamp

Ref.No.	Part No.	Description	Q'ty		Remarks
			A100	AS100 A100-2 ASS100	
23	08321-21048	Lock Washer	2	2	
24	08321-21068	Lock Washer	3	3	
25	08321-21088	Lock Washer	2	2	
26	08322-21068	Flat Washer	11	11	
27	08322-21088	Flat Washer	2	2	




Tool Set

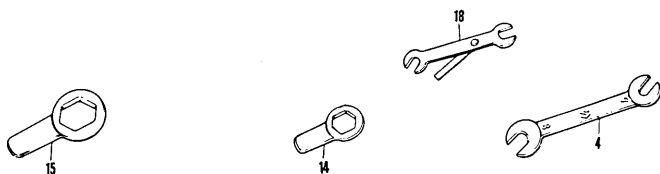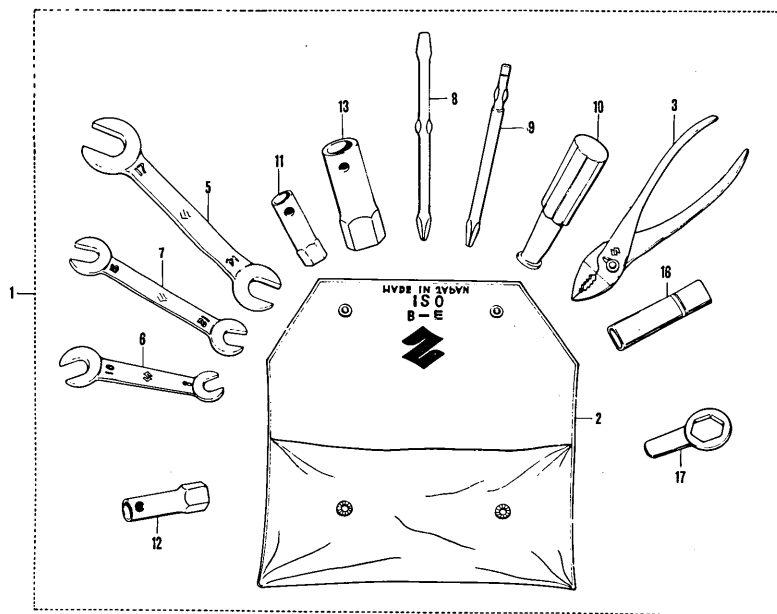

Tool Set

Ref.No.	Part No.	Description	Q'ty				Remarks
			A100	AS100	A100-1	AS5100	
1	09800-00118	Tool Set	1	1	1	1	
2	09811-00115	Tool Bag	1	1	1	1	
3	09812-00001	135mm Pliers	1	1	1	1	
4	09813-00001	8X9mm Open End Wrench	1	1			
5	09813-00009	14X17mm Open End Wrench	1	1	1	1	
6	09813-00020	8X10mm Open End Wrench	1	1	1	1	
7	09813-00021	12X13mm Open End Wrench	1	1	1	1	
8	09814-00001	Combination Screw Driver	1	1	1	1	Small Size (#2)
9	09814-00004	Cross Screw Driver	1	1	1	1	Big Size (#3)
10	09814-00007	Driver Grip	1	1	1	1	
11	09816-00001	10mm Box Wrench	1	1	1	1	
12	09816-00004	14mm Box Wrench	1	1	1	1	
13	09816-00007	21mm Box Wrench	1	1	1	1	
14	09817-00001	19mm Offset Wrench	1	1			
15	09817-00003	23mm Offset Wrench	1	1			
16	09817-00005	Wrench Handle	1	1	1	1	
17	09817-00103	22mm Offset Wrench	1	1	1	1	
18	09930-20111	Point Wrench	1	1	1	1	OPT

SUZUKI SPORTS AS100

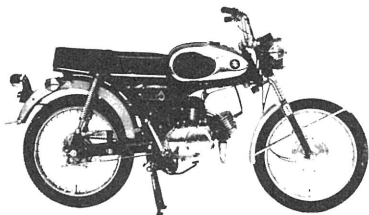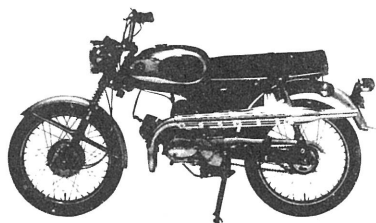


This parts catalogue contains parts used only on the Suzuki Sport AS100 Parts which are interchangeable with those of the Suzuki A100 are not included in this parts catalogue.

Refer to the Suzuki A100 parts catalogue for parts not included in this parts catalogue.

Note: The Suzuki Sport AS100 is based on the Suzuki A100, but Muffler, Front Fork, Rear Swinging Arm, etc., have been redesigned to make it a sport machine.



Muffler - Center Stand - Brake Pedal - Front Fork

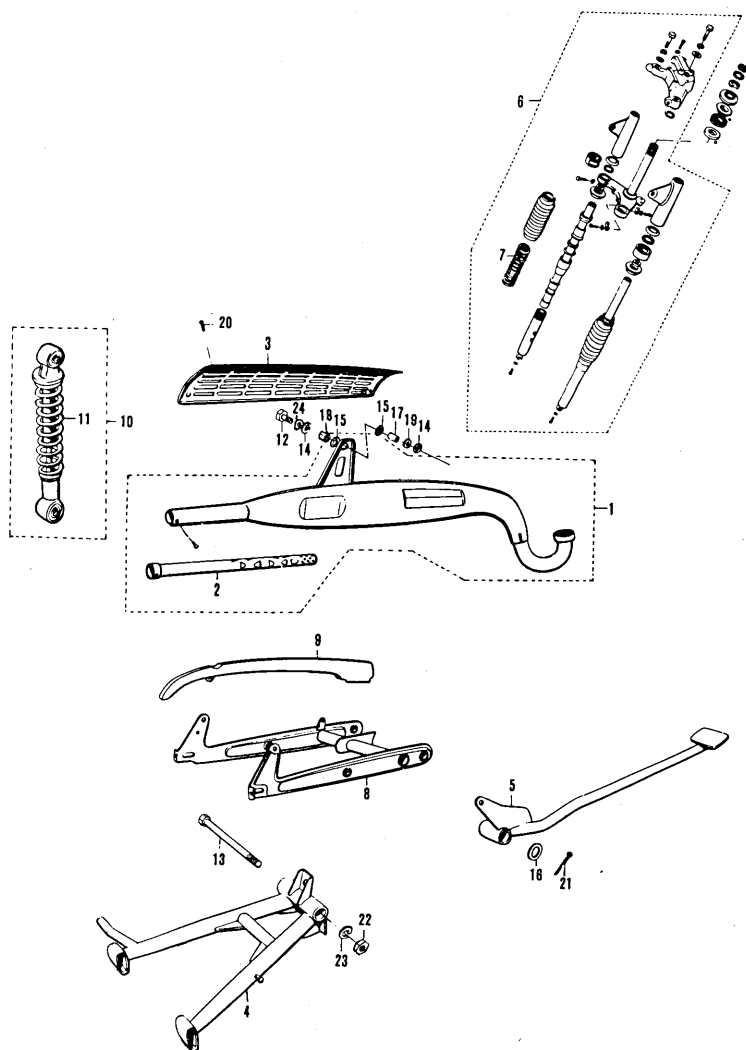

Muffler - Center Stand - Brake Pedal - Front Fork

Ref.No.	Part No.	Description	Q'ty	Remarks
1	14301-12700	Muffler Ass'y	1	
2	14510-12700	Muffler Baffle Pipe	1	
3	14781-12700	Muffler Cover	1	
4	42100-12700	Center Stand	1	
5	43110-12700	Brake Pedal	1	
6-1	51100-12700-019	Front Fork Ass'y	1	
6-2	51100-12700-061	Front Fork Ass'y	1	
6-3	51100-12700-075	Front Fork Ass'y	1	
7	51171-12700	Front Fork Spring	2	31.5X38.5X142.7(1.24X1.52 X5.12)
8-1	61101-03843-019	Rear Swinging Arm	1	
8-2	61101-03843-061	Rear Swinging Arm	1	
8-3	61101-03843-075	Rear Swinging Arm	1	
9	61310-01601	Chain Case	1	
10	62100-12700	Rear Shock Absorber Ass'y	2	
11	62211-01611	Rear Shock Absorber Spring	2	24.5X35.5X221.5(0.90X1.40 X8.72)
12	09100-08051	Muffler Bolt	1	
13	09100-10018	Center Stand Bolt	1	
14	09160-08006	Muffler Washer	2	8.5X28X2(0.33X1.10X0.08)
15	09160-12020	Muffler Washer	2	12.5X27X1.6(0.49X1.06X0.06)
16	09160-15002	Brake Pedal Washer	1	15.5X26X2.3(0.61X1.02X0.09)
17	09180-08025	Muffler Fitting Spacer	1	8X12X23.2(0.31X0.47X0.91)
18	09320-13002	Muffler Shock Damper	1	13X30X5(0.51X1.18X0.20)
19	09320-13003	Muffler Shock Damper	1	13X30X10(0.51X1.18X0.39)
20	02111-06087	Cross Head Screw	5	
21	04111-30258	Cotter Pin	1	
22	08312-11108	Small Hexagon Nut	1	
23	08321-21108	Lock Washer	1	
24	08323-21088	Lock Washer	1	

SUZUKI A100 - 2

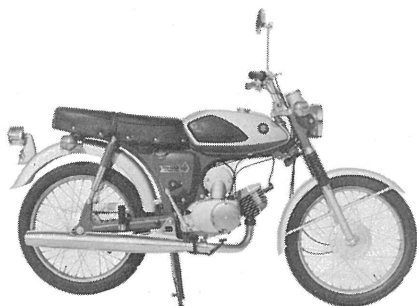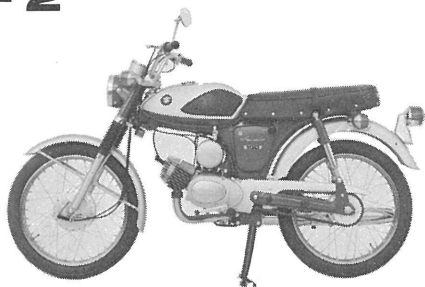


A100-2

Foreword

This parts catalogue contains parts used only on the Suzuki A100-2. Parts which are interchangeable with those of the Suzuki A100 are not included in this parts catalogue. Refer to the Suzuki A100 parts catalogue for parts not included in this parts catalogue.

Note : The Suzuki A100-2 is based on the Suzuki A100, but Carburetor Gear Shifting Turn Signal, Frame, Fuel Tank, Front Fork Wheel, etc have been redesigned.

Cylinder Head - Crankcase -over - Carburetor - Muffler

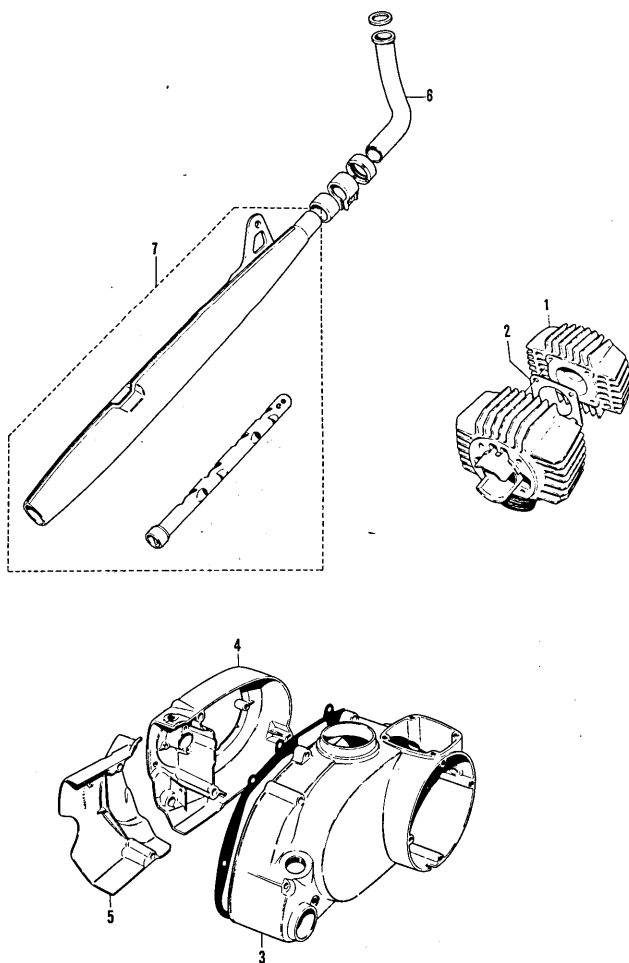

Cylinder Head - Crankcase Cover - Carburetor - Muffler


Ref.No.	Part No.	Description	Q'ty	Remarks
1	11111-12400	Cylinder Head	1	
2	11141-12400	Cylinder Head Gasket	1	
3	11341-12003	Crankcase RH Cover	1	
4	11351-12002	Crankcase LH Cover	1	
5	11361-12001	Engine Sprocket Cover	1	
6	14151-12100	Exhaust Pipe	1	
7	14301-12101	Muffler Ass'y	1	

Gear Shifting - Drive Chain - Kick Starter Lever

Ref.No.	Part No.	Description	Q'ty	Remarks
1	24741-12100	Countershaft Bearing Retainer	1	
2	25211-12100	Low Speed Gear Shifting Fork	1	
3	25221-12100	High Speed Gear Shifting Fork	1	
4	25311-12102	Gear Shifting Cam	1	
5-1	25340-12101	Shifting Cam Guide	1	
5-2	25340-12100	Shifting Cam Guide	1	~A100-52118
6-1	25350-12101	Shifting Cam Stopper	1	
6-2	25350-12100	Shifting Cam Stopper	1	~A100-52118
7	25370-12100	Shifting Cam Stopper Pawl	1	
8	25380-12130	Shifting Cam Stopper Plate	1	
9	25510-12100	Shifting Shaft Comp.	1	
10	25600-05101	Gear Shifting Lever Ass'y	1	
11	26300-12100	Kick Starter Lever Ass'y	1	
12	27600-12010	Drive Chain Ass'y	1	#428X106L
13	09160-06022	Shifting Cam Stopper Washer	1	
14	09209-04006	Shifting Cam Stopper Pin	1	
15	09261-04003	Shifting Cam Pin	3	
16	09444-26005	Shifting Shaft Return Spring	1	
17	02121-06168	Cross Head Screw	2	
18	08332-11059	E Ring	1	

Note; When changing Gear Shifting Cam on the machines up to E.No.A100-52118, Shifting Cam Guide (25340-12101) and Shifting Cam Stopper (25350-12101) are needed together.

Speedometer - Speedometer Cable - Headlamp (01d Type)

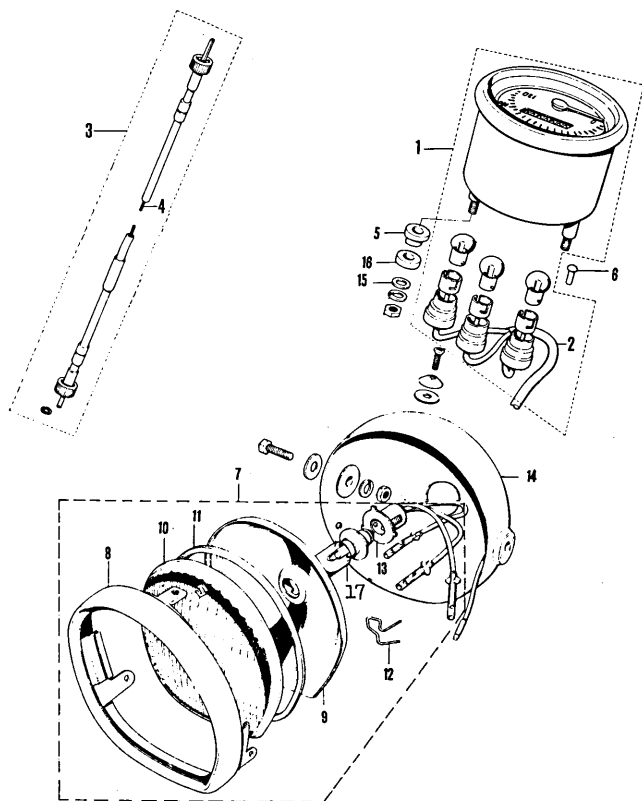


Speedometer - Speedometer Cable - Headlamp (Old Type)

Ref.No.	Part No.	Description	Q'ty	Remarks
1-1	34100-12620	Speedometer Ass'y	1	Mile
1-2	34100-12310	Speedometer Ass'y	1	Kilo
2	34170-05110	Speedometer Lamp Socket Ass'y	1	
3	34910-12330	Speedometer Cable Ass'y	1	L.=800(31.45)
4	34911-12330	Speedometer Inner Cable	1	L.=800(31.45)
5	34955-05100	Speedometer Upper Buffer	2	
6	34957-05100	Speedometer Rear Buffer	1	
7	35100-12170	Headlamp Ass'y	1	
8	35111-12170	Headlamp Rim	1	
9	35123-11071	Headlamp Reflector	1	
10	35124-11071	Headlamp Lens	1	
11	35125-11070	Headlamp Lens Gasket	1	
12	35128-11071	Headlamp Clamp Spring	3	
13	35171-05170	Headlamp Socket	1	
14-1	51810-12100-019	Headlamp Housing	1	
14-2	51810-12100-078	Headlamp Housing	1	
14-3	51810-12100-079	Headlamp Housing	1	
15	09160-05006	Speedometer Washer	2	5.5X18X1.6(0.22X0.71X0.63)
16	09320-08004	Speedometer Lower Buffer	2	
17	09471-06015	Headlamp Bulb	1	6V,25/25W

Note; The parts listed above are provided on the machines made up to E.No.A100-52505.


Speedometer Cable - Headlamp

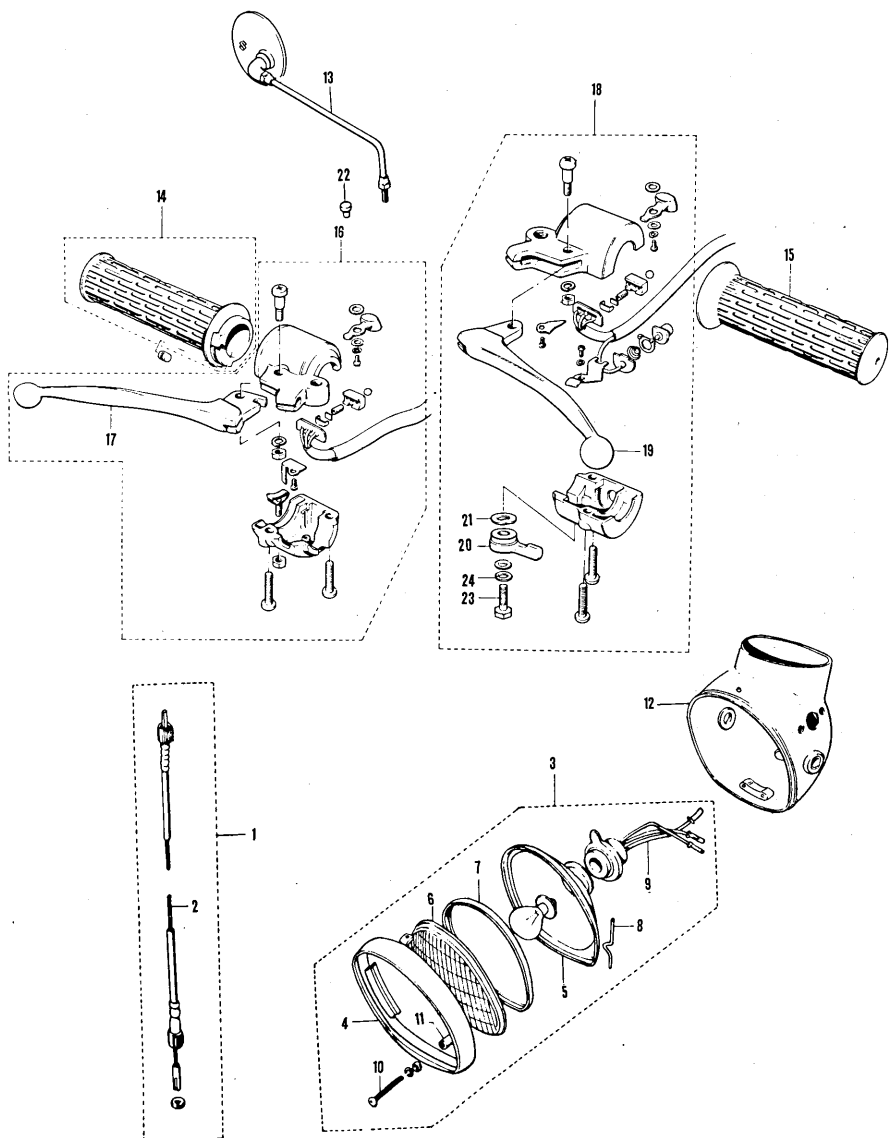

Speedometer Cable - Headlamp

Ref.No.	Part No.	Description	Q'ty	Remarks
1	34910-07100	Speedometer Cable Ass'y	1	L.=760(29.92)
2	34911-07001	Speedometer Inner Cable	1	L.=760(29.92)
3	35100-07031	Headlamp Ass'y	1	
4	35111-11031	Headlamp Rim	1	
5	35123-11030	Headlamp Reflector	1	
6	35124-11030	Headlamp Lens	1	
7	35125-11030	Headlamp Lens Gasket	1	
8	35128-11030	Headlamp Clamp Spring	3	
9	35171-11032	Headlamp Socket	1	
10	35181-11612	Headlamp Screw	1	
11	35189-11031	Headlamp Spacer	1	
12-1	51810-07001-019	Headlamp Housing	1	
12-2	51810-07001-078	Headlamp Housing	1	
12-3	51810-07001-079	Headlamp Housing	1	
13	56500-19600	Rear View Mirror Ass'y	1	A100-54055~
14	57110-20010	Throttle Grip Ass'y	1	A100-54055~ For 22φ Handlebar
15	57211-20010	LH Grip	1	A100-54055~ For 22φ Handlebar
16	57300-20710	RH Switch Ass'y	1	A100-54055~ For 22φ Handlebar
17	57421-20010	Brake Lever	1	A100-54055~
18-1	57500-21010	LH Switch Ass'y	1	For 22φ Handlebar
18-2	57500-05701	LH Switch Ass'y	1	~A100-54054 For 19φ Handlebar
19	57621-20010	Clutch Lever	1	A100-54055~
20	58721-03011	Starter Lever	1	
21	58722-03010	Starter Lever Washer	1	10.5X21X0.6(0.41X0.83X0.02)
22	09250-06001	Rear View Mirror Plug	1	A100-54055~
23	01111-06128	Hexagon Bolt	1	
24	08321-21068	Lock Washer	1	


Turn Signal - Tail / Brake Lamp - Main Wiring Harness

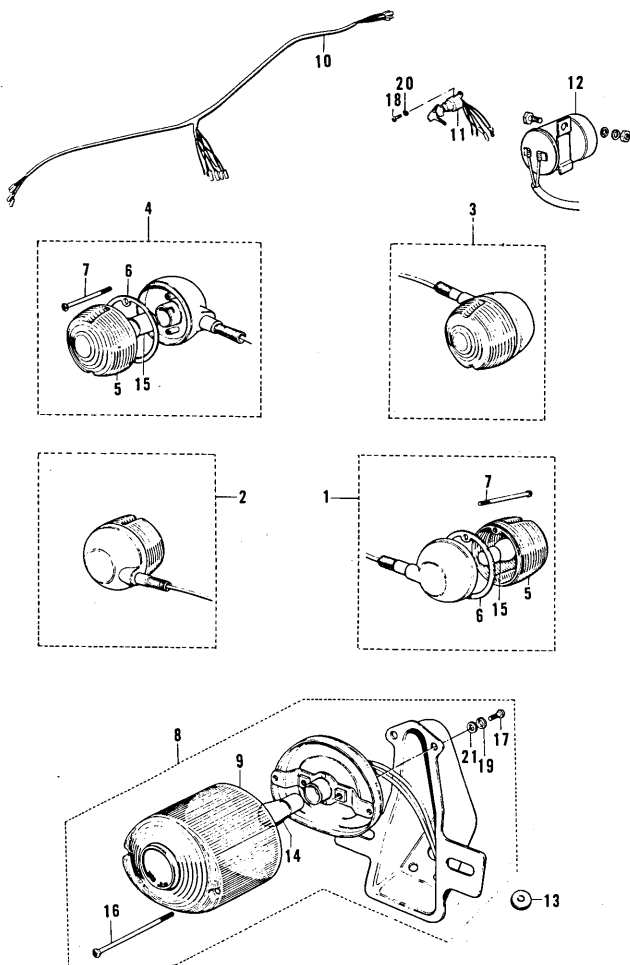

Turn Signal - Tail / Brake Lamp - Main Wiring Harness

Ref.No.	Part No.	Description	Q'ty	Remarks
1-1	35601-05112	RH Front Turn Signal Ass'y	1	6V,8W Chrome-plated
1-2	35601-05111	RH Front Turn Signal Ass'y	1	6V,8W Pearl-metallic A100-54055~56876
1-3	35601-05110	RH Front Turn Signal Ass'y	1	6V,8W ~A100-54054
2-1	35602-05112	LH Front Turn Signal Ass'y	1	6V,8W Chrome-plated
2-2	35602-05111	LH Front Turn Signal Ass'y	1	6V,8W Pearl-metallic A100-54055~56876
2-3	35602-05110	LH Front Turn Signal Ass'y	1	6V,8W ~A100-54054
3-1	35603-12312	RH Rear Turn Signal Ass'y	1	6V,8W Chrome-plated
3-2	35603-12311	RH Rear Turn Signal Ass'y	1	6V,8W Pearl-metallic A100-54055~56876
3-3	35603-12310	RH Rear Turn Signal Ass'y	1	6V,8W ~A100-54054
4-1	35604-12312	LH Rear Turn Signal Ass'y	1	6V,8W Chrome-plated
4-2	35604-12311	LH Rear Turn Signal Ass'y	1	6V,8W Pearl-metallic A100-54055~56876
4-3	35604-12310	LH Rear Turn Signal Ass'y	1	6V,8W ~A100-54054
5	35612-06110	Turn Signal Lens	4	
6	35613-06111	Turn Signal Lens Gasket	4	
7	35623-06110	Lens Fitting Screw	8	
8-1	35710-12660	Tail / Brake Lamp Ass'y	1	6V,3/10W Chrome-plated
8-2	35710-12111	Tail / Brake Lamp Ass'y	1	6V,3/10W Pearl-metallic
9	35712-06110	Tail / Brake Lamp Lens	1	
10	36610-05100	Main Wiring Harness	1	
11	37110-05110	Ignition Switch Ass'y	1	
12	38610-12110	Turn Signal Relay	1	
13	09308-12003	Tail / Brake Lamp Grommet	1	
14	09471-06008	Tail / Brake Lamp Bulb	1	6V,3/10W


Turn Signal - Tail / Brake Lamp - Main Wiring Harness

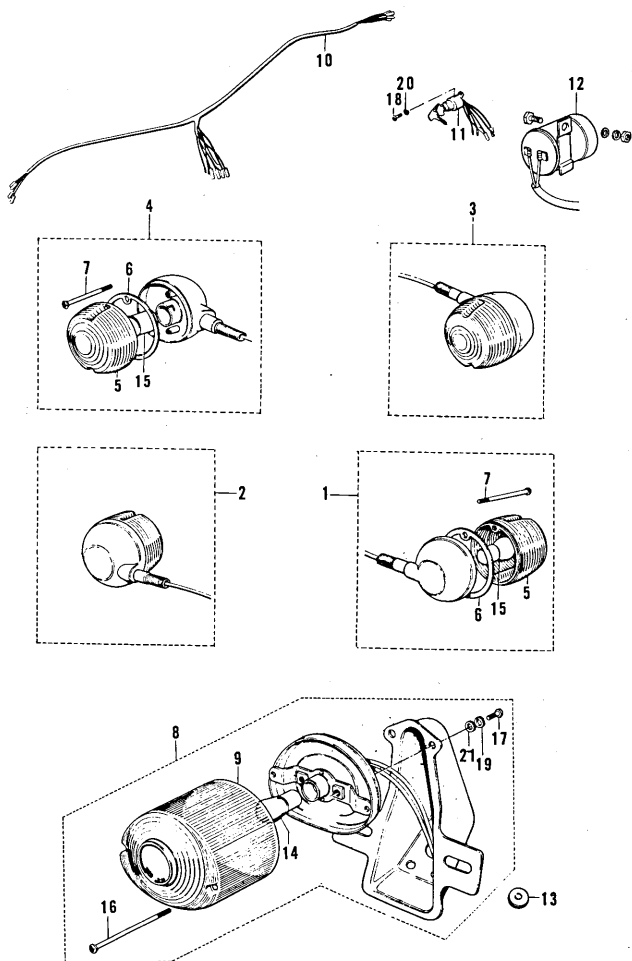

Turn Signal - Tail / Brake Lamp - Main Wiring Harness

Ref.No.	Part No.	Description	Q'ty	Remarks
15	09471-06021	Turn Signal Lamp Bulb	4	6V,8W
16	02111-04558	Cross Head Screw	2	
17	02111-05128	Cross Head Screw	2	
18	02111-06088	Cross Head Screw	2	
19	08321-21058	Lock Washer	2	
20	08321-21068	Lock Washer	2	
21	08322-21058	Flat Washer	2	


Frame - Center Stand - Fuel Tank - Oil Tank

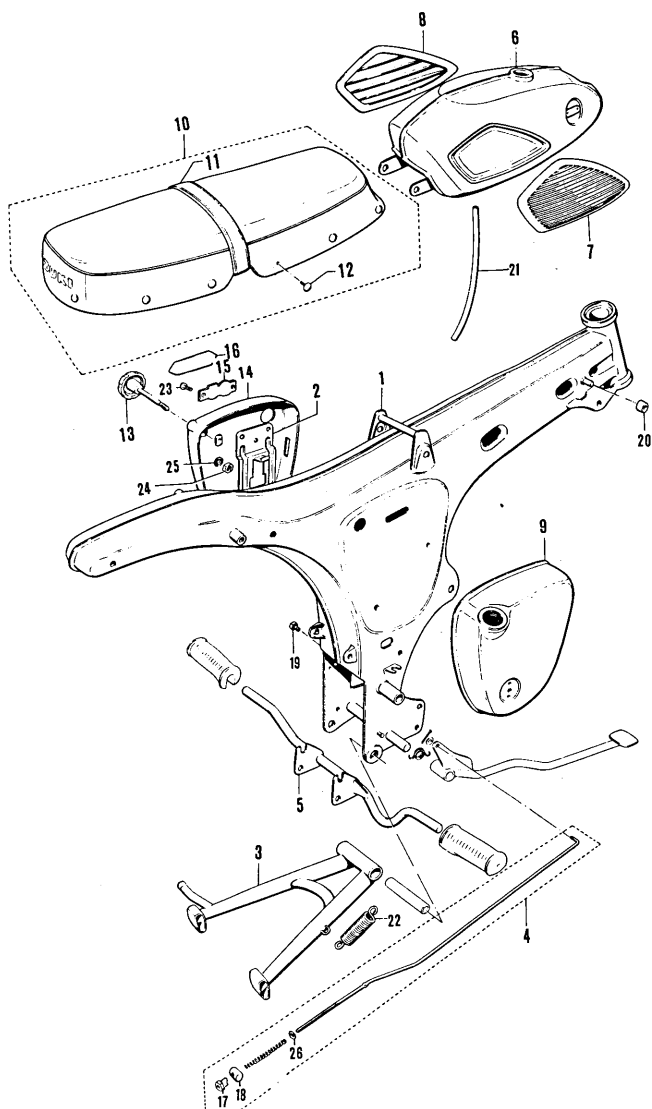

Frame - Center Stand - Fuel Tank - Oil Tank

Ref.No.	Part No.	Description	Q'ty	Remarks
1-1	41100-05100-019	Frame	1	
1-2	41100-05100-078	Frame	1	
1-3	41100-05100-079	Frame	1	
2	41540-05100	Battery Holder	1	
3	42100-12100	Center Stand	1	
4-1	43300-21201	Brake Rod Ass'y	1	6screw
4-2	43300-12100	Brake Rod Ass'y	1	5screw ~ A100-53922
5	43510-12100	Front Footrestbar	1	
6-1	44110-05100-676	Fuel Tank	1	
6-2	44110-05100-681	Fuel Tank	1	
6-3	44110-05100-678	Fuel Tank	1	
7	44251-05100	RH Knee Grip	1	
8	44252-05100	LH Knee Grip	1	
9-1	44610-05100-019	Oil Tank	1	
9-2	44610-05100-078	Oil Tank	1	
9-3	44610-05100-079	Oil Tank	1	
10	45100-12100	Dual Seat Ass'y	1	
11	45180-12100	Dual Seat Passenger Strap	1	
12	45194-05100	Seat Leather Rivet	12	
13	47130-01000	Frame LH Cover Knob	1	
14-1	47211-12100-019	Frame LH Cover	1	
14-2	47211-12100-078	Frame LH Cover	1	
14-3	47211-12100-079	Frame LH Cover	1	
15	68133-12001	100 Emblem	1	


Frame - Center Stand - Fuel Tank - Oil Tank

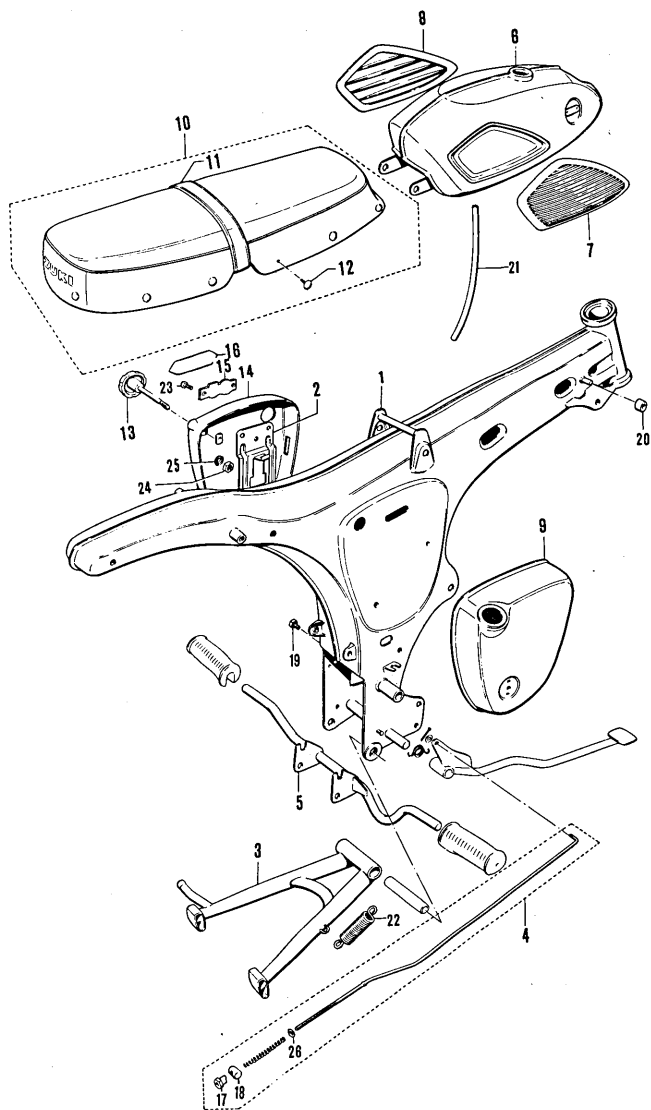

Frame - Center Stand - Fuel Tank - Oil Tank

Ref.No.	Part No.	Description	Q'ty	Remarks
16	68141-12600	Frame Cover Emblem	1	
17	09150-06001	Brake Rod Adjuster Nut	1	6screw A100-53923~
18	09209-11002	Brake Cam Lever Pin	1	O.D.=11(0.43) For 6screw, A100-53923~
19	09321-10004	Muffler Fitting Hole Plug	1	
20	09329-10003	Fuel Tank Front Damper	2	
21	09343-05021	Fuel Line	1	
22	09443-16004	Center Stand Spring	1	
23	02111-03088	Cross Head Screw	2	
24	08311-11038	Hexagon Nut	2	
25	08321-21038	Lock Washer	2	
26	08322-21068	Flat Washer	1	

Front Fork (Old Type)

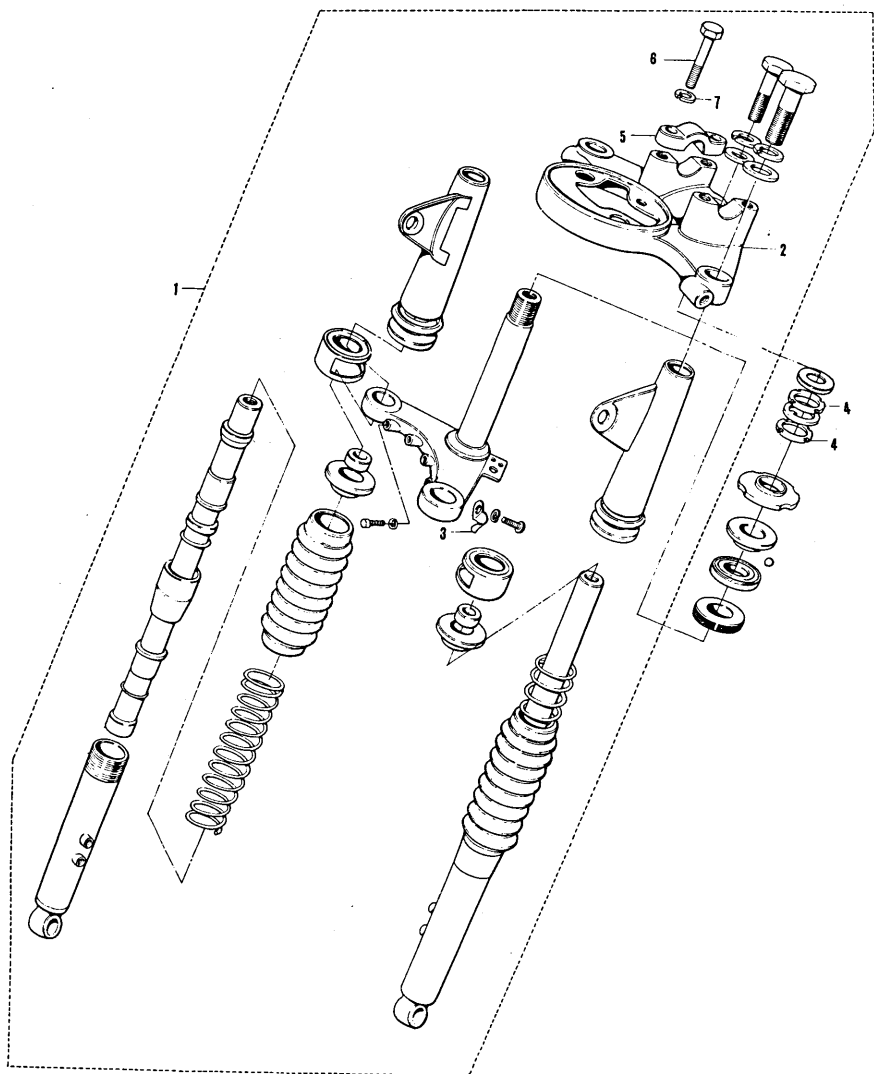


Front Fork (Old Type)

Ref.No.	Part No.	Description	Q'ty	Remarks
1-1	51100-12110-676	Front Fork Ass'y	1	
1-2	51100-12110-678	Front Fork Ass'y	1	
1-3	51100-12110-681	Front Fork Ass'y	1	
2	51311-12111	Steering Stem Head	1	
3	51453-05110	Cable Clip	1	
4	51631-05000	Steering Stem Nut	2	
5	56211-12111	Handlebar Clamp	2	
6	01221-08307	Crown Bolt	4	
7	08321-21088	Lock Washer	4	

Note; The parts listed above are provided on the machines made up to E.No.A100-52505.


Front Fork - Front Fender - Control Cable

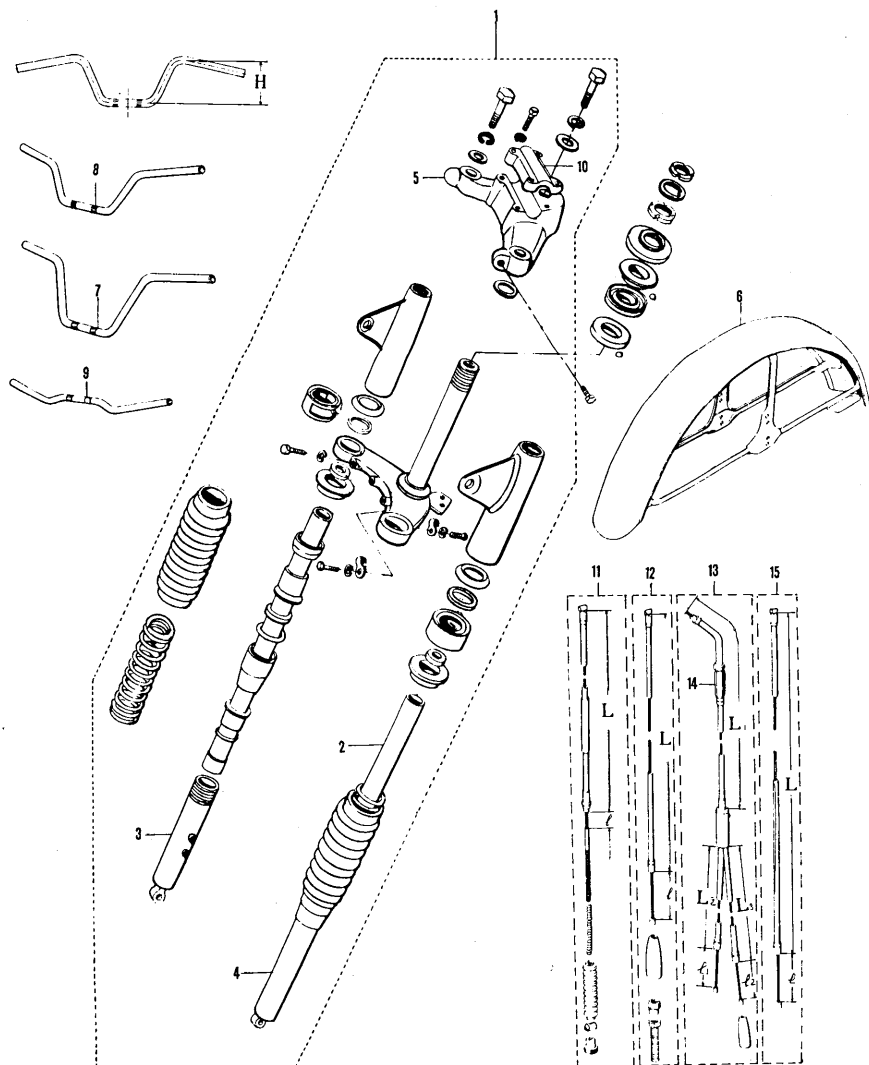

Front Fork - Front Fender - Control Cable

Ref.No.	Part No.	Description	Q'ty	Remarks
1-1	51100-12650-676	Front Fork Ass'y	1	
1-2	51100-12650-678	Front Fork Ass'y	1	
1-3	51100-12650-681	Front Fork Ass'y	1	
2	51110-12111	Fork Inner Tube	2	
3	51130-12110-126	Fork RH Outer Tube	1	
4	51140-12110-126	Fork LH Outer Tube	1	
5	51311-12650	Steering Stem Head	1	
6-1	53110-12600	Front Fender	1	Chrome-plated
6-2	53110-12610-126	Front Fender	1	
7-1	56111-12750	Handlebar	1	Western O.D.=22(0.87) H.=120(4.72) STD.
7-2	56111-12100	Handlebar	1	Western O.D.=19(0.75) H.=120(4.72) STD.~A100-54054
8-1	56111-12740	Handlebar	1	Semi Western O.D.=22(0.87) H.=60(2.36) OPT.
8-2	56111-12710	Handlebar	1	Semi Western O.D.=19(0.75) H.=60(2.36) OPT.~A100-54054
9-1	56111-12730	Handlebar	1	Flat O.D.=22(0.87) H.=35(1.38) OPT.
9-2	56111-12720	Handlebar	1	Flat O.D.=19(0.75) H.=35(1.38) OPT.~A100-54054
10	56211-11010	Handlebar Clamp	1	
11-1	58100-01741	Brake Cable Ass'y	1	For Western L.=1,070(42.13) L.=40(1.57)
11-2	58100-01761	Brake Cable Ass'y	1	For Flat & Semi Western L.=1,000(39.37), L.=40(1.57)
12-1	58200-07711	Clutch Cable Ass'y	1	For Western L.=980(38.58) L.=96(3.78)
12-2	58200-07001	Clutch Cable Ass'y	1	For Flat L.=880(34.65) L.=96(3.78)
12-3	58200-13710	Clutch Cable Ass'y	1	For Semi Western L.=920(36.22) L.=96(3.78)
13-1	58300-12100	Throttle Cable Ass'y	1	For Western L ₁ .=630(24.80) L ₂ .=250(9.84), L ₃ .=335(13.19) L ₁ .=56(2.20), L ₂ .=112(4.40)
13-2	58300-12730	Throttle Cable Ass'y	1	For Flat L ₁ .=460(18.11) L ₂ .=250(9.84), L ₃ .=335(13.19) L ₁ .=56(2.20), L ₂ .=112(4.40)
13-3	58300-12720	Throttle Cable Ass'y	1	For Semi Western L ₁ .=580 (22.83), L ₂ .=250(9.84), L ₃ .=335(13.19), L ₁ .=56(2.20) L ₂ .=112(4.40)


Front Fork - Front Fender - Control Cables

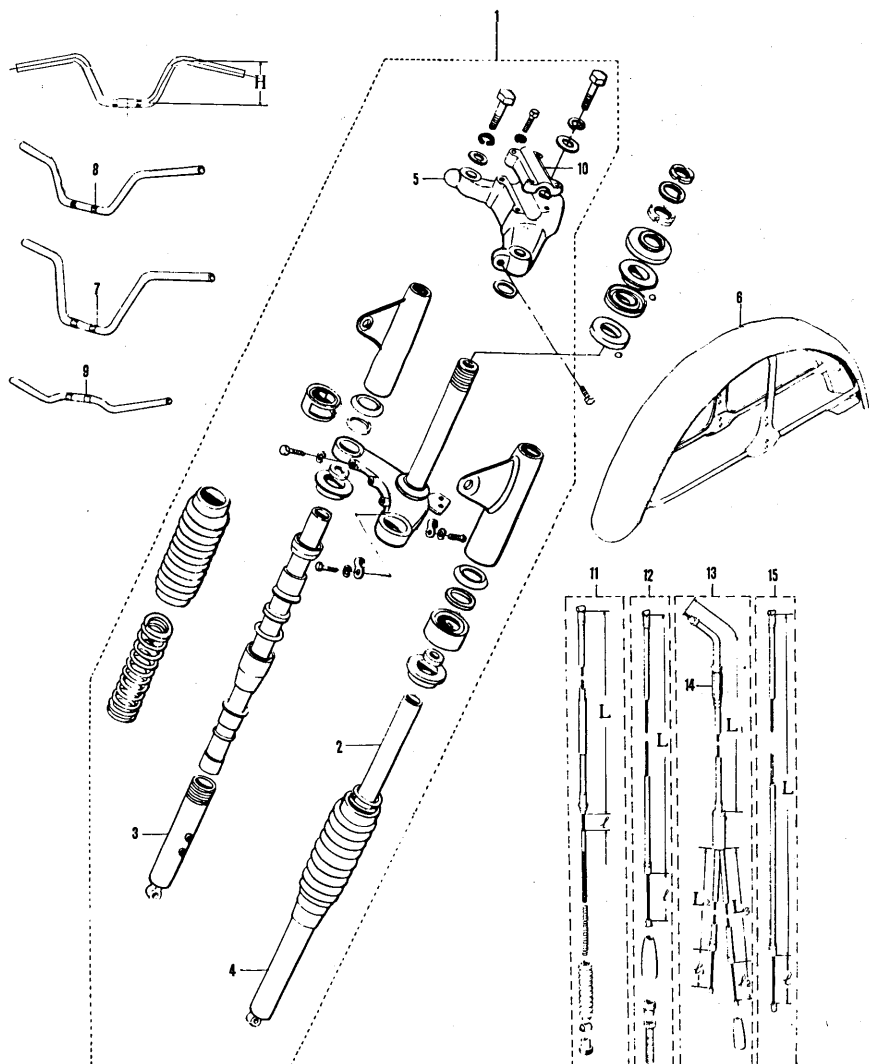

Front Fork - Front Fender - Control Cable

Ref.No.	Part No.	Description	Q'ty	Remarks
14-1	58310-12100	Handlebar Side Throttle Cable	1	For Western
14-2	58310-12730	Handlebar Side Throttle Cable	1	For Flat
14-3	58310-12720	Handlebar Side Throttle Cable	1	For Semi-Western
15-1	58410-01740	Starter Cable	1	For Western L.=870(34.25), ℓ =63(2.48)
15-2	58410-01791	Starter Cable	1	For Flat L.=750(29.53), ℓ =63(2.48)
15-3	58410-01771	Starter Cable	1	For Semi-Western L.=820(32.28), ℓ =63(2.48)


Wheel - Rear Swinging Arm - Chain Case

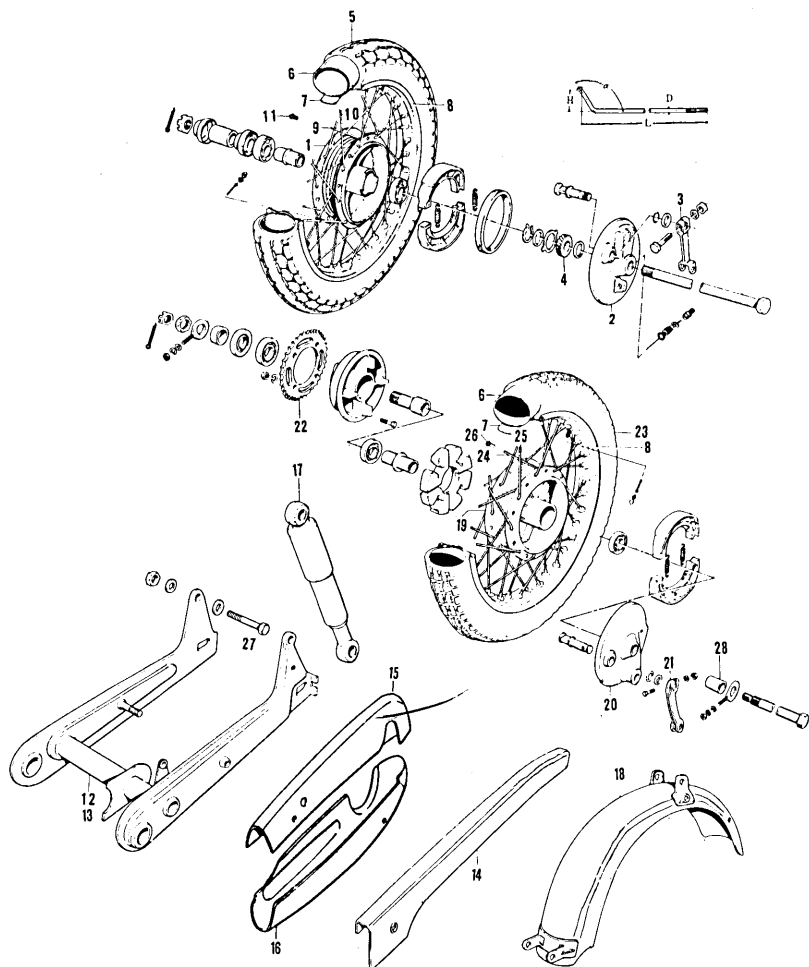

Wheel - Rear Swinging Arm - Chain Case

Ref.No.	Part No.	Description	Q'ty	Remarks
	54100-12610	Front Hub Ass'y	1	
1	54110-07000	Front Hub Drum	1	
2	54210-12002	Front Hub Panel	1	
3	54451-03001	Front Brake Cam Lever	1	
4	54611-07600	Speedometer Gear	1	
5	55100-14010	Front Tire	1	2.50-18
6	55200-14010	Inner Tube	2	2.50-18
7	55261-14010	Inner Tube Protector	2	2.50-18
8	55311-12120	Wheel Rim	2	1.40X18
	55300-12825	Front Spoke Set	1	Inc.9v11
9	55321-12120	Front Inner Spoke	18	L.=166(6.54),H.=5.4(0.21) D.=2.9(0.11), α .=102°
10	55322-12120	Front Outer Spoke	18	L.=166(6.54),H.=8.2(0.32) D.=2.9(0.11), α .=85°
11	55325-03020	Spoke Nipple	36	
12-1	61101-12832-019	Rear Swinging Arm	1	For Half Chain Case ~A100-53140
12-2	61101-12832-078	Rear Swinging Arm	1	For Half Chain Case ~A100-53140
12-3	61101-12832-079	Rear Swinging Arm	1	For Half Chain Case ~A100-53140
13-1	61101-12829-019	Rear Swinging Arm	1	For Full Chain Case
13-2	61101-12829-078	Rear Swinging Arm	1	For Full Chain Case
13-3	61101-12829-079	Rear Swinging Arm	1	For Full Chain Case
14	61310-12100-126	Chain Case Comp.	1	~A100-53140
15	61310-12600-126	Chain Case Upper Half	1	
16	61320-12600-126	Chain Case Lower Half	1	
17-1	62100-05620-019	Rear Shock Absorber	2	
17-2	62100-05620-078	Rear Shock Absorber	2	
17-3	62100-05620-079	Rear Shock Absorber	2	
18-1	63110-12620	Rear Fender	1	Chrome-plated
18-2	63110-12100-126	Rear Fender	1	


Wheel - Rear Swinging Arm - Chain Case

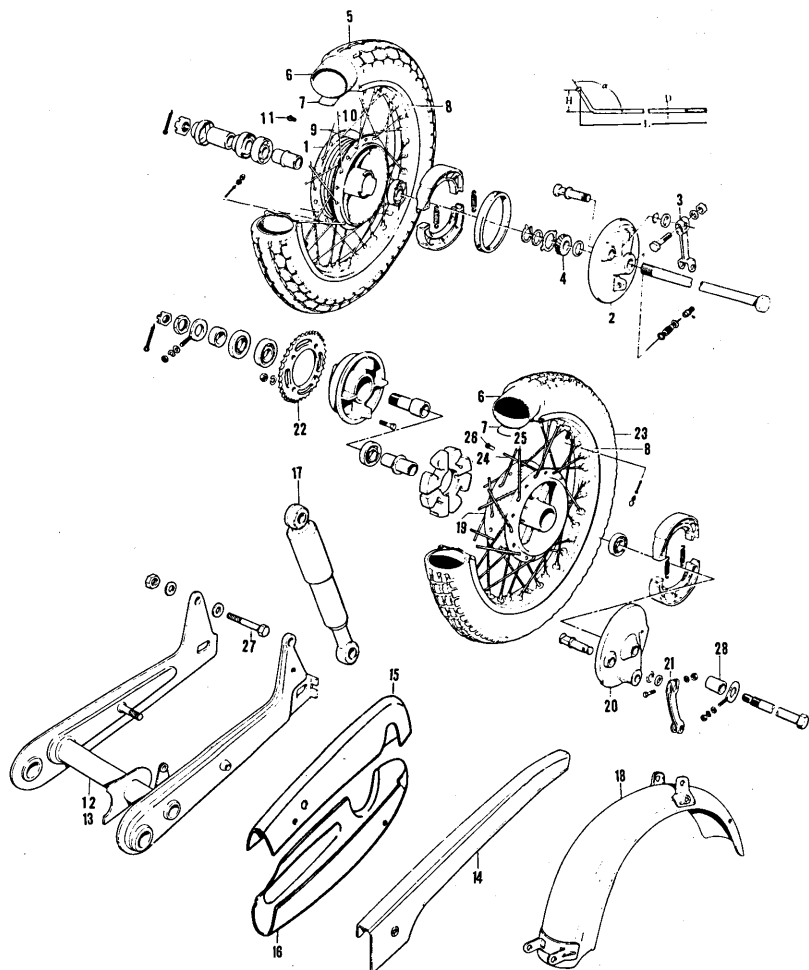

Wheel - Rear Swinging Arm - Chain Case


Ref.No.	Part No.	Description	Q'ty	Remarks
	64100-01620	Rear Hub Ass'y	1	
19	64110-10000	Rear Hub Drum	1	
20	64210-01003	Rear Hub Panel	1	
21-1	64451-20000	Rear Brake Cam Lever	1	Hole; 11.2(0.44)Φ
21-2	64451-01002	Rear Brake Cam Lever	1	Hole; 10.2(0.40)Φ ~A100-53922
22	64511-12730	Rear Sprocket	1	N.T.=34
23	65100-12110	Rear Tire	1	2.50-18
	65300-12828	Rear Spoke Set	1	Inc. 24~26
24	65321-12120	Rear Inner Spoke	18	L.=173.5(6.83), H.=6.8(0.27) D.=3.2(0.13), α.=100°
25	65322-12120	Rear Outer Spoke	18	L.=173(6.81), H.=8.3(0.33) D.=3.2(0.13), α.=84.5°
26	65325-03020	Spoke Nipple	36	
27	09100-10046	Rear Shock Absorber Lower Bolt	2	
28	09180-12005	Rear Axle Spacer	1	12.2X22X30.5(0.48X0.87X1.20)

SUZUKI A100 RACING KIT



In this parts catalogue, some necessary parts for A100 Racing Kit are listed.

Cylinder - Piston - Carburetor - Muffler - Sprocket

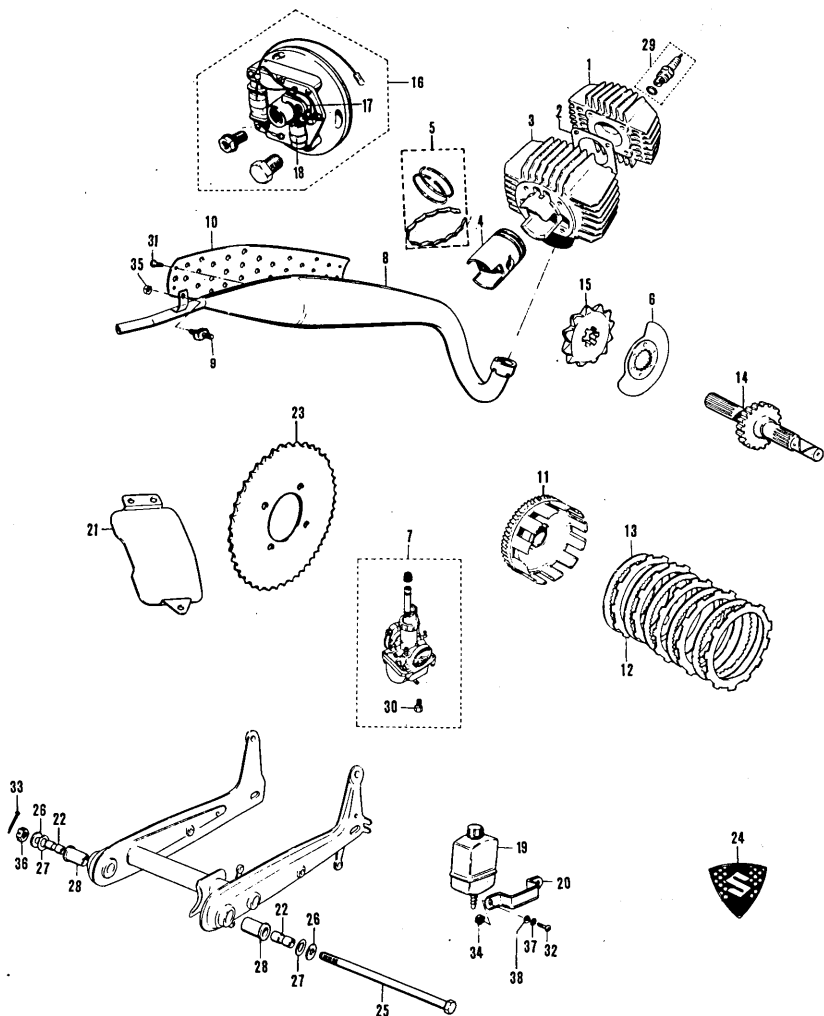


Cylinder - Piston - Carburetor - Muffler - Sprocket

Ref.No.	Part No.	Description	Q'ty	Remarks
	10000-17803	A100 Racing Kit	1	
1	11111-17400	Cylinder Head	1	
2	11141-17400	Cylinder Head Gasket	1	
3	11210-17400	Cylinder	1	
4-1	12110-17400	Piston	1	STD
4-2	12110-17410	Piston	1	OS.0.5
4-3	12110-17420	Piston	1	OS.1.0
5-1	12140-12818	Piston Ring Set	1	STD
5-2	12140-12819	Piston Ring Set	1	OS.0.5
5-3	12140-12820	Piston Ring Set	1	OS.1.0
6	12410-17400	Valve Plate Comp.	1	
7	13200-17410	Carburetor Ass'y	1	MJ.#150
8	14301-17410	Muffler	1	
9	14304-16200	Muffler Shock Damper	1	
10	14781-17000	Muffler Cover	1	
11	21200-17400	Primary Driven Gear Ass'y	1	
12	21441-07200	Clutch Drive Plate	5	
13	21451-07200	Clutch Driven Plate	5	
14	24131-17400	Drive Shaft	1	Marked R
15-1	27511-20700	Engine Sprocket	1	N.T.=14
15-2	27511-20000	Engine Sprocket	1	N.T.=15
16	32100-17020	Magneto Ass'y	1	
17	32240-17020	Contact Point Ass'y	1	
18	32341-17020	Condencer	1	
19	44610-17010	Oil Tank Ass'y	1	
20	44821-17000	Oil Tank Holder	1	
21	47211-17000	Frame LH Cover	1	
22	61251-17000	Rear Swinging Arm Spacer	2	10X18X37(0.39X0.71X1.46)

Cylinder - Piston - Carburetor - Muffler - Sprocket


Ref.No.	Part No.	Description	Q'ty	Remarks
23-1	64511-17400	Rear Sprocket	1	N.T.=26
23-2	64511-17410	Rear Sprocket	1	N.T.=27
24	68111-17000	Fuel Tank Emblem	1	
25	09101-10010	Rear Swinging Arm Shaft	1	L.=250(9.84)
26	09160-10016	Rear Swinging Arm Washer	2	10.2X28X2.3(0.40X1.10X0.09)
27	09181-18001	Rear Swinging Arm Shim	2	18.2X28X0.3(0.72X1.10X0.01)
28	09301-18002	Rear Swinging Arm Bushing	2	
29-1	09482-00032	Spark Plug Ass'y	1	NGK,B-10EN
29-2	09482-00030	Spark Plug Ass'y	1	NGK,B-9EN
30-1	09491-30001	Main Jet	1	#150 STD
30-2	09491-32001	Main Jet	1	#160 OPT
30-3	09491-28001	Main Jet	1	#140 OPT
31	02111-06088	Cross Head Screw	4	
32	02111-06128	Cross Head Screw	2	
33	04111-20258	Cotter Pin	1	
34	08311-11068	Hexagon Nut	2	
35	08312-11088	Small Hexagon Nut	1	
36	08314-11108	Hexagon Nut	1	
37	08321-21068	Lock Washer	2	
38	08322-21068	Flat Washer	2	

SUZUKI A100 MOTOCROSS KIT



In this parts catalogue, some necessary parts for A100 Motocross Kit are listed.

Cylinder - Piston - Carburetor - Muffler - Sprocket - Cables

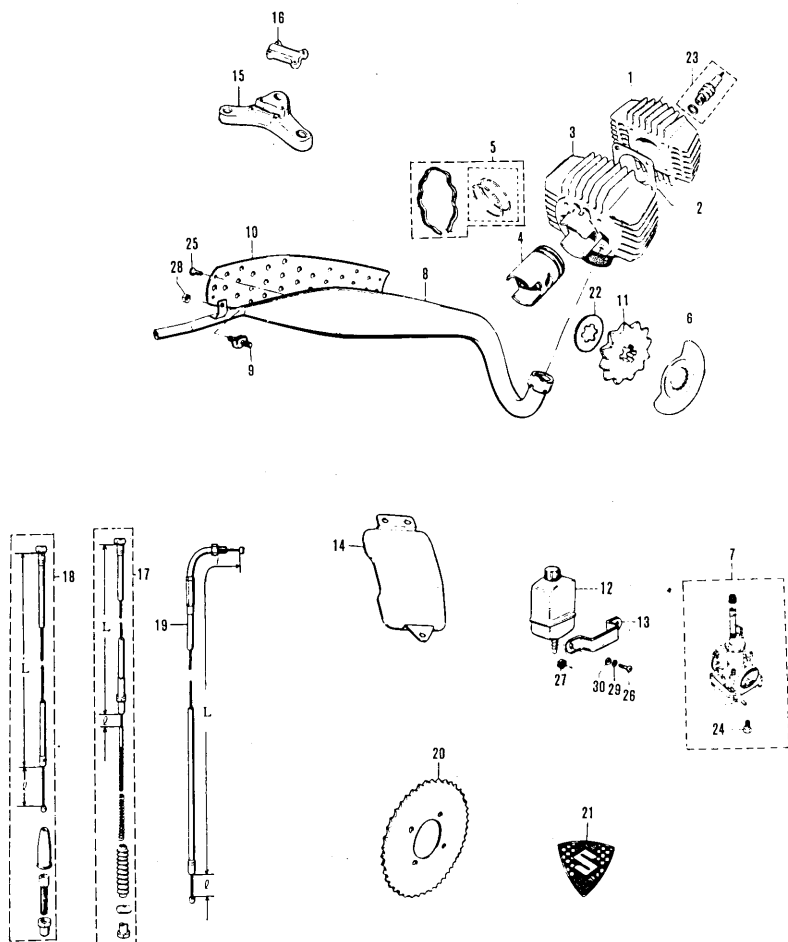


Cylinder - Piston - Carburetor - Muffler - Sprocket - Cables

Ref.No.	Part No.	Description	Q'ty	Remarks
	10000-17802	AI00 Motocross Kit	1	
1	11111-17400	Cylinder Head	1	
2	11141-17400	Cylinder Head Gasket	1	
3	11210-17400	Cylinder	1	
4-1	12110-17400	Piston	1	STD
4-2	12110-17410	Piston	1	OS.0.5
4-3	12110-17420	Piston	1	OS.1.0
5-1	12140-12818	Piston Ring Set	1	STD
5-2	12140-12819	Piston Ring Set	1	OS.0.5
5-3	12140-12820	Piston Ring Set	1	OS.1.0
6	12410-17400	Valve Plate Comp.	1	
7	13200-17410	Carburetor Ass'y	1	MJ.#150
8	14301-17410	Muffler Comp.	1	
9	14304-16200	Muffler Shock Damper	1	
10	14781-17000	Muffler Cover	1	
11	27511-08700	Engine Sprocket	1	
12	44610-17010	Oil Tank Ass'y	1	
13	44821-17000	Oil Tank Holder	1	
14	47211-17000	Frame LH Cover	1	
15	51311-17010	Handlebar Bracket	1	
16	56211-11010	Handlebar Clamp	1	
17	58100-17001	Brake Cable Ass'y	1	L.=1,020(40.16),&=60(2.36)
18	58200-17000	Clutch Cable Ass'y	1	L.=950(37.40),&=120(4.72)
19	58300-17000	Throttle Cable Ass'y	1	L.=934(36.77),&=85(3.35)
20-1	64511-17420	Rear Sprocket	1	N.T.=38
20-2	64511-17430	Rear Sprocket	1	N.T.=42
21				

AI00 Motocross

Cylinder - Piston - Carburetor - Muffler - Sprocket - Cables

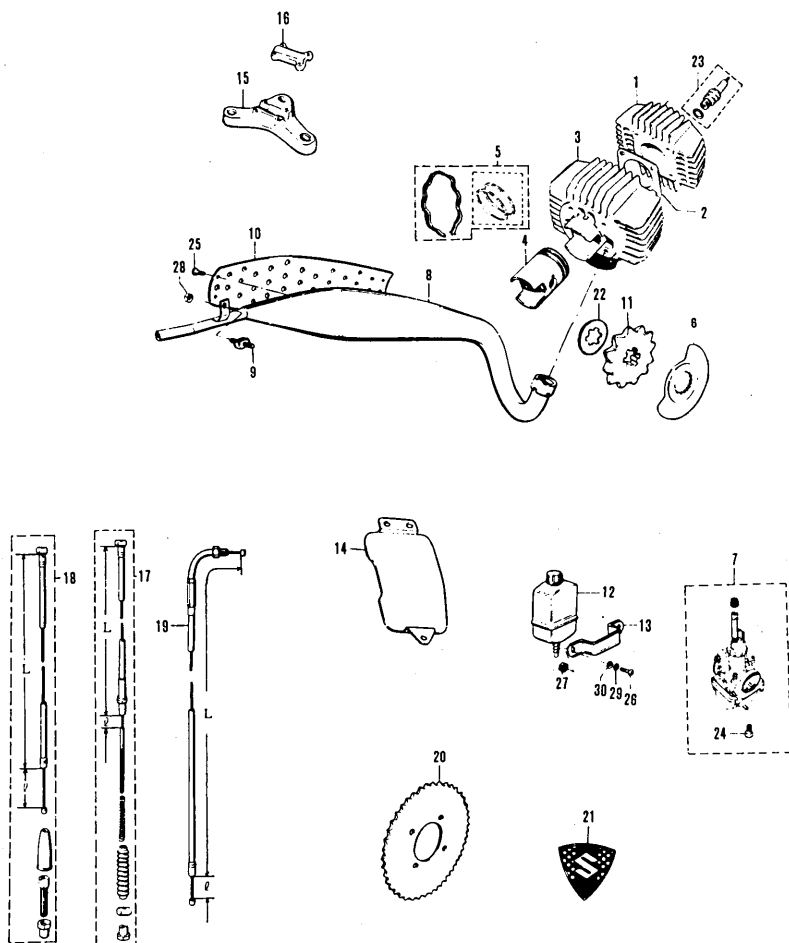

Cylinder - Piston - Carburetor - Muffler - Sprocket - Cables

Ref.No.	Part No.	Description	Q'ty	Remarks
21	68111-17000	Fuel Tank Emblem	1	
22	09167-20005	Engine Sprocket Washer	1	
23-1	09482-00027	Spark Plug Ass'y	1	NGK,B-8EN
23-2	09482-00030	Spark Plug Ass'y	1	NGK,B-9EN
24-1	09491-30001	Main Jet	1	#150 STD
24-2	09491-28001	Main Jet	1	#140 OPT
24-3	09491-32001	Main Jet	1	#160 OPT
25	02111-06088	Cross Head Screw	4	
26	02111-06128	Cross Head Screw	2	
27	08311-11068	Hexagon Nut	2	
28	08312-11088	Small Hexagon Nut	1	
29	08321-21068	Lock Washer	2	
30	08322-21068	Flat Washer	2	

SUZUKI ASS100

Foreword

This parts catalogue contains parts used on the SUZUKI ASS100.


Parts which are interchangeable with those of SUZUKI A100 are not included in this parts catalogue.

Refer to the SUZUKI A100 parts catalogue for parts not included in this parts catalogue.

Note: The SUZUKI ASS100 is similar to SUZUKI A100-2.

ASS100


Cylinder Head - Crankcase Cover - Carburetor

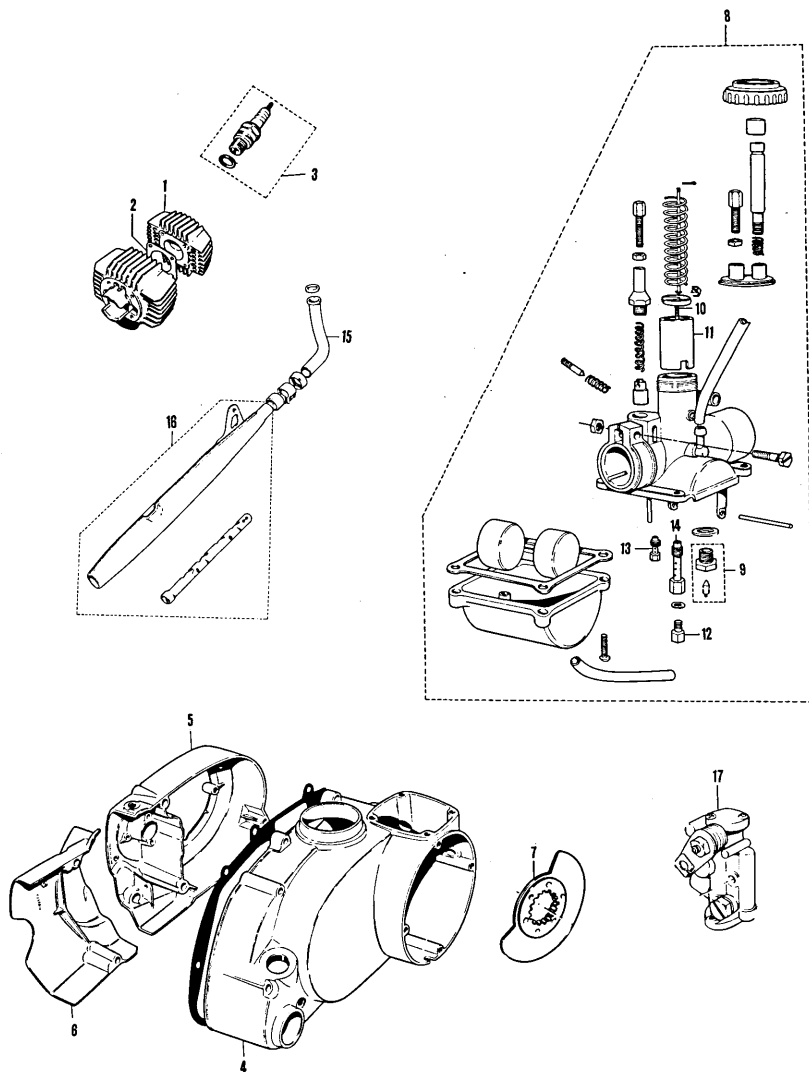

Cylinder Head - Crankcase Cover - Carburetor

Ref.No.	Part No.	Description	Q'ty	Remarks
1	11111-12400	Cylinder Head	1	
2	11141-12400	Cylinder Head Gasket	1	
3	09482-00040	Spark Plug Ass'y	1	BP-7H
4	11341-12003	Crankcase RH Cover	1	
5	11351-12002	Crankcase LH Cover	1	
6	11361-12001	Engine Sprocket Cover	1	
7	12410-12100	Valve Plate	1	
8	13200-12114	Carburetor Ass'y	1	
9	13370-12110	Needle Valve Ass'y	1	
10	13383-12110	Jet Needle	1	
11	13551-12110	Throttle Valve	1	
12	09491-32001	Main Jet	1	#160
13	09492-22001	Pilot Jet	1	#22.5
14	09494-00045	Needle Jet	1	E8
15	14151-12100	Exhaust Pipe	1	
16	14301-12101	Muffler Ass'y	1	
17	16000-12830	Oil Pump Ass'y	1	


Gear Shifting - Drive Chain - Kick Starter Lever

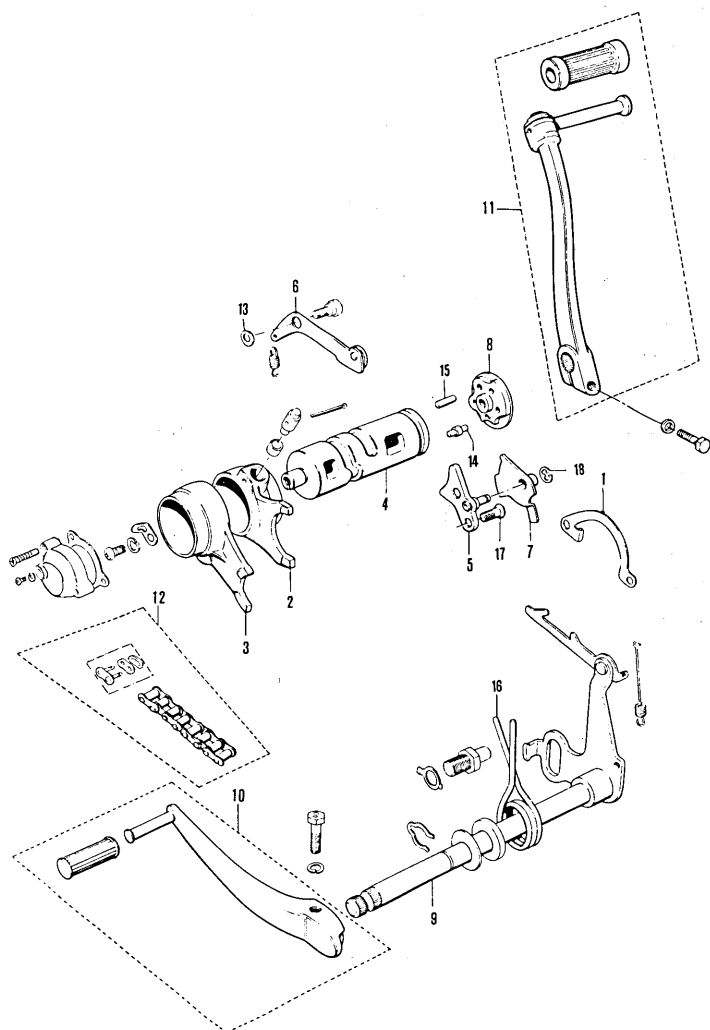

Gear Shifting - Drive Chain - Kick Starter Lever

Ref.No.	Part No.	Description	Q'ty	Remarks
1	24741-12100	Countershaft Bearing Retainer	1	
2	25211-12100	Low Speed Gear Shifting Fork	1	
3	25221-12100	High Speed Gear Shifting Fork	1	
4	25311-12102	Gear Shifting Cam	1	
5	25340-12101	Shifting Cam Guide	1	
6	25350-12101	Shifting Cam Stopper	1	
7	25370-12100	Shifting Cam Stopper Pawl	1	
8	25380-12130	Shifting Cam Stopper Plate	1	
9	25510-12100	Shifting Shaft	1	
10	25600-05101	Gear Shifting Lever Ass'y	1	
11	26300-12100	Kick Starter Lever Ass'y	1	
12	27600-12010	Drive Chain Ass'y	1	#428X106L
13	09160-06022	Shifting Cam Stopper Washer	1	
14	09209-04006	Shifting Cam Stopper Pin	1	
15	09261-04003	Shifting Cam Pin	3	
16	09444-26005	Shifting Shaft Return Spring	1	
17	02121-06168	Cross Head Screw	2	
18	08332-11059	E Ring	1	

Flywheel Magneto (NIPPON DENSO, KOKUSAN DENKI)

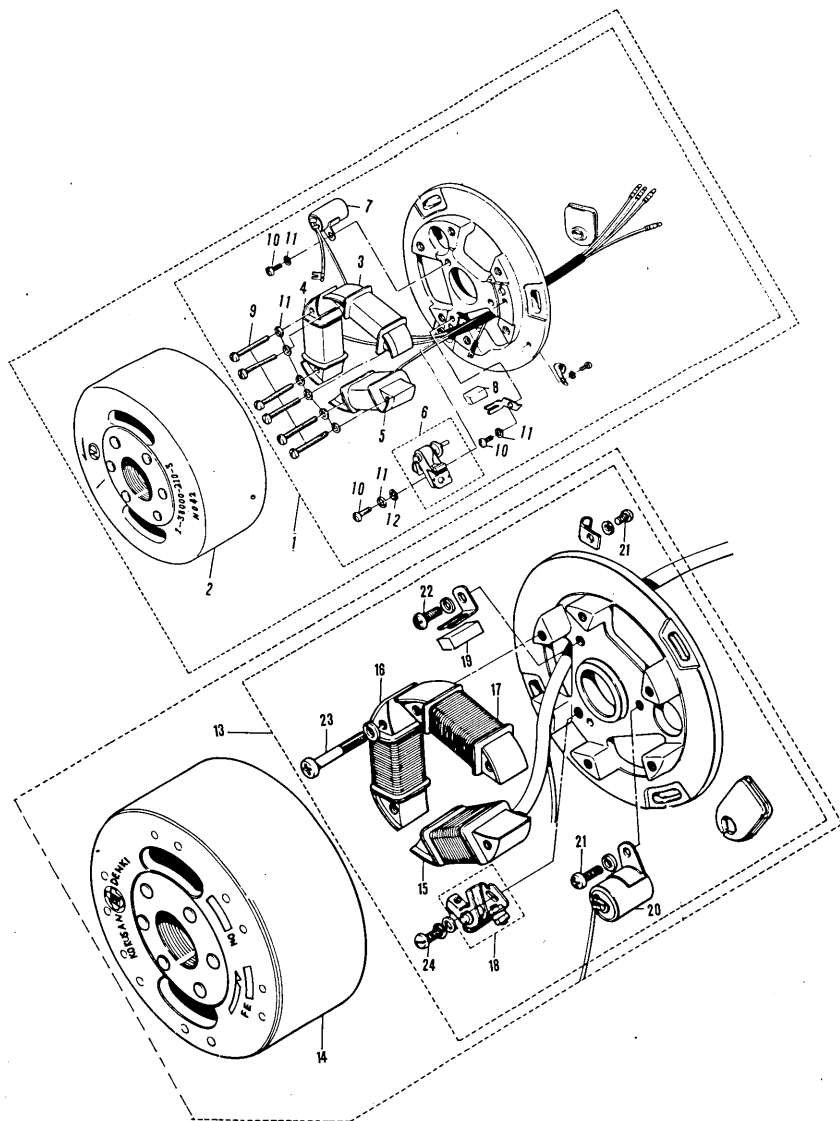


Flywheel Magneto (NIPPON DENSO,KOKUSAN DENKI)

Ref.No.	Part No.	Description	Q'ty	Remarks
1-1	32101-12012	Stator Ass'y	1	NIPPON DENSO
1-2	32101-12011	Stator Ass'y	1	~A90-32697
2	32102-12011	Flywheel Rotor	1	
3	32120-12010	Lighting Coil (A)	1	
4	32130-12010	Lighting Coil (B)	1	
5	32140-12010	Primary Coil	1	
6-1	32240-12010	Contact Point Ass'y	1	
6-2	32240-03010	Contact Point Ass'y	1	~A100-32697
7	32341-12010	Condenser	1	
8	32338-03110	Cam Oil Felt	1	
9	02111-04308	Cross Head Screw	6	
10	02311-04108	Slotted Pan Head Screw	3	
11	08321-21048	Lock Washer	9	
12	08322-21048	Flat Washer	1	
13	32101-12020	Stator Ass'y	1	KOKUSAN DENKI
14	32102-12020	Flywheel Rotor	1	
15	32120-12020	Lighting Coil (A)	1	
16	32130-12020	Lighting Coil (B)	1	
17	32140-12020	Primary Coil	1	
18	32240-12020	Contact Point Ass'y	1	
19	32338-03020	Cam Oil Felt	1	
20	32341-12020	Condenser	1	
21	02111-04068	Cross Head Screw	2	
22	02111-04088	Cross Head Screw	1	
23	02111-04308	Cross Head Screw	6	
24	02311-04128	Slotted Pan Head Screw	1	

Note : Manufacturers of Flywheel Magneto for ASS100 have been employed
NIPPON DENSO,KOKUSAN DENKI and MITUBISHI DENKI shown in page 13.

Speedometer - Headlamp

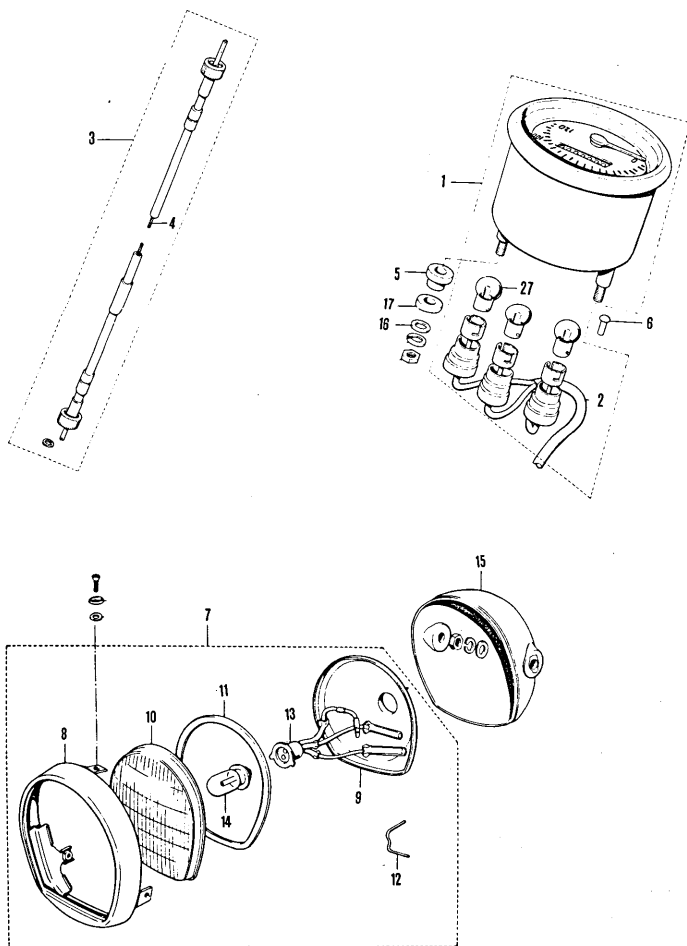


Speedometer - Headlamp

Ref.No.	Part No.	Description	Q'ty	Remarks
1-1	34100-12620	Speedometer Ass'y	1	Mile
1-2	34100-12310	Speedometer Ass'y	1	Kilo
2	34170-05110	Speedometer Lamp Socket	1	
3	34910-12330	Speedometer Cable Ass'y	1	L.=800(31.45)
4	34911-12330	Speedometer Inner Cable	1	L.=800(31.45)
5	34955-05100	Speedometer Upper Buffer	2	
6	34957-05100	Speedometer Rear Buffer	1	
7	35100-12120	Headlamp Ass'y	1	STANLEY
8-1	35111-12120	Headlamp Rim	1	STANLEY
8-2	35111-12170	Headlamp Rim	1	HIROSE
9-1	35123-12120	Headlamp Reflector	1	STANLEY
9-2	35123-11071	Headlamp Reflector	1	HIROSE
10-1	35124-11020	Headlamp Lens	1	STANLEY
10-2	35124-11071	Headlamp Lens	1	HIROSE
11-1	35125-11020	Headlamp Lens Gasket	1	STANLEY
11-2	35125-11070	Headlamp Lens Gasket	1	HIROSE
12-1	35128-03611	Headlamp Clamp Spring	3	STANLEY
12-2	35128-11071	Headlamp Clamp Spring	3	HIROSE
13-1	35171-12020	Headlamp Socket	1	STANLEY
13-2	35171-05170	Headlamp Socket	1	HIROSE
14-1	09471-06024	Headlamp Bulb	1	STANLEY, 6V,25/25W
14-2	09471-06015	Headlamp Bulb	1	HIROSE, 6V,25/25W
15-1	51810-12100-019	Headlamp Housing	1	
15-2	51810-12100-061	Headlamp Housing	1	
15-3	51810-12100-002	Headlamp Housing	1	
15-4	51810-12100-078	Headlamp Housing	2	
16	09160-05006	Speedometer Washer	2	5.5X18X1.6(0.22X0.71X0.06)
17	09320-08004	Speedometer Lower Buffer	2	

Turn Signal - Tail / Brake Lamp - Main Wiring Harness

Ref.No.	Part No.	Description	Q'ty	Remarks
1	35601-05110	RH Front Turn Signal Ass'y	1	
2	35602-05110	LH Front Turn Signal Ass'y	1	
3	35603-12310	RH Rear Turn Signal Ass'y	1	
4	35604-12310	LH Rear Turn Signal Ass'y	1	
5	35612-06110	Turn Signal Lens	4	
6	35613-06111	Turn Signal Lens Gasket	4	
7	35623-06110	Lens Fitting Screw	8	
8	35710-12111	Tail / Brake Lamp Ass'y	1	
9	35712-06110	Tail / Brake Lamp Lens	1	
10	36610-05100	Main Wiring Harness	1	
11	37110-05110	Ignition Switch Ass'y	1	
12	38610-12110	Turn Signal Relay	1	
13	09471-06008	Tail / Brake Lamp Bulb	1	6V,3/10W
14	09471-06021	Turn Signal Lamp Bulb	4	6V,8W
15	02111-04558	Cross Head Screw	2	
16	02111-06088	Cross Head Screw	2	
17	08321-21068	Lock Washer	2	


Frame - Center Stand - Fuel Tank - Oil Tank

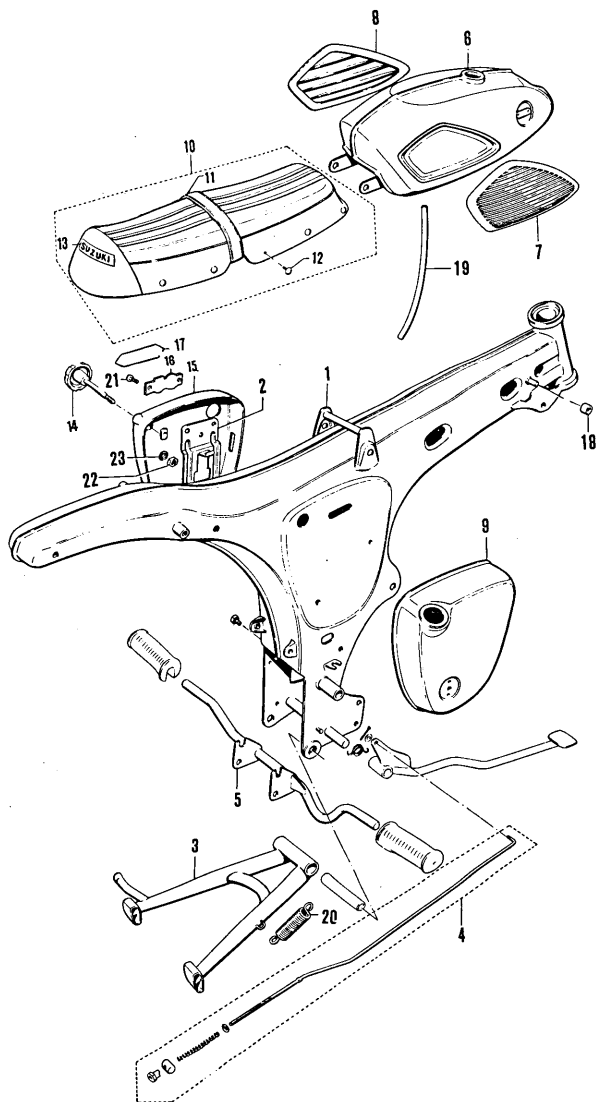

Frame - Center Stand - Fuel Tank - Oil Tank

Ref.No.	Part No.	Description	Q'ty	Remarks
1-1	41100-05100-019	Frame	1	
1-2	41100-05100-061	Frame	1	
1-3	41100-05100-002	Frame	1	
1-4	41100-05100-078	Frame	1	
2	41540-05100	Battery Holder	1	
3	42100-12100	Center Stand	1	
4	43300-12100	Brake Rod Ass'y	1	
5	43510-12100	Front Footrestbar	1	
6-1	44110-05100-673	Fuel Tank	1	
6-2	44110-05100-674	Fuel Tank	1	
6-3	44110-05100-676	Fuel Tank	1	
6-4	44110-05100-681	Fuel Tank	1	
7	44251-05100	RH Knee Grip	1	
8	44252-05100	LH Knee Grip	1	
9-1	44610-05100-019	Oil Tank	1	
9-2	44610-05100-002	Oil Tank	1	
9-3	44610-05100-061	Oil Tank	1	
9-4	44610-05100-078	Oil Tank	1	
10	45100-12710	Dual Seat Ass'y	1	
11	45180-12710	Dual Seat Passenger Strap	1	
12	45194-05100	Seat Leather Rivet	12	
13	68165-05100	Seat Emblem	1	
14	47130-01000	Frame LH Cover Knob	1	


Frame - Center Stand - Fuel Tank - Oil Tank

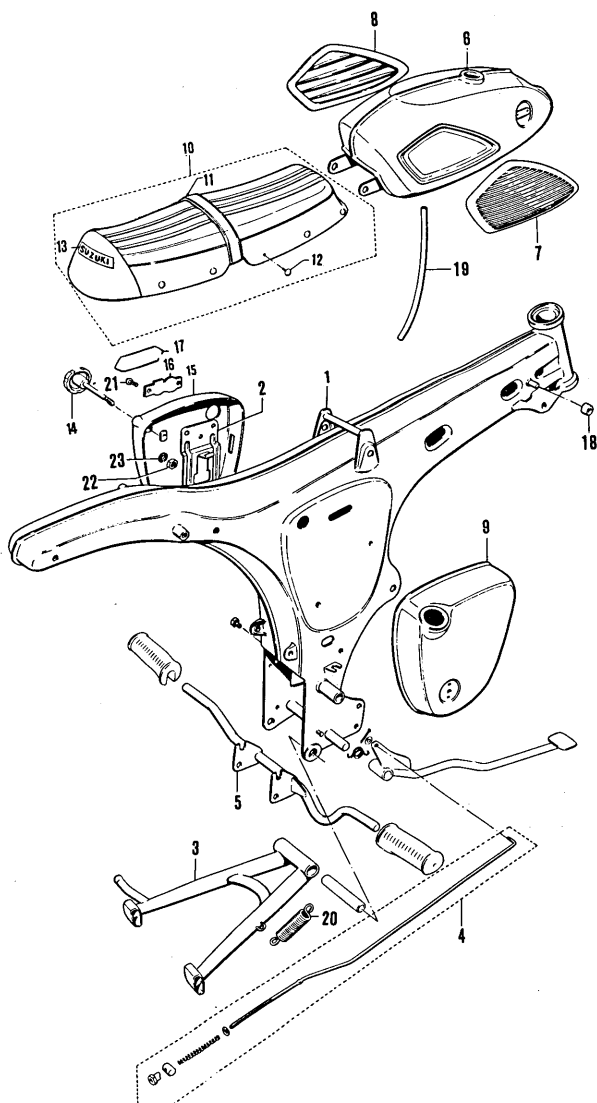

Frame - Center Stand - Fuel Tank - Oil Tank

Ref.No.	Part No.	Description	Q'ty	Remarks
15-1	47211-12100-019	Frame LH Cover	1	
15-2	47211-12100-061	Frame LH Cover	1	
15-3	47211-12100-002	Frame LH Cover	1	
15-4	47211-12100-078	Frame LH Cover	1	
16	68133-12001	100 Emblem	1	
17	68141-12600	SUZUKI Emblem	1	
18	09329-10003	Fuel Tank Front Cushion	2	
19	09343-05021	Fuel Hose	1	
20	09443-16004	Center Stand Spring	1	
21	02111-03088	Cross Head Screw	2	
22	08311-11038	Hexagon Nut	2	
23	08321-21038	Lock Washer	2	


Front Fork - Front Fender - Cables

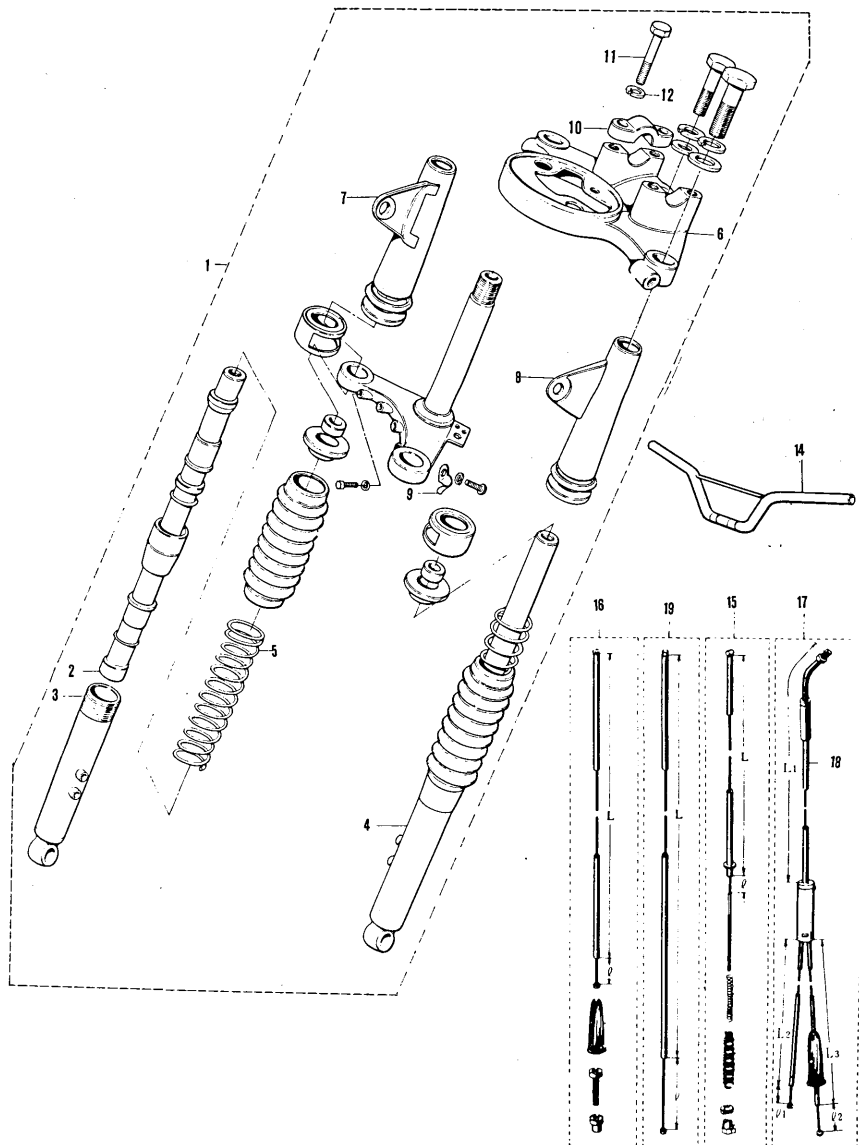

Front Fork - Front Fender - Cable

Ref.No.	Part No.	Description	Q'ty	Remarks
1-1	51100-12110-673	Front Fork Ass'y	1	
1-2	51100-12110-674	Front Fork Ass'y	1	
1-3	51100-12110-676	Front Fork Ass'y	1	
1-4	51100-12110-681	Front Fork Ass'y	1	
2	51110-12111	Inner Tube	2	
3	51130-12110-126	RH Outer Tube	1	
4	51140-12110-126	LH Outer Tube	1	
5	51171-03620	Fork Spring	2	
6	51311-12111	Steering Stem Head	1	
7	51530-12010-078	Headlamp RH Bracket	1	Refer to P.18 for Colors 019,002,061
8	51540-12010-078	Headlamp LH Bracket	1	Refer to P.18 for Colors 019,002,061
9	51543-05110	Cable Clip	1	
10	56211-22010	Handle Holder	2	
11	01221-08307	Crown Bolt	4	
12	08321-21088	Lock Washer	4	
13-1	53110-12100-126	Front Fender	1	
13-2	53110-12000	Front Fender	1	Chrome-plated
14	56110-12300	Handlebar	1	Braced Type
15	58100-07731	Brake Cable Ass'y	1	L.=1,110(43.70),L.=40(1.57)
16	58200-12300	Clutch Cable Ass'y	1	L.=1,020(40.16),L.=96(3.78)
17	58300-12300	Throttle Cable Ass'y	1	L ₁ .=690(27.17),L ₂ .=250(9.84) L ₃ .=335(13.20),L ₁ .=56(2.20) L ₂ .=112(4.41)
18	58310-12300	Handlebar Side Throttle Cable	1	
19	58410-12300	Starter Cable	1	L.=950(37.40),L.=63(2.48)


Wheel - Rear Swinging Arm - Chain Case

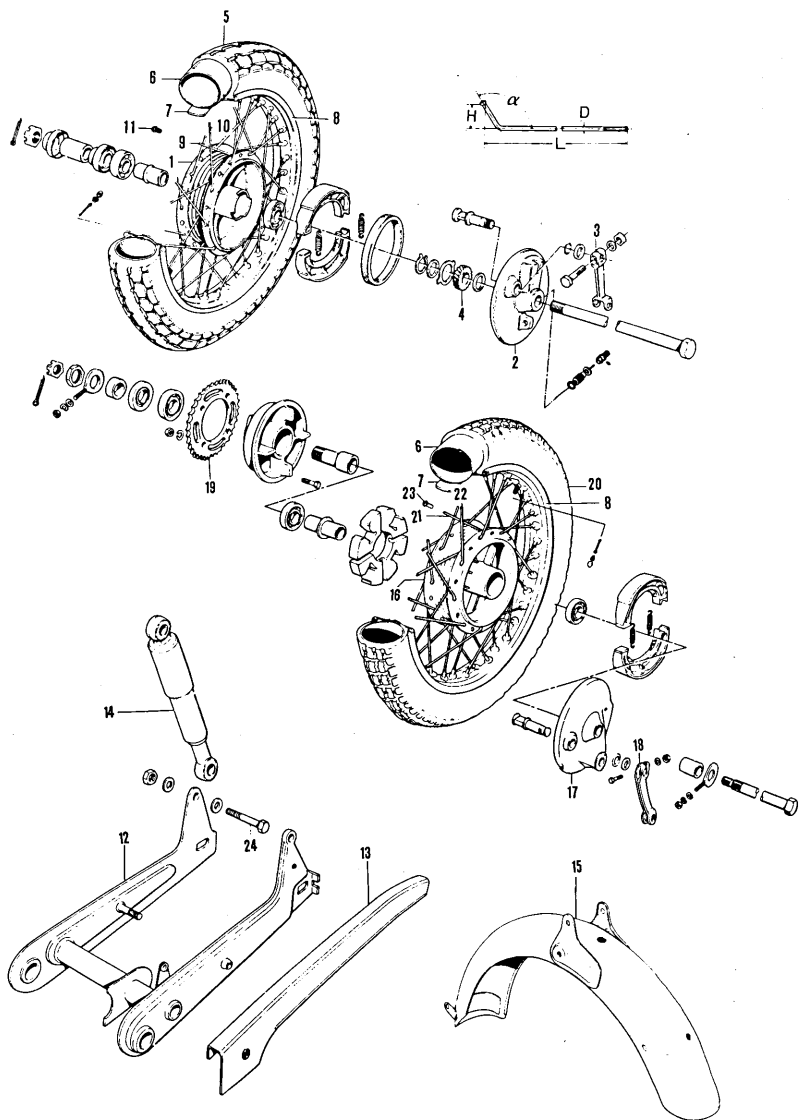

Wheel - Rear Swinging Arm - Chain Case

Ref.No.	Part No.	Description	Q'ty	Remarks
	54100-12610	Front Hub Ass'y	1	
1	54110-07000	Front Hub Drum	1	
2	54210-12002	Front Hub Panel	1	
3	54451-03001	Front Brake Cam Lever	1	
4	54611-07600	Speedometer Gear	1	
5	55100-14010	Front Tire	1	2.50-18
6	55200-14010	Inner Tube	1	2.50-18
7	55261-14010	Inner Tube Protector	1	
8	55311-12120	Wheel Rim	1	1.40X18
	55300-12825	Front Spoke Set	1	
9	55321-12120	Front Inner Spoke	18	L.=165.5(6.52),H.=5.4(0.21) D.=2.9(0.11), $\alpha=120^\circ$
10	55322-12120	Front Outer Spoke	18	L.=165.5(6.52),H.=5.4(0.21) D.=2.9(0.11), $\alpha=85^\circ$
11	55325-03020	Spoke Nipple	36	
12-1	61101-12829-019	Rear Swinging Arm	1	
12-2	61101-12829-061	Rear Swinging Arm	1	
12-3	61101-12829-002	Rear Swinging Arm	1	
12-4	61101-12829-078	Rear Swinging Arm	1	
13-1	61310-12100-126	Chain Case	1	
13-2	61310-12700	Chain Case	1	Chrome-plated
14-1	62100-05620-019	Rear Shock Absorber	2	
14-2	62100-05620-061	Rear Shock Absorber	2	
14-3	62100-05620-002	Rear Shock Absorber	2	
14-4	62100-05620-078	Rear Shock Absorber	2	

Wheel - Rear Swinging Arm - Chain Case

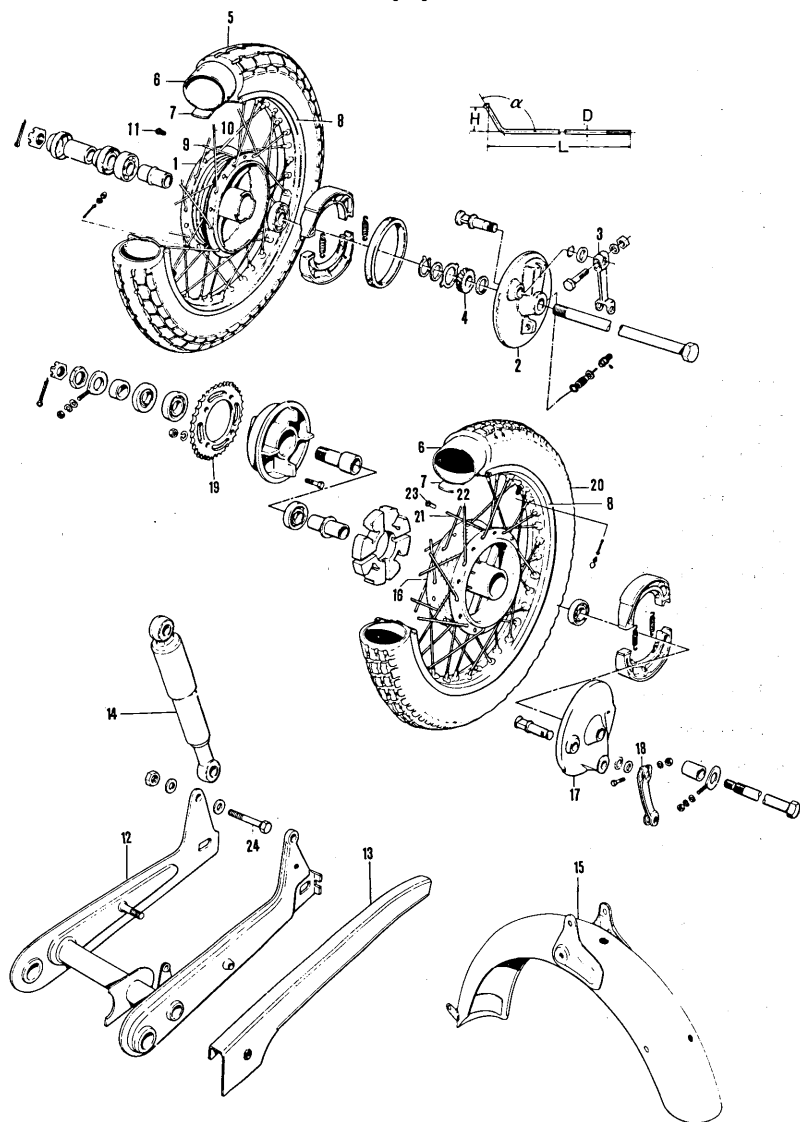

Wheel - Rear Swinging Arm - Chain Case


Ref.No.	Part No.	Description	Q'ty	Remarks
15-1	63110-12100-126	Rear Fender	1	
15-2	63110-12620	Rear Fender	1	Chrome-plated
	64100-01610	Rear Hub Ass'y	1	
16	64110-01000	Rear Hub Drum	1	
17	64210-01003	Rear Hub Panel	1	
18	64451-01002	Rear Brake Cam Lever	1	
19	64511-12730	Rear Sprocket	1	N.T.=34
20	65100-12100	Rear Tire	1	2.50-18
	65300-12828	Rear Spoke Set	1	
21	65321-12120	Rear Inner Spoke	18	L.=173.5(6.83),H.=6.8(0.27) D.=3.2(0.13), $\alpha=100^\circ$
22	65322-12120	Rear Outer Spoke	18	L.=173(6.81),H.=8.3(0.33) D.=3.2(0.13), $\alpha=84.5^\circ$
23	65325-03020	Spoke Nipple	36	
24	09100-10046	Rear Shock Absorber Lower Bolt	2	10screw,L.=43(1.69)

OPTIONAL


Foreword

Listed here are the Optional Parts for SUZUKI A100,AS100,A100-2 and ASS100.

Each part can be equipped on the models listed in the applicable models column.



OPTIONAL

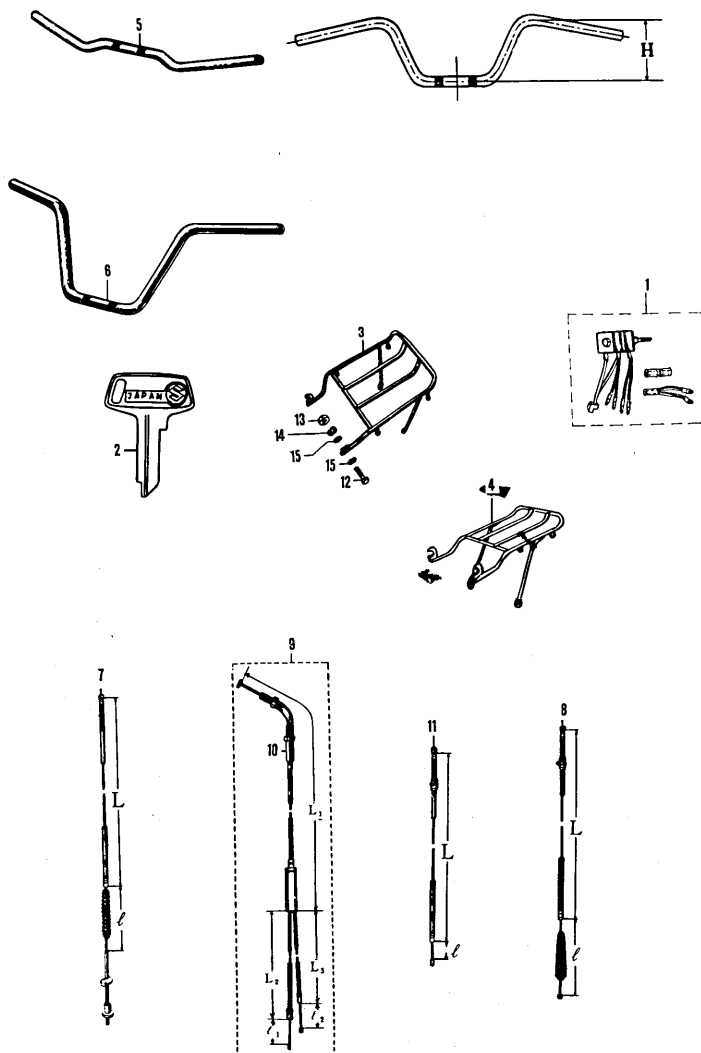


A100 OPT

OPTIONAL

Ref.No.	Part No.	Description	Q'ty				Remarks
			A100	AS100	A100-1	AS100-2	
1	30000-12833	Silicon Rectifier Ass'y	1	1			For added chaging circuit
2-1	37145-07700	Slotted Blank Key	1	1	1	1	For Initial 1
2-2	37146-07700	Slotted Blank Key	1	1	1	1	For Initial 2
2-3	37147-07700	Slotted Blank Key	1	1	1	1	For Initial 3
2-4	34148-07700	Slotted Blank Key	1	1	1	1	For Initial 4
3	46310-12600	Carrier	1	1			
4	46310-12700	Carrier			1	1	
5	56111-03702	Handlebar	1	1			Flat H.=0
6	56111-05711	Handlebar	1	1			Western H.=155(6.10)
7-1	58100-07721	Brake Cable Ass'y	1	1			For Flat Handlebar L.=900(35.4), L ₂ =40(1.57)
7-2	58100-01741	Brake Cable Ass'y	1	1			For Western Handlebar L.=1,070(42.1), L ₂ =40(1.57)
8-1	58200-13100	Clutch Cable Ass'y	1	1			For Flat Handlebar L.=860(33.9), L ₂ =96(3.78)
8-2	58200-05710	Clutch Cable Ass'y	1	1			For Western Handlebar L.=1,040(40.94), L ₂ =96(3.78)
9-1	58300-12710	Throttle Cable Ass'y	1	1			For Flat Handlebar L ₁ =430(16.93), L ₂ =335 (13.19), L ₃ =250(9.84) L ₁ =112(4.41), L ₂ =56(2.20)
9-2	58300-12700	Throttle Cable Ass'y	1	1			For Western Handlebar L ₁ =660(25.98), L ₂ =335 (13.19), L ₃ =250(9.84) L ₁ =112(4.41), L ₂ =56(2.20)
10-1	58310-12710	Handlebar Side Throttle Cable	1	1			For Flat Handlebar
10-2	58310-12700	Handlebar Side Throttle Cable	1	1			For Western Handlebar
11-1	58410-01791	Starter Cable	1	1			For Flat Handlebar L.=750(29.5), L ₂ =63(2.48)
11-2	58410-05700	Starter Cable	1	1			For Western Handlebar L.=930(36.61), L ₂ =63(2.48)
12	01111-06128	Hexagon Bolt	2	2			
13	08311-11068	Hexagon Nut	2	2			
14	08321-21068	Lock Washer	2	2			
15	08322-21068	Flat Washer	4	4			

OPTIONAL

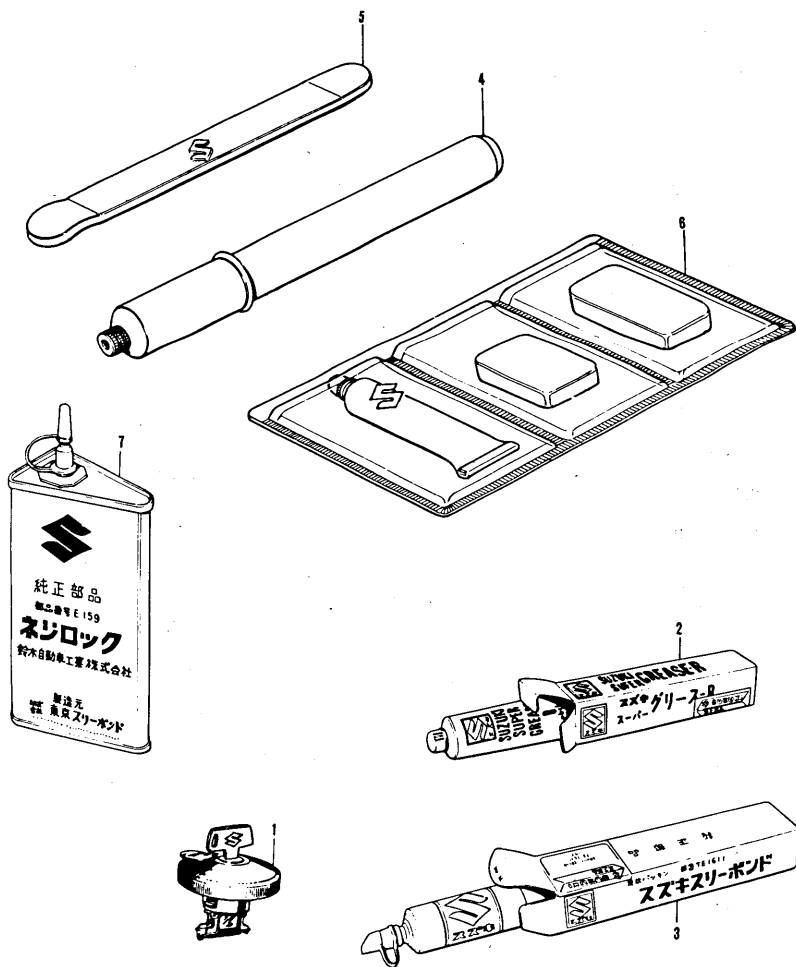

A100 OPT

OPTIONAL

Ref.No.	Part No.	Description	Q'ty				Remarks
			A100	AS100	A100-2	AS100	
1	30000-12813	Fuel Tank Cap	1	1	1	1	Key Lock Type
2	09900-25020	SUZUKI Super Grease	1	1	1	1	
3	99000-33010	Liquid Gasket	1	1	1	1	
4	09821-00001	Air Inflator	1	1	1	1	
5	09825-00001	Tire Lever	2	1	1	1	
6	09268-00001	Inner Tube Repairing Tool Set	1	1	1	1	
7	99000-32010	Thread Lock Cement	1	1	1	1	
	10001-12814	Gasket Set	1	1	1	1	
		Gasket Set Components					
	11141-12000	Cylinder Head Gasket	1	1			
	11241-12000	Cylinder Gasket	1	1	1	1	
	11482-12000	Crankcase RH Cover Gasket	1	1	1	1	
	11492-12002	Carburetor Inspection Cap Gasket	1	1	1	1	
	12471-12000	Inner Valve Seat Gasket	1	1	1	1	
	14181-12000	Exhaust Pipe Gasket	1	1	1	1	
	16731-03100	Oil Pump Gasket	1	1	1	1	
	37712-01000	Neutral Switch Gasket	1	1	1	1	
	09168-06001	Oil Level Plug Gasket	1	1	1	1	
	09168-06002	Union Bolt Gasket	8	8	8	8	
	09168-10002	Crank Drain Plug Gasket	1	1	1	1	
	09168-10005	Check Valve Gasket	2	2	2	2	
	09168-14002	Oil Drain Plug Gasket	1	1	1	1	
	09280-08003	Inlet Check Valve O Ring	1	1	1	1	
	09280-10002	Check Valve O Ring	1	1	1	1	
	09280-22001	Oil Plug O Ring	1	1	1	1	
	09280-22002	Valve Seat Outer O Ring	1	1	1	1	
	09280-99001	Valve Seat Inner O Ring	1	1	1	1	

SUZUKI A100-2

for Mauritius


Foreword

This parts Catalogue contains parts used on the SUZUKI A100-2 designed for Mauritius.

Each parts is available for models listed in the applicable model column.

Concerning parts unlisted in this catalogue, refer to the standard SUZUKI A100-2 parts catalogue.

Rear Licence Plate

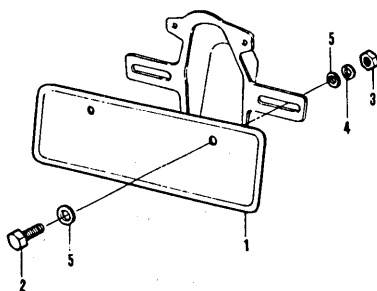

Rear Licence Plate

Ref.No.	Part No.	Description	Q'ty A100-2	Remarks
1	63451-03600	Rear Licence Number Plate	1	
2	01111-06128	Hexagon Bolt	2	
3	08311-11068	Hexagon Nut	2	
4	08321-21068	Lock Washer	2	
5	08322-21068	Flat Washer	2	

SUZUKI A100, AS100 and A100-2

for Nigeria, Rhodesia and Cameroon


Foreword

This parts catalogue contains parts used on the SUZUKI A100, AS100 and A100-2 designed for your market.

Each part is available for models listed in the applicable model column.

Concerning parts unlisted in this catalogue, refer to the standard SUZUKI A100, AS100 and A100-2 parts catalogues.

Front Fender - Licence Number Plate

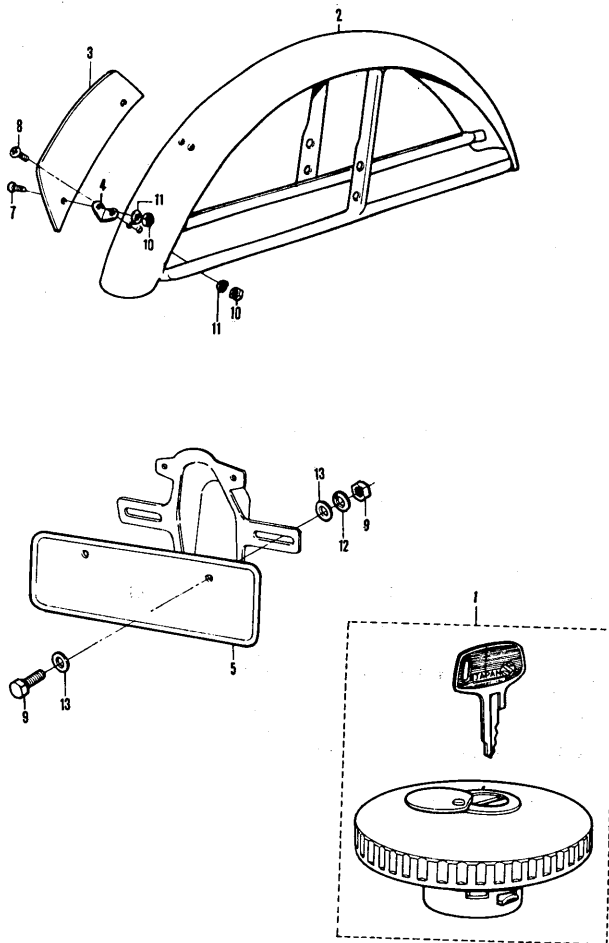

Front Fender - Licence Number Plate

Ref.No.	Part No.	Description	Q'ty			Remarks
			A100	AS100	A100-2	
1	30000-12813	Fuel Tank Cap	1	1	1	Key Lock Type
2-1	53110-12640-126	Front Fender		1		
2-2	53110-03670-126	Front Fender	1	1		
3	53351-01600	Front Licence Number Plate	1	1	1	
4	53361-01600	Front Licence Number Plate Bracket	4	4	4	
5	63451-03600	Rear Licence Number Plate	1	1	1	
6	01111-06128	Hexagon Bolt	2	2	2	
7	02111-05088	Cross Head Screw	2	2	2	
8	02111-05128	Cross Head Screw	4	4	4	
9	08311-11068	Hexagon Nut	2	2	2	
10	08311-31058	Hexagon Nut	6	6	6	
11	08321-21058	Lock Washer	6	6	6	
12	08321-21068	Lock Washer	2	2	2	
13	08322-21068	Flat Washer	2	2	2	




SUZUKI A100
For Singapore
Foreword

This parts catalogue contains parts used on the SUZUKI A100 designed for Singapore.

Each part is available for models listed in applicable model column.

Concerning parts unlisted in this catalogue, refer to the standard SUZUKI A100 parts catalogue.

Carburetor - Gear Shifting Lever - Fuel Tank Cap

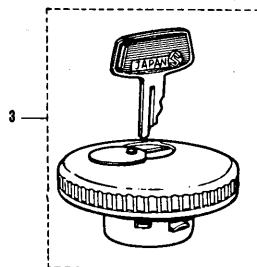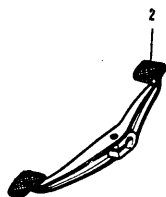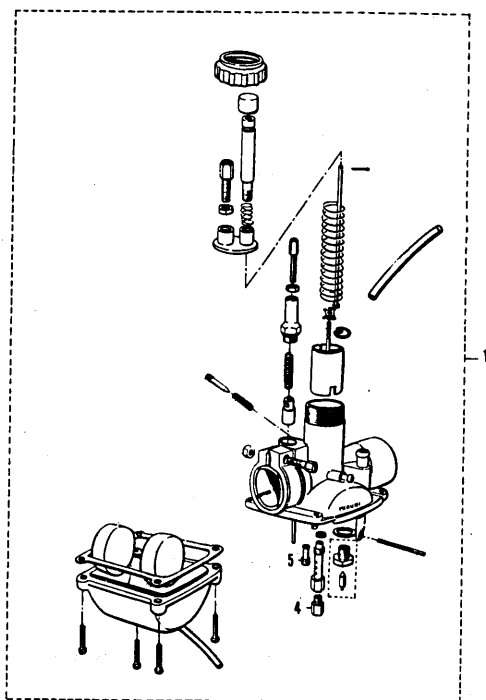

Carburetor - Gear Shifting Lever - Fuel Tank Cap

Ref.No.	Part No.	Description	Q'ty A100	Remarks
1	13200-12610	Carburetor Ass'y	1	
2	25610-12600	Gear Shifting Lever	1	
3	30000-12813	Fuel Tank Cap	1	
4	09491-70001	Main Jet	1	#70
5	09492-30002	Pilot Jet	1	#30

SUZUKI A100-2

for Bangkok




Foreword

This parts catalogue contains parts used on the SUZUKI A100-2 designed for Bangkok.

Each part is available for models listed in applicable model column.

Concerning parts unlisted in this catalogue, refer to the standard SUZUKI A100-2 parts catalogue.

Carburetor - Gear Shifting Lever - Fuel Tank Cap

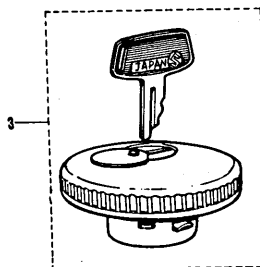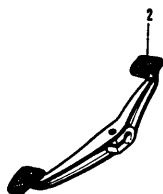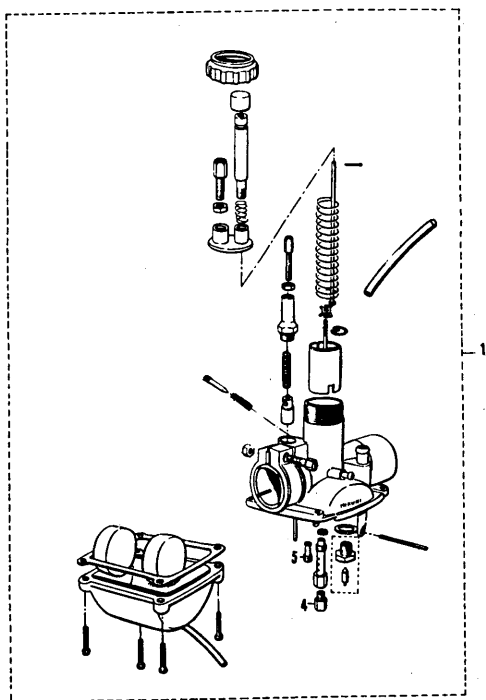

Carburetor - Gear Shifting Lever - Fuel Tank Cap

Ref.No.	Part No.	Description	Q'ty A100-2	Remarks
1	13200-12610	Carburetor Ass'y	1	
2	25610-12600	Gear Shifting Lever	1	
3	30000-12813	Fuel Tank Cap	1	
4	09491-70001	Main Jet	1	#70
5	09492-30002	Pilot Jet	1	#30

SUZUKI A100,AS100 and A100-2

for South - East Asia



Foreword

This parts catalogue contains parts used on the SUZUKI A100,AS100 and A100-2 designed for South-East Asia .

Each part is available for models listed in applicable model column.
Concerning parts unlisted in this catalogue, refer to the standard SUZUKI A100,AS100 and A100-2 parts catalogues.

A100,AS100,A100-2 for Your Market

Gear Shifting Lever - Fuel Tank Cap

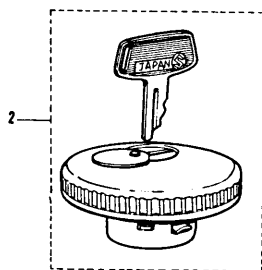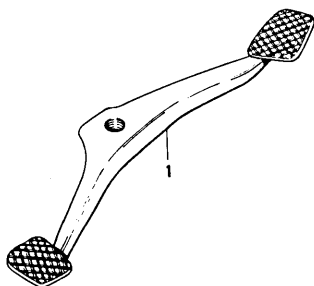

Gear Shifting Lever - Fuel Tank Cap

Ref.No.	Part No.	Description	Q'ty			Remarks
			A100	AS100	A100-2	
1	25610-12600	Gear Shifting Lever	1	1	1	
2	30000-12813	Fuel Tank Cap	1	1	1	

SUZUKI A100 and A100-2

for Norway

Foteword


This parts catalogue contains parts used on the SUZUKI A100 and A100-2 designed for Norway.

Each part is available for models listed in applicable model column.

Concerning parts unlisted in this catalogue, refer to the standard SUZUKI A100 and A100-2 parts catalogues.

A100, A100-2 for Your Market


Carburetor - Dual Seat - Turn Signal

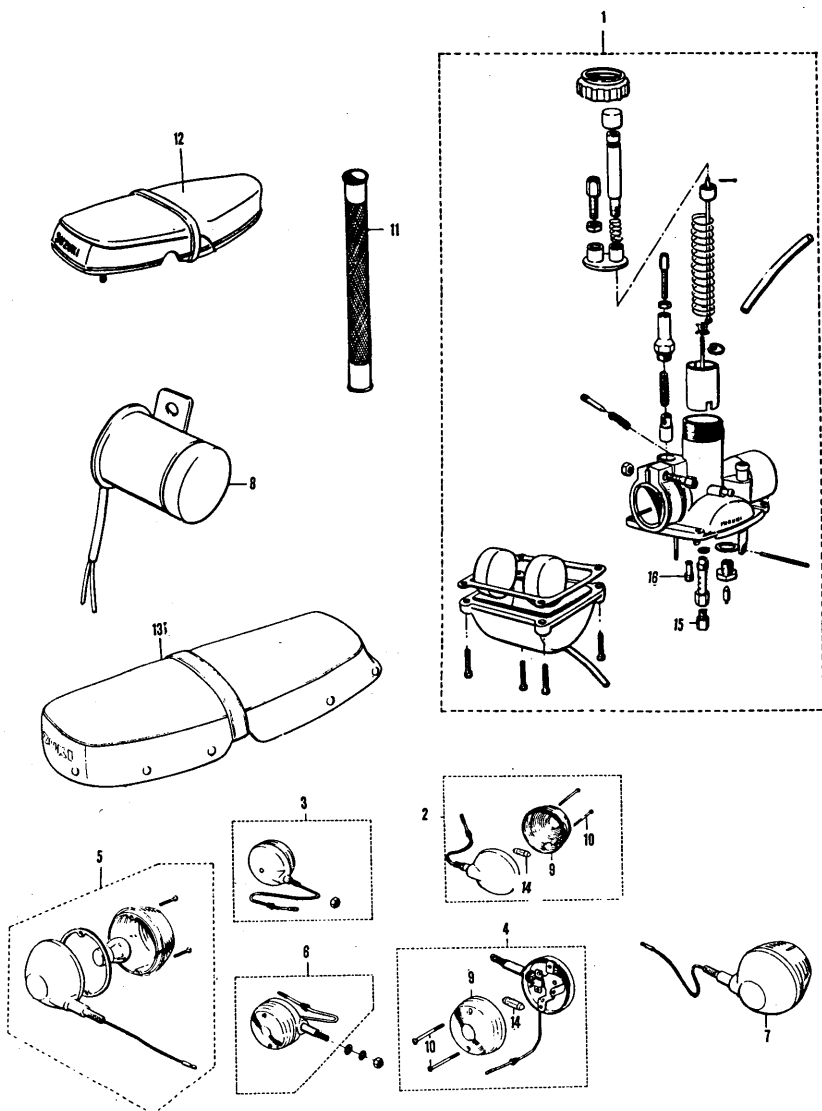

Carburetor - Dual Seat - Turn Signal

Ref.No.	Part No.	Description	Q'ty	Remarks
			A100 A102-2	
1	13200-12630	Carburetor Ass'y	1 1	
2	35601-07210	RH Front Turn Signal Ass'y	1	
3	35602-07210	LH Front Turn Signal Ass'y	1	
4	35603-12670	RH Rear Turn Signal Ass'y	1	
5-1	35603-12681	RH Rear Turn Signal Ass'y	1	Pearl-metallic
5-2	35603-12680	RH Rear Turn Signal Ass'y	1	~A100-54054
6	35604-12670	LH Rear Turn Signal Ass'y	1	
7-1	35604-12681	LH Rear Turn Signal Ass'y	1	Pearl-metallic
7-2	35604-12680	LH Rear Turn Signal Ass'y	1	~A100-54054
8	38610-12110	Turn Signal Relay	1 1	
9	35612-08211	Turn Signal Lamp Lens	4	
10	35623-03011	Turn Signal Lens Screw	8	
11-1	44460-12600	Fuel Line Protector	1	L.=280(11.02)
11-2	44460-12610	Fuel Line Protector	1	L.=320(12.60)
12	45100-12650	Dual Seat Ass'y	1	
13	45100-12660	Dual Seat Ass'y	1	
14	09471-06005	Turn Signal Lamp Bulb	4	
15	09491-75001	Main Jet	1	#75
16	09492-35002	Pilot Jet	1	#35

Headlamp - Headlamp Housing

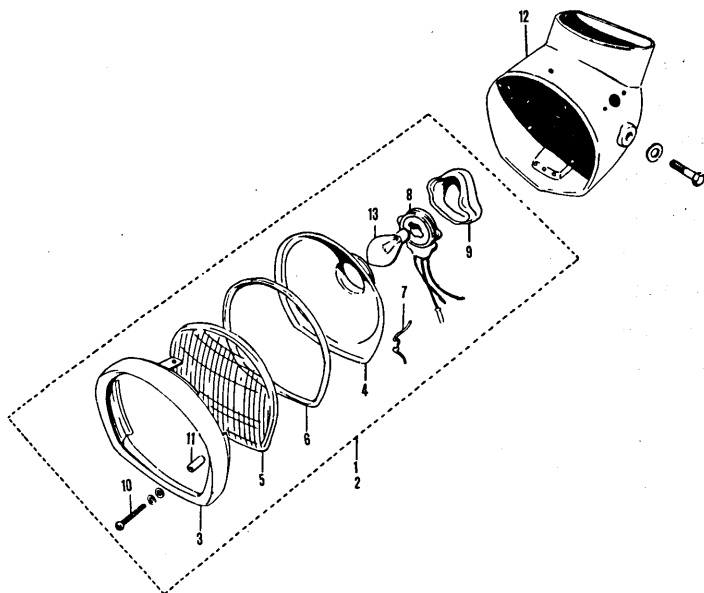

Headlamp - Headlamp Housing

Ref.No.	Part No.	Description	Q'ty		Remarks
			A100	A100-2	
1	35100-07651	Headlamp Ass'y	1		
2	35100-12660	Headlamp Ass'y	1		
3	35111-11031	Headlamp Rim	1		
4	35123-11660	Headlamp Reflector	1	1	
5	35124-11660	Headlamp Lens	1	1	
6	35125-11030	Headlamp Lens Gasket	1	1	
7	35128-11030	Headlamp Spring Clamp	3		
8	35171-07651	Headlamp Socket	1	1	
9	35172-11660	Socket Rubber Cap	1	1	
10	35181-11612	Headlamp Under Screw	1	1	5screw, L.=35(1.38)
11	35189-11031	Headlamp Spacer	1	1	O.D.=8(0.31), L.=23.8(0.94)
12-1	51810-12001-019	Headlamp Housing	1		
12-2	51810-12001-061	Headlamp Housing	1		
12-3	51810-12001-075	Headlamp Housing	1		
13	09471-06018	Headlamp Bulb	1		6V, 25/25W

SUZUKI A100 and A100-2

for Iran


Foreword

This parts catalogue contains parts used on the SUZUKI A100 and A100-2 desinged for Iran.

Each part available for models listed in applicable model column.

Concerning parts unlisted in this catalogue, refer to the standard SUZUKI A100 and A100-2 parts catalogues.

Dual Seat - Emblem

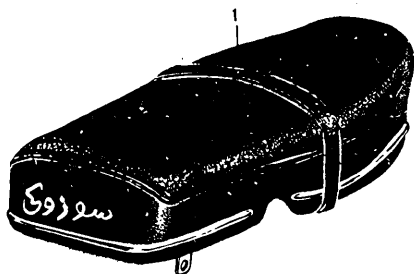

Dual Seat - Emblem

Ref.No.	Part No.	Description	Q'ty		Remarks
			A100	A100-2	
1-1	45100-12670	Dual Seat Ass'y	1		
1-2	45100-12620	Dual Seat Ass'y	1		
2	68131-13600	SUZUKI Emblem	1		
3	68131-01610	SUZUKI Emblem	1		

SUZUKI A100
for West Germany


Foreword

This parts catalogue contains parts used on the SUZUKI A100 for
designed for West Germany.

Each part is available for models listed in applicable model column.

Concerning parts unlisted in this catalogue, refer to the standard
SUZUKI A100 parts catalogue.

Headlamp Rim - Combination Lamp Bracket - Front Fork

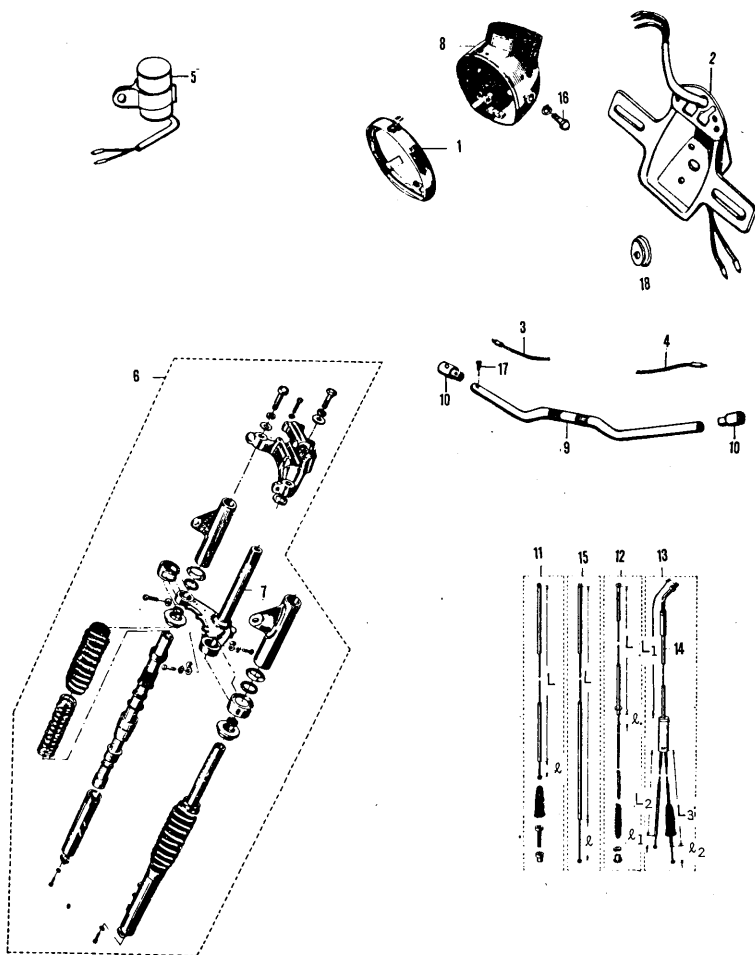

Headlamp Rim - Combination Lamp Bracket - Front Fork

Ref.No.	Part No.	Description	Q'ty A100	Remarks
1	35111-11031	Headlamp Rim	1	
2	35720-12660	Combination Lamp Bracket Ass'y	1	
3	35861-12660	RH Turn Signal Cord	1	
4	35862-12660	LH Turn Signal Cord	1	
5	38610-12110	Turn Signal Relay	1	
6-1	51100-12630-019	Front Fork Ass'y	1	
6-2	51100-12630-002	Front Fork Ass'y	1	
6-3	51100-12630-061	Front Fork Ass'y	1	
7	51410-12630	Steering Stem Comp.	1	
8-1	51810-12001-019	Headlamp Housing	1	
8-2	51810-12001-002	Headlamp Housing	1	
8-3	51810-12001-061	Headlamp Housing	1	
9	56111-12600	Handlebar	1	Flat
10	56191-12600	Handle Turn Signal Bracket	1	
11	58100-05711	Brake Cable Ass'y	1	L.=880(34.65), L.=40(1.57)
12	58200-05700	Clutch Cable Ass'y	1	L.=850(33.46), L.=96(3.78)
13	58300-12710	Throttle Cable Ass'y	1	L ₁ .=430(16.93), L ₂ .=250(9.84), L ₃ .=335(13.19) L ₁ .=56(2.20), L ₂ .=112(4.41)
14	58310-12710	Handlebar Side Throttle Cable	1	
15	58410-01200	Starter Cable	1	L.=740(29.1), L.=63(2.48)
16	01221-08257	Crown Head Bolt	2	
17	02111-04128	Cross Head Screw	2	
18	09308-12003	Combination Lamp Grommet	1	

SUZUKI A100 and A100-2

for Australia


Foreword

This parts catalogue contains parts used on the SUZUKI A100 and A100-2 designed for Australia.

Each part is available for models listed applicable model column.

Concerning parts unlisted in this catalogue, refer to the standard SUZUKI A100 and A100-2 parts catalogues.

Turn Signal

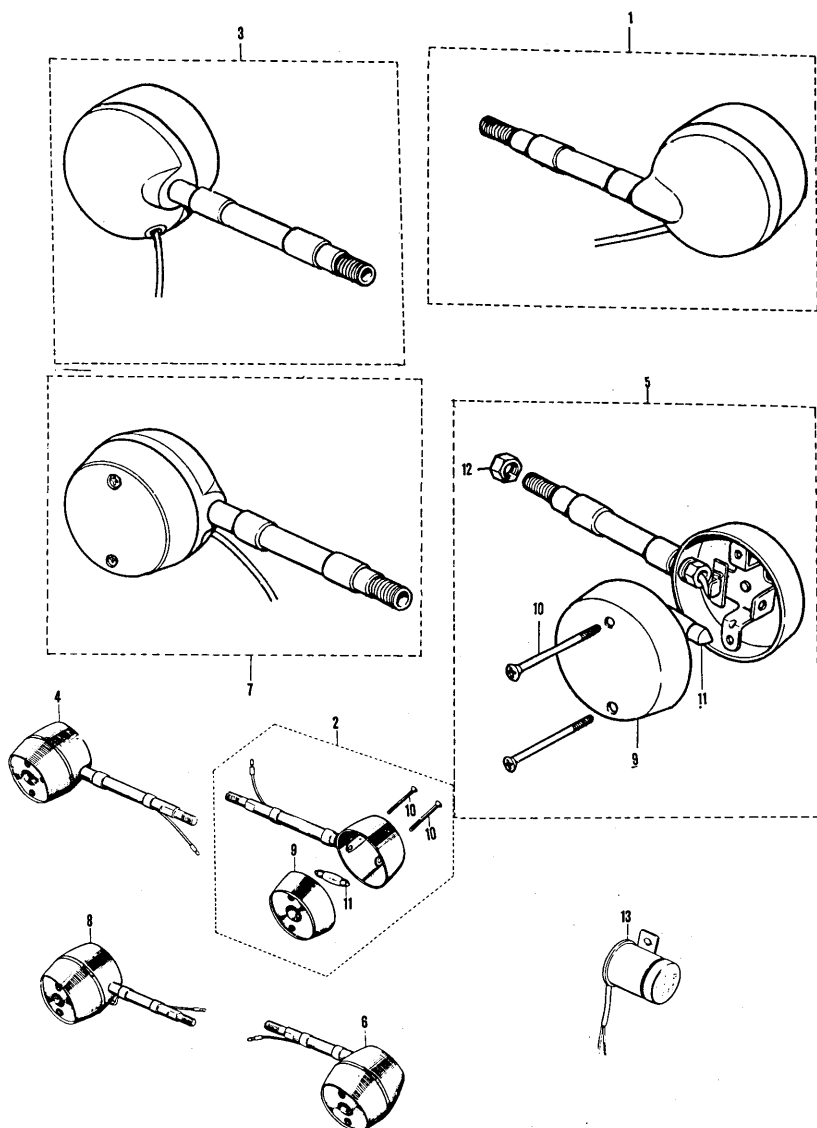

Turn Signal

Ref.No.	Part No.	Description	Q'ty		Remarks
			A100	A100-2	
1	35601-03660	RH Front Turn Signal Ass'y	1		
2	35601-03670	RH Front Turn Signal Ass'y	1		
3	35602-03660	LH Front Turn Signal Ass'y	1		
4	35602-03670	LH Front Turn Signal Ass'y	1		
5	35603-05660	RH Rear Turn Signal Ass'y	1		
6	35603-12660	RH Rear Turn Signal Ass'y	1		
7	35604-05660	LH Rear Turn Signal Ass'y	1		
8	35604-12660	LH Rear Turn Signal Ass'y	1		
9	35612-03012	Turn Signal Lens	4	4	
10-1	★ 35623-03011	Turn Signal Lens Screw	8	8	
10-2	35623-03010	Turn Signal Lens Screw	8		
11	09471-06005	Turn Signal Lamp Bulb	4	4	6V,8W
12	08312-31088	Small Hexagon Nut	2		
13	38610-12110	Turn Signal Relay	1	1	6V,8WX2+1.5W

SUZUKI A100

for Denmark


Foreword

This parts catalogue contains parts used on the SUZUKI A100 desigend for Denmark.

Each part is available for models listed in applicable model column.

Concerning parts unlisted in this catalogue, refer to the standard SUZUKI A100 parts catalogue.

Headlamp - Headlamp Housing

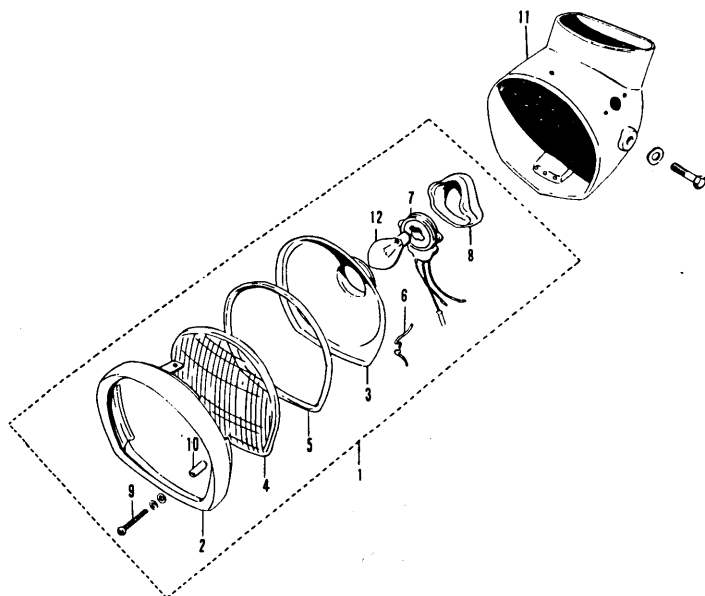

Headlamp - Headlamp Housing

Ref.No.	Part No.	Description	Q'ty A100	Remarks
1	35100-07651	Headlamp Ass'y	1	
2	35111-11031	Headlamp Rim	1	
3	35123-11660	Headlamp Reflector	1	
4	35124-11660	Headlamp Lens	1	
5	35125-11030	Headlamp Lens Gasket	1	
6	35128-11030	Headlamp Spring Clamp	3	
7	35171-07651	Headlamp Socket	1	
8	35172-11660	Socket Rubber Cap	1	
9	35181-11612	Headlamp Under Screw	1	5screw, L.=35(1.38)
10	35189-11031	Headlamp Spacer	1	O.D.=8(0.31), L.=23.8(0.94)
11-1	51810-12001-019	Headlamp Housing	1	
11-2	51810-12001-061	Headlamp Housing	1	
11-3	51810-12001-075	Headlamp Housing	1	
12	09471-06018	Headlamp Bulb	1	6V, 25/25W

SUZUKI A100-2

for Saudi Arabia

Foreword





This parts catalogue contains parts used on the SUZUKI A100-2 designed for Saudi Arabia.

Each part is available for models listed in the applicable model column.

Concerning parts unlisted in this catalogue, refer to the standard SUZUKI A100-2 parts catalogue.

A100-2 for Your Market

Gear Shifting Lever - Fuel Tank Cap - Front Fender

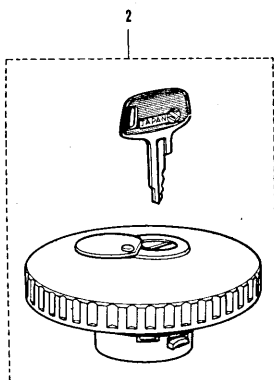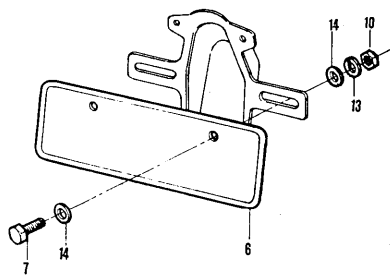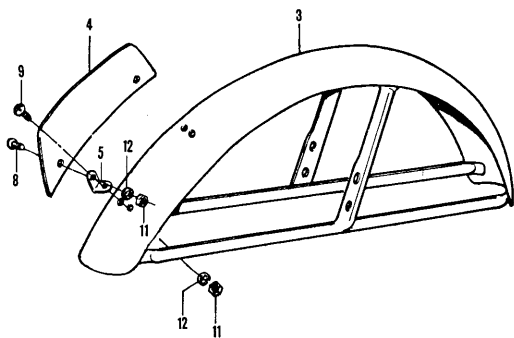

Gear Shifting Lever - Fuel Tank Cap - Front Fender

Ref.No.	Part No.	Description	Q'ty A100-2	Remarks
1	35610-12610	Gear Shifting Lever	1	
2	30000-12813	Fuel Tank Cap	1	
3-1	53110-12650	Front Fender	1	Chrome-plated
3-2	53110-12640-126	Front Fender	1	
4	53351-01600	Front Licence Number Plate	1	
5	53361-01600	Front Licence Number Plate Bracket	1	
6	63451-03600	Rear Licence Number Plate	1	
7	01111-06128	Hexagon Bolt	2	
8	02111-05088	Cross Head Screw	2	
9	02111-05128	Cross Head Screw	4	
10	08311-11068	Hexagon Nut	2	
11	08311-31058	Hexagon Nut	6	
12	08321-21058	Lock Washer	6	
13	08321-21068	Lock Washer	2	
14	08322-21068	Flat Washer	2	

P A R T S N U M B E R I N D E X

Listed here are the Parts Number Index for A100,AS100,
A100-2 and ASS100 except special specification.

Part No.	Page-Ref.No.	Part No.	Page-Ref.No.	Part No.	Page-Ref.No.
00000					
01111-06128	48-12	02111-05161	19-26-2	02131-04408	25-37-1
	24-14		17-18-2	02141-03201	14-27-2
	26-18	02111-05168	7-17-1	02141-03208	14-27-1
	32-23		4-16-1	02141-05061	16-32-2
01111-06168	16-29		19-26-1	02141-05068	16-32-1
01111-06208	10-30	02111-05168	17-18-1	02311-04108	42-10
01112-06208	10-31	02111-05301	7-18-2	02311-04121	12-09-2
01121-08168	15-20	02111-05308	7-18-1	02311-04128	13-16
01121-08208	14-25	02111-05352	25-35-2		42-24
01122-08258	11-15	02111-05357	25-35-1		12-09-1
01211-06127	14-26	02111-06087	28-20	04111-12088	5-32
01211-06257	18-38	02111-06088	44-16	04111-20188	21-26
01221-08127	18-39		39-25		15-21
01221-08307	46-11		33-18	04111-20258	23-31
	35-06		38-31		38-33
01221-08857	16-30	02111-06088	16-31	04111-25208	10-36
02111-03061	10-32-2	02111-06108	7-19	04111-30258	22-31
02111-03068	10-32-1		24-15		28-21
02111-03088	45-21		18-41	04211-09129	1-21
	34-23	02111-06128	39-26		3-23
02111-04068	42-21	02111-06128	38-32	04221-03059	2-34
02111-04088	13-12		24-16	06111-06004	18-42
	42-22	02111-06258	6-10	08113-60010	9-32
02111-04161	10-33-2	02111-06308	3-13	08113-62030	23-32
02111-04168	10-33-1	02111-06408	3-14	08113-62040	9-33
02111-04201	4-14-2	02111-06458	3-15	08113-62040	2-35
02111-04208	4-14-1	02111-06508	3-16	08113-63010	22-32
02111-04258	13-13	02111-06658	3-17	08143-62010	23-33
02111-04308	42-09	02112-06128	12-08	08143-63010	23-34
	42-23	02112-06168	13-15		22-33
02111-04558	44-15	02112-06258	3-18	08211-12302	11-16
	33-16	02112-06358	1-17	08211-15241	9-34
02111-05051	6-09-2		3-19	08221-20285	2-36
02111-05058	6-09-1	02112-06408	1-18	08311-11031	14-28-2
02111-05081	3-12-2	02112-06458	1-19	08311-11038	34-24
02111-05088	3-12-1	02112-06508	3-21	08311-11038	14-28-1
02111-05121	13-14-2	02112-06608	1-20	08311-11051	25-38-2
	4-15-2	02112-06708	3-22		20-24-2
	18-40-2	02121-05121	8-20-2		19-27-2
02111-05128	13-14-1	02121-05128	8-20-1		24-17-2
01111-05101	14-24-2	02121-06108	9-31	08311-11058	25-38-1
01111-05108	14-24-1	02121-06128	10-34		20-24-1
01111-06108	19-24	02121-06168	41-17		19-27-1
	17-17		30-17		24-17-1
01111-06127	19-25		2-32	08311-11068	39-27
02111-05128	33-17	02121-06208	10-35	08311-11068	48-13
	18-40-1		2-33		23-35
	4-15-1	02131-04122	25-36-2		22-34
02111-05161	7-17-2	02131-04127	25-36-1		38-34
	4-16-2	02131-04401	25-37-2		26-19

Part No.	Page-Ref.No.	Part No.	Page-Ref.No.	Part No.	Page-Ref.No.
08311-11068	14-29	08321-21068	38-37	08332-11059	30-18
	24-18		14-32	08341-31039	2-37
08311-11088	1-22		24-20	08341-31049	2-38
08311-31068	8-21	08321-21088	6-12	09100-06005	21-12
	26-20		11-17	09100-06007	21-13
08312-11088	39-28	08321-21088	46-12	09100-06050	23-24
	25-39		23-39		22-21
	1-23		26-25	09100-08024	1-10
	19-28		1-24	09100-08051	28-12
	26-21		21-28	09100-10007	15-13
08312-11088	38-35	08321-21088	25-41	09100-10018	28-13
08312-11108	28-22		35-07	09100-10019	21-14-2
08312-31088	23-36		16-33	09100-10040	21-14-1
08312-31108	21-27		15-23	09100-10046	47-24
	15-22		14-33		37-27
08313-11042	26-22-2	08321-21108	13-19	09101-10010	38-25
08313-11047	26-22-1		18-45	09105-08001	23-23
08314-11108	23-37		21-29	09108-08005	1-11
	38-36		28-23	09111-06003	10-16
08314-31121	22-35-2	08322-11088	19-30	09119-08003	7-09
08314-31128	22-35-1	08322-11108	13-20	09125-03001	16-19-2
08321-11088	6-11	08322-21038	10-38	09125-03003	20-22-2
08321-21038	34-25		20-27	09125-03103	20-22-1
	20-25	08322-21048	42-12	09125-03106	16-19-1
	14-30	08322-21058	4-18	09125-05002	4-09-2
08321-21048	13-17	08322-21058	33-21	09125-05005	20-23-2
	42-11		25-42	09125-05102	4-09-1
	12-10		15-24	09125-05105	20-23-1
	26-23		24-21	09134-03001	22-22-2
08321-21058	13-18	08322-21068	48-15	09134-03101	22-22-1
08321-21058	4-17				
	7-20	08322-21068	13-21	09134-06001	8-11
	18-43		39-30	09139-06002	11-08
	20-26		23-40	09140-08001	16-20
	33-19		34-26	09140-08008	21-15
			22-36	09140-10001	21-16
08321-21058	25-40	08322-21068	26-26	09140-10003	13-22
	14-31		21-31	09140-14002	2-18
	24-19		38-38	09140-16001	8-12
08321-21068	12-11		14-34	09140-16006	23-25
	48-14		24-22	09140-20001	9-15
08321-21068	10-37	08322-21087	25-43	09150-05001	15-14-2
	39-29	08322-21088	6-13	09150-05101	15-14-1
	44-17		26-27	09150-06001	34-17
	23-38		15-25	09152-06002	14-14
	18-44		1-25	09159-08003	7-10
08321-21068	32-24	08322-21088	14-35	09159-08007	19-14
	26-24	08322-21108	21-30	09160-03001	14-15
	33-20	08323-21088	28-24	09160-05001	22-23
	19-29	08331-11189	22-37	09160-05006	43-16
	17-19	08332-11059	41-18		31-15

Part No.	Page-Ref.No.	Part No.	Page-Ref.No.	Part No.	Page-Ref.No.
09160-06004	16-21	09180-20016	9-21	09285-12001	10-25
09160-06008	10-17	09181-18001	38-27	09285-16002	11-12
09160-06011	14-16	09200-06010	21-19	09287-07001	19-16
09160-06022	41-13	09201-04002	10-22	09287-10002	19-17
	30-13	09202-05003	11-10-2	09287-10003	19-18
09160-08005	16-22	09209-04006	41-14	09301-18002	38-28
09160-08006	28-14		30-14	09308-10001	24-09
09160-10005	21-17	09209-05011	11-10-1	09308-12001	24-10
09160-10016	38-26	09209-10001	19-15	09308-12003	33-13
09160-12011	23-26		15-15	09309-04001	4-11
09160-12011	22-24	09209-10003	10-23	09309-04002	4-12-2
09160-12020	10-18	09209-11002	34-18	09309-04004	4-12-1
	28-15	09221-05003	8-16	09309-08002	7-14
09160-15002	28-16	09247-06001	3-09	09309-09003	13-23
09160-16003	11-09	09247-10001	1-14	09319-10009	21-22
09160-17002	9-16	09247-14001	1-15	09319-15002	9-26
09160-17003	8-13-1	09250-05001	14-17	09320-08004	31-16
09160-18002	22-25	09250-06001	32-22		43-17
09160-19001	2-19	09250-08002	14-18	09320-09002	16-25
09160-19006	21-18	09250-08004	14-19	09320-11003	16-26
09160-20005	9-17	09250-14002	4-10	09320-13002	28-18
09160-20007	9-18	09250-22002	21-20	09320-13003	28-19
09160-20009	9-19	09250-30001	21-21	09320-22001	21-23
09161-04005	25-30	09259-20003	3-10	09321-05002	14-20
09161-08002	17-11	09261-02001	8-17	09321-10002	14-21
09165-04004	25-31	09261-04003	41-15	09321-10002	6-07
09166-14004	2-20		10-24	09321-10004	34-19
09166-24001	18-37		30-15	09329-10003	45-18
09167-10000	10-19	09262-20015	2-23		34-20
09167-17002	8-14	09262-30002	9-22	09343-05016	16-27
09167-20005	39-22	09263-14001	2-24	09343-05021	45-19
09167-20006	9-20	09263-19001	2-25		34-21
09168-05001	17-12	09263-20002	9-23	09344-05002	17-15
09168-06001	3-08	09268-00001	49-06	09360-06003	7-15
09168-06002	7-11	09280-08003	7-13	09360-06005	7-16
09168-06002	17-13	09280-10002	2-27	09361-14001	17-16
09168-10002	1-12	09280-12001	23-28	09380-17001	9-27
09168-10005	7-12		22-27	09380-20003	9-28
09168-14002	1-13	09280-22001	3-11	09380-26001	9-29
09169-06003	10-20	09280-22002	2-26	09381-14001	2-31
09180-06002	16-23	09280-23001	17-14	09384-06001	21-24
09180-06004	10-21	09280-99001	2-28	09384-12001	10-26
09180-08001	16-24	09283-20011	2-29	09385-06001	14-22
09180-08025	28-17	09283-25001	23-29	09386-08001	16-28
09180-12005	37-28	09283-25003	9-24	09399-14001	9-30
09180-12007	22-26	09283-25009	2-30	09402-00080	6-08
09180-17004	23-27	09283-48001	22-28	09402-00133	4-13
09180-17011	8-15	09284-12006	11-11	09403-00019	19-19
09180-17012	8-13-2	09284-18001	22-29	09408-00001	19-20
09180-20006	2-21	09285-05004	9-25	09408-00002	19-21

Part No.	Page-Ref.No.	Part No.	Page-Ref.No.	Part No.	Page-Ref.No.
10000					
09408-00003	19-22	09491-70001	5-29-2	11111-12000	1-01
09410-00004	14-23	09491-75001	5-29-3	11111-12400	40-01
09440-04002	11-13-2	09491-80001	5-29-1		29-01
09440-04010	11-13-1	09491-85001	5-29-4	11111-17400	39-01
09440-06003	19-23	09491-90001	5-29-5		38-01
09440-09004	15-16	09492-22001	40-13	11141-12000	1-02
09440-18002	21-25	09492-40002	5-30	11141-12400	29-02
09443-06006	24-11	09494-00029	5-31		40-02
09443-06008	10-27	09494-00045	40-14	11141-17400	39-02
09443-07001	23-30	09800-00118	27-01		38-02
09443-07001	22-30	09811-00115	27-02	11210-12001	1-03
09443-07003	10-28	09812-00001	27-03	11210-17400	39-03
09443-08001	8-18	09813-00001	27-04		38-03
09443-12003	8-19	09813-00009	27-05	11241-12000	1-04
09443-14005	15-17	09813-00020	27-06	11301-12802	1-05
09443-16002	15-18	09813-00021	27-07	11341-12003	29-03
09443-16004	45-20	09814-00001	27-08		40-04
	34-22	09814-00004	27-09	11341-12603	3-01
09444-26005	30-16	09814-00007	27-10	11351-12002	40-05
	41-16	09816-00001	27-11		29-04
09444-26006	10-29	09816-00004	27-12	11351-12602	3-02
09448-31002	15-19	09816-00007	27-13	11361-12001	29-05
09448-37005	11-14	09817-00001	27-14		40-06
09462-00002	24-12	09817-00003	27-15	11361-12601	3-03
09471-06001	25-32	09817-00005	27-16	11381-12001	3-04
09471-06002	25-33	09817-00103	27-17	11383-12000	4-01
09471-06008	44-13	09821-00001	49-04	11385-12000	7-01
	33-14	09825-00001	49-05	11393-12000	3-05
09471-06009	26-16	09900-25020	49-02	11440-12001	4-02
09471-06010	25-34	09930-20111	27-18	11482-12000	3-06
09471-06011	26-17			11491-12000	3-07
09471-06015	31-17			11492-12002	4-03
	43-14-2			12000-12801	2-01
09471-06021	44-14			12110-12000	2-02-1
	33-15			12110-12700	2-02-2
09471-06024	43-14-1			12110-12710	2-02-3
09481-15001	24-13			12110-17400	39-04-1
09482-00003	1-16				38-04-1
09482-00027	39-23-1			12110-17410	39-04-2
09482-00030	39-23-2				38-04-2
09482-00030	38-29-2			12110-17420	39-04-3
09482-00032	38-29-1				38-04-3
09482-00040	40-03			12140-12818	39-05-1
09491-28001	39-24-2				2-03-1
	38-30-3				38-05-1
09491-30001	39-24-1			12140-12819	39-05-2
	38-30-1				2-03-2
09491-32001	39-24-3				38-05-2
	40-12			12140-12820	39-05-3
	38-30-2				2-03-3

Part No.	Page-Ref.No.	Part No.	Page-Ref.No.	Part No.	Page-Ref.No.
20000					
12140-12820	38-05-3	13688-08010	5-28	21111-07000	2-17
12149-12010	2-04	13700-12021-002	4-04-1	21200-12000	8-01
12151-12000	2-05	13700-12021-019	4-04-2	21200-17400	38-11
12181-12003	2-06	13700-12021-061	4-04-3	21231-07040	8-02
12211-03300	2-07	13700-12021-075	4-04-4	21411-12000	8-03
12220-12000	2-08	13700-12021-676	4-04-5	21441-07200	38-12
12260-12000	2-09	13700-12021-678	4-04-6	21441-12000	8-04
12353-12001	2-10	13700-12021-681	4-04-7	21451-03000	8-05
12410-12000	2-11	13721-12020	4-05	21451-07200	38-13
12410-12100	40-07	13771-12000-002	4-06-4	21460-03001	8-06
12410-17400	39-06	13771-12000-019	4-06-1	23111-12000	8-07
	38-06	13771-12000-061	4-06-2	23121-09210	8-08
12421-05001	2-12	13771-12000-075	4-06-3	23200-05030	8-09
12450-12000	2-13	13771-12000-126	4-06-5	23222-07000	8-10
12460-12000	2-14	13780-12021	4-07	24121-12000	9-01
12471-12000	2-15	13881-12000	4-08	24131-07000	9-02
12511-03100	2-16	14151-12000	6-01	24131-17400	38-14
13200-12114	40-08	14151-12100	40-15	24221-07000	9-03
13200-17410	39-07		29-06	24231-07000	9-04
	38-07	14181-12000	6-02	24241-07000	9-05
13248-02010	5-01	14182-12600	6-03	24310-07600	9-06
13251-09211	5-02	14301-12002	6-04	24321-07000	9-07
13252-09210	5-03	14301-12101	29-07	24331-07000	9-08
13254-01010	5-04		40-16	24741-12000	9-09
13265-08210	5-05	14301-12700	28-01	24741-12100	30-01
13267-05010	5-06	14301-17410	39-08	24741-12100	41-01
13268-05010	5-07		38-08	24821-09000	1-06
13269-01010	5-08	14304-16200	39-09	25211-07000	10-01
13271-01010	5-09		38-09	25211-12100	41-02
13296-11010	5-10	14510-12002	6-05		30-02
13323-03010	5-11	14510-12700	28-02	25221-03600	10-02
13324-03010	5-12	14771-12011	6-06	25221-12100	41-03
13370-09211	5-13	14781-12700	28-03		30-03
13370-12110	40-09	14781-17000	39-10	25311-07600	10-03
13382-03110	5-14		38-10	25311-12102	30-04
13383-12011	5-15	16000-12830	40-17	25311-12102	41-04
13383-12110	40-10	16003-12810	7-02	25322-03000	10-04
13392-01010	5-16	16292-03110	7-03	25340-12100	30-05-2
13394-12110	5-17	16293-11010	17-01	25340-12101	30-05-1
13411-01010	5-18	16391-05030	7-04		41-05
13417-01010	5-19	16710-11011	7-05	25341-03000	10-05
13418-07010	5-20	16731-03100	7-06	25350-12000	10-06
13551-12110	40-11	16810-12630	7-07	25350-12100	30-06-2
	5-21	16820-12032	7-08	25350-12101	30-06-1
13573-09210	5-22				41-06
13577-03010	5-23			25361-07600	10-07
13581-09210	5-24			25362-07600	10-08
13661-03010	5-25			25370-12100	41-07
13684-12110	5-26				30-07
13686-12110	5-27			25380-12130	30-08

Part No.	Page-Ref.No.	Part No.	Page-Ref.No.	Part No.	Page-Ref.No.
30000					
25380-12130	41-08	30000-12813	49-01	34100-12310	43-01-2
25510-12001	10-09	30000-12833	48-01	34100-12601	25-01-1
25510-12100	30-09	32100-12130	13-01	34100-12620	43-01-1
	41-09	32100-17020	38-16		31-01-1
25600-01602	10-10	32101-12011	42-01-2	34148-07700	48-02-4
25600-05101	30-10	32101-12012	42-01-1	34170-05110	31-02
	41-10	32101-12020	42-13		43-02
25652-03201	10-11	32101-12130	13-02	34173-07020	25-02
25671-19000	10-12	32101-12730	12-01	34174-11020	25-03
26211-12000	11-01	32102-12011	42-02	34175-12020	25-04
26221-08030	11-02	32102-12020	42-14	34181-07010	25-05
26231-08001	11-03	32102-12030	12-02	34910-05030	25-06
26232-01000	11-04	32102-12130	13-03	34910-07100	32-01
26241-12001	11-05	32120-12010	42-03	34910-12330	31-03
26260-12000	9-10	32120-12020	42-15		43-03
26280-03002	9-11	32120-12130	13-04	34911-03032	25-07
26300-12000	11-06	32120-12730	12-03	34911-07001	32-02
26300-12100	30-11	32130-12010	42-04	34911-12330	31-04
	41-11	32130-12020	42-16		43-04
26352-01000	11-07	32130-12130	13-05	34928-01030	25-08
27511-08700	39-11	32130-12730	12-04	34951-07000	25-09
27511-08710	9-12	32140-12010	42-05	34955-05100	43-05
27511-20000	38-15-2	32140-12020	42-17		31-05
27511-20700	38-15-1	32140-12130	13-06	34957-05100	31-06
27600-07610	9-13	32140-12730	12-05		43-06
27600-12010	41-12	32240-03010	42-06-2	35100-07031	32-03
	30-12	32240-12010	42-06-1	35100-07691	25-10
27620-08011	9-14	32240-12020	42-18	35100-12170	43-07
		32240-12030	13-07		31-07
		32240-17020	38-17	35111-07691	25-11
		32254-02030	13-08	35111-11031	32-04
		32338-03020	42-19	35111-12120	43-08-1
		32338-03110	42-08	35111-12170	43-08-2
		32338-07030	13-09		31-08
		32341-12010	42-07	35121-07690	25-12
		32341-12020	42-20	35123-11030	32-05
		32341-12031	12-06-2	35123-11071	31-09
		32341-12130	13-10		43-09-2
		32341-12730	12-06-1	35123-12120	43-09-1
		32341-17020	38-18	35124-11020	43-10-1
		32351-12030	12-07-2	35124-11030	32-06
		32351-12031	12-07-1	35124-11071	43-10-2
		32800-01020	24-01		31-10
		33410-19020	13-11	35125-11020	43-11-1
		33501-10801	1-07	35125-11030	32-07
		33541-11000	1-08	35125-11070	43-11-2
		33542-51000	1-09		31-11
		33610-03010	24-02	35128-03611	43-12-1
		34100-12021	25-01-2	35128-11030	32-08
		34100-12310	31-01-2	35128-11071	43-12-2



Part No.	Page-Ref.No.	Part No.	Page-Ref.No.	Part No.	Page-Ref.No.
40000					
35128-11071	31-12	35710-12660	33-08-1	41100-05002-002	14-01-1
35136-07690	25-13-2	35712-06110	33-09	41100-05002-019	14-01-2
35136-07691	25-13-1		44-09	41100-05002-061	14-01-3
35137-07690	25-14	35712-11011	26-11	41100-05002-075	14-01-4
35155-07690	25-15-2	35713-11010	26-12	41100-05100-002	45-01-3
35155-07691	25-15-1	35715-11012	26-13	41100-05100-019	34-01-1
35171-05170	31-13	35723-03310	26-14-2		45-01-1
	43-13-2	35723-03312	26-14-1	41100-05100-061	45-01-2
35171-07690	25-16	35726-11012	26-15	41100-05100-078	34-01-2
35171-11032	32-09	36118-01681	25-19		45-01-4
35171-12120	43-13-1	36119-07690	25-20	41100-05100-079	34-01-3
35172-10620	25-17	36330-02610	25-21	41531-05000	14-02
35181-11612	32-10	36331-01610	25-22	41540-03000	24-08
35189-01320	25-18	36332-01610	25-23	41540-05100	34-02
35189-11031	32-11	36334-01610	25-24		45-02
35601-03610	26-01	36335-01610	25-25	42100-05000	15-01
35601-05110	44-01	36337-01610	25-26	42100-12100	34-03
	33-01-3	36610-05100	33-10		45-03
35601-05111	33-01-2		44-10	42100-12700	28-04
35601-05112	33-01-1	36610-12001	24-03	42211-03001	15-02
35602-03610	26-02	36740-15010	24-04	42221-03000	15-03
35602-05110	44-02	37110-05110	33-11	42231-09000	15-04
	33-02-3		44-11	42250-03001	15-05
35602-05111	33-02-2	37110-12010	25-27-2	42310-19000	15-06
35602-05112	33-02-1	37110-12012	25-27-1	43110-12001	15-07
35603-12310	44-03	37141-07701	25-28	43110-12700	28-05
	33-03-3	37145-07700	48-02-1	43151-01000	15-08
35603-12311	33-03-2	37146-07700	48-02-2	43221-03001	15-09
35603-12312	33-03-1	37147-07700	48-02-3	43300-01003	15-10
35603-12610	26-03	37711-05100	10-13	43300-12100	34-04-2
35604-12310	33-04-3	37712-01000	10-14	43300-12100	45-04
	44-04	37721-05100	10-15	43300-21201	34-04-1
35604-12311	33-04-2	37740-10010	24-05	43510-12001	15-11
35604-12312	33-04-1	38500-01030	24-06	43510-12100	34-05
35604-12610	26-04	38610-05610	24-07		45-05
35612-06110	33-05		33-12	43551-03000	15-12
	44-05	38610-12110	44-12	43600-03001	21-01
35612-12611	26-05			43610-03000	21-02-2
35613-03610	26-06			43612-03001	21-02-1
35613-06111	33-06			44110-05100-019	34-06-1
35613-06111	44-06			44110-05100-078	34-06-2
35623-06110	33-07			44110-05100-079	34-06-3
	44-07			44110-05100-673	45-06-1
35623-12610	26-07-2			44110-05100-674	45-06-2
35623-12611	26-07-1			44110-05100-676	45-06-3
35624-03610	26-08			44110-12001-002	16-01-1
35625-12610	26-09			44110-12001-019	16-01-2
35710-12111	33-08-2			44110-12001-061	16-01-3
	44-08			44110-12001-075	16-01-4
35710-12610	26-10			44170-12001	16-02

Part No.	Page-Ref.No.	Part No.	Page-Ref.No.	Part No.	Page-Ref.No.
50000					
44180-12001	16-03	45192-12600	14-07	51100-12110-573	46-01-1
44210-12000	16-04	45193-12600	14-08	51100-12110-574	46-01-2
44248-12000	16-05	45194-05100	34-12	51100-12110-576	35-01-1
44251-05000	16-06		45-12		46-01-3
44251-05100	34-07	46310-12600	48-03	51100-12110-578	35-01-2
44251-05100	45-07	46310-12700	48-04	51100-12110-581	35-01-3
44252-05100	34-08	47130-01000	34-13		46-01-4
	45-08		45-14	51100-12600-002	18-01-1
44300-05110	16-07	47210-12700-002	14-09-1	51100-12600-019	18-01-2
44330-01011	16-08	47210-12700-019	14-09-2	51100-12600-061	18-01-3
44336-05110	16-16	47210-12700-061	14-09-3	51100-12600-075	18-01-4
44341-05110	16-09	47210-12700-075	14-09-4	51100-12650-576	36-01-1
44344-01021	16-11	47211-12100-002	45-15-3	51100-12650-578	36-01-2
44344-05110	16-10	47211-12100-019	34-14-1	51100-12650-681	36-01-3
44346-01020	16-13		45-15-1	51100-12700-019	28-06-1
44346-02030	17-02	47211-12100-061	45-15-2	51100-12700-061	28-06-2
44346-05110	16-12	47211-12100-078	34-14-2	51100-12700-075	28-06-3
44347-01600	16-14		45-15-4	51110-05010	18-02
44348-01010	16-15	47211-12100-079	34-14-3	51110-12111	36-02
44394-01020	16-17	47211-17000	39-14		46-02
44610-05100-002	45-09-2	47211-17000	38-21	51130-12110-126	36-03
44610-05100-019	34-09-1	47230-01000	14-10		46-03
	45-09-1			51130-12601-002	18-03-1
44610-05100-061	45-09-3			51130-12601-019	18-03-2
44610-05100-078	34-09-2			51130-12601-061	18-03-3
44610-05100-078	45-09-4			51130-12601-075	18-03-4
44610-05100-079	34-09-3			51140-12110-126	36-04
44610-05100-581	45-06-4				46-04
44610-05601-002	17-03-1			51140-12601-002	18-04-1
44610-05601-019	17-03-2			51140-12601-019	18-04-2
44610-05601-061	17-03-3			51140-12601-061	18-04-3
44610-05601-075	17-03-4			51140-12601-075	18-04-4
44610-17010	39-12			51151-12010	18-05
	38-19			51152-03011	18-06
44641-11000	17-04			51153-03011	18-07
44642-11000	17-05			51154-12011	18-08
44651-11040	17-06			51171-03620	18-09
44661-11000	17-07				46-05
44720-11030	17-08			51171-12700	28-07
44733-11030	17-09			51172-01212	18-10
44821-17000	39-13			51173-01211	18-11
	38-20			51181-03010	18-12
45100-12100	34-10			51182-03620	18-13-2
45100-12600	14-03			51182-03621	18-13-1
45100-12710	45-10			51183-03010	18-14
45160-12600	14-04			51311-12010	18-15
45180-12100	34-11			51311-12111	35-02
45180-12600	14-05				46-06
45180-12710	45-11			51311-12650	36-05
45191-12600	14-06			51311-17010	39-15

Part No.	Page-Ref.No.	Part No.	Page-Ref.No.	Part No.	Page-Ref.No.
51351-07012	18-16	54110-07000	37-01	56111-05000	19-02
51356-07010	18-17		47-01	56111-05711	48-06
51361-03110	18-18	54110-07600	22-01	56111-12100	36-07-2
51410-12600	18-19	54210-12002	37-02	56111-12710	36-08-2
51451-03010	18-20		47-02	56111-12720	36-09-2
51452-08010	18-21	54210-12602	22-02	56111-12730	36-09-1
51453-03010	18-22	54410-01002	23-01	56111-12740	36-08-1
51453-05110	35-03	54410-07001	22-03	56111-12750	36-07-1
51530-12010-002	18-23-1	54441-01000	23-02	56211-03010	18-36
51530-12010-019	18-23-2	54441-20000	22-04	56211-11010	36-10
51530-12010-061	18-23-3	54451-03001	37-03	56211-11010	39-16
51530-12010-075	18-23-4		47-03	56211-12111	35-05
51530-12010-078	46-07	54451-03601	22-05	56211-22010	46-10
51540-12010-002	18-24-1	54611-07000	22-06	56500-03012	19-03
51540-12010-019	18-24-2	54611-07600	37-04	56500-19600	32-13
51540-12010-061	18-24-3	54611-07600	47-04	56510-03012	19-04
51540-12010-075	18-24-4	54621-03000	22-07	57110-05010	20-01
51540-12010-078	46-08	54632-01001	22-08	57110-20010	32-14
51543-05110	46-09	54661-07000	22-09	57111-05010	20-02
51551-01211	18-25	54711-07611	22-10	57211-05010	20-03
51552-03110	18-26	54730-07000	22-11	57211-20010	32-15
51553-01211	18-27	54892-07000	22-12	57300-20710	32-16
51571-03110	18-28	55100-03010	22-13	57301-07620	20-05
51573-03110	18-29	55100-14010	37-05	57301-07823	20-04
51611-20000	18-30		47-05	57302-07011	20-06
51621-05000	18-31	55200-03600	23-03	57320-01011	20-07
51622-20000	18-32		22-14	57334-01010	20-08
51631-05000	35-04	55200-14010	37-06	57337-01010	20-09
51631-05600	18-33		47-06	57340-21010	20-10
51643-05000	18-34	55250-01000	23-04	57370-01311	20-11
51810-07001-019	32-12-1	55250-01000	22-15	57382-01311	20-12
51810-07001-078	32-12-2	55261-01010	23-05	57390-07011	20-13
51810-07001-079	32-12-3		22-16	57421-05010	20-14
51810-12100-002	43-15-3	55261-14010	37-07	57421-20010	32-17
51810-12100-019	31-14-1		47-07	57431-01010	20-15-2
51810-12100-019	43-15-1	55311-07020	23-06	57431-01011	20-15-1
51810-12100-061	43-15-2		22-17	57500-05701	32-18-2
51810-12100-078	31-14-2	55311-12120	37-08	57500-21010	32-18-1
	43-15-4		47-08	57501-03700	20-17
51810-12100-079	31-14-3	55321-07020	22-18	57501-07827	20-16
51810-12601-002	25-29-1				
51810-12601-019	25-29-2	55321-12120	37-09	57502-01602	20-18
51810-12601-061	25-29-3		47-09	57540-21010	20-19
51810-12601-075	25-29-3	55322-07020	22-19	57621-05010	20-20
51900-03012	18-35	55322-12120	37-10	57621-20010	32-19
			47-10	58100-01741	36-11-1
53110-03650-126	19-01	55325-03020	37-11	58100-01741	48-07-2
53110-12000	46-13-2		22-20	58100-01761	36-11-2
53110-12100-126	46-13-1		47-11	58100-03731	19-05
53110-12600	36-06-1	56110-12300	46-14	58100-07721	48-07-1
53110-12610-126	36-06-2	56111-03702	48-05	58100-07731	46-15

Part No.	Page-Ref.No.	Part No.	Page-Ref.No.	Part No.	Page-Ref.No.
58100-17001	39-17	61101-12832-019	37-12-1	64331-01000	21-11
58165-50000	19-06	61101-12832-078	37-12-2	64451-01002	37-21-2
58200-05000	19-07	61101-12832-079	37-12-3		23-11
58200-05710	48-08-2	61103-03815-002	21-03-1		47-18
58200-07001	36-12-2	61103-03815-019	21-03-2	64451-20000	37-21-1
58200-07711	36-12-1	61103-03815-061	21-03-3	64511-12001	23-12
58200-12300	46-16	61103-03815-075	21-03-4	64511-12730	37-22
58200-13100	48-08-1	61211-20000	21-04		47-19
58200-13710	36-12-3	61251-17000	38-22	64511-17400	38-23-1
58200-17000	39-18	61310-01601	28-09	64511-17410	38-23-2
58300-12000	19-08	61310-05001-002	21-05-1	64511-17420	39-20-1
58300-12100	36-13-1	61310-05001-019	21-05-2	64511-17430	39-20-2
58300-12300	46-17	61310-05001-061	21-05-3	64611-01000	23-13
58300-12700	48-09-2	61310-05001-075	21-05-4	64651-01000	23-14
58300-12710	48-09-1	61310-12100-126	37-14	64711-01603	23-15
58300-12720	36-13-3	61310-12100-126	47-13-1	64730-01000	23-16
58300-12730	36-13-2	61310-12600-126	37-15	64741-01601	23-17
58300-17000	39-19	61310-12700	47-13-2	64761-01000	23-18
58310-12000	19-09	61320-05001-002	21-06-1	65100-03010	23-19
58310-12100	36-14-1	61320-05001-019	21-06-2	65100-12100	47-20
58310-12300	46-18	61320-05001-061	21-06-3	65100-12110	37-23
58310-12700	48-10-2	61320-05001-075	21-06-4	65321-03020	23-20
58310-12710	48-10-1	61320-12600-126	37-16	65321-12120	37-24
58310-12720	36-14-3	61411-01001	23-07		47-21
58310-12730	36-14-2	61421-01001	23-08	65322-03020	23-21
58410-01740	36-15-1	62100-05601	21-07	65322-12120	37-25
58410-01771	36-15-3	62100-05620-002	47-14-3		47-22
58410-01791	36-15-2	62100-05620-019	37-17-1	65325-03020	37-26
	48-11-1		47-14-1		23-22
58410-05000	19-10	62100-05620-061	47-14-2		47-23
58410-05700	48-11-2	62100-05620-078	37-17-2	68110-11000	16-18
58410-12300	46-19		47-14-4	68111-17000	38-24
58631-07010	20-21	62100-05620-079	37-17-3		39-21
58700-03010	19-11	62100-12700	28-10	68131-07601	14-13
58721-03010	19-12	62211-01611	28-11	68133-12001	34-15
58721-03011	32-20	62211-01701	21-08	68133-12001	45-16
58722-03010	32-21	62311-03001	21-09	68141-12600	34-16
58723-03010	19-13	63110-12100-126	37-18-2		45-17
			47-15-1	68165-05100	45-13
		63110-12600-126	14-11	68171-11601	17-10
60000					
61101-03843-019	28-08-1	63110-12620	37-18-1		
61101-03843-061	28-08-2		47-15-2		
61101-03843-075	28-08-3	63310-12701	14-12		
61101-12829-002	47-12-3	64110-01000	23-09		
61101-12829-019	37-13-1		47-16		
61101-12829-019	47-12-1	64110-10000	37-19	90000	
61101-12829-061	47-12-2	64210-01003	37-20	99000-32010	49-07
61101-12829-078	37-13-2		23-10	99000-33010	49-03
	47-12-4		47-17		
61101-12829-079	37-13-3	64310-01000	21-10		

SUZUKI A100-III

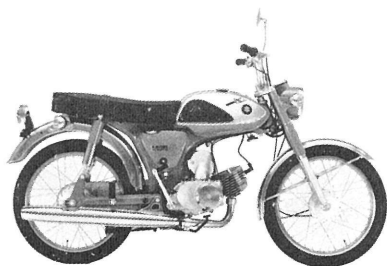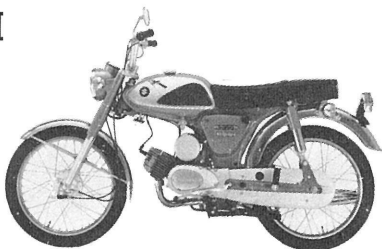





SUZUKI A100-III

Foreword


This parts catalogue contains parts used on the SUZUKI A100-III.
Parts which are interchangeable with those of SUZUKI A100 are
not included in this parts catalogue.

Refer to the SUZUKI A100 parts catalogue for parts not included
in this parts catalogue.


Colors used for A100-III are as follows.

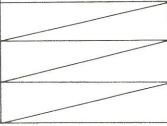Color No.	Color Name	Mansel Color No.	Color
019	Black	N1	
064	Pure White	N9.5	
126	Pearl Mettalic		
156	Candy Corporate Blue		
157	Candy Blight Red		
Combination Color			
Color No.	Combination		Applicable to
	A	B	
676	019	126	
621	156	126	
619	157	126	
635	019	126	
623	156	126	
622	157	126	
618	019	064	
617	156	064	
616	157	064	


A100—Ⅲ

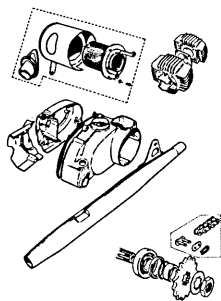


①

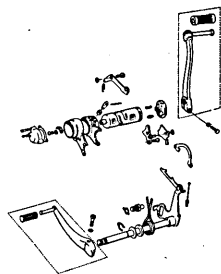


②

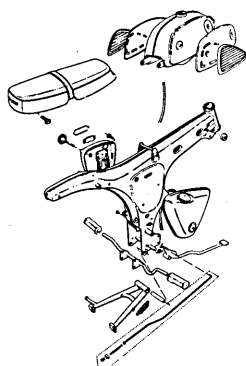


③

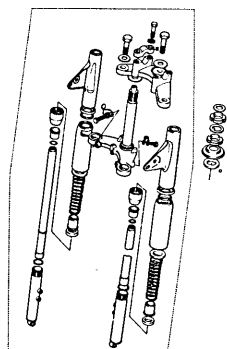


④

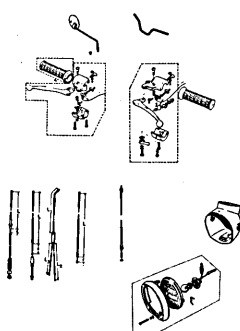


⑤

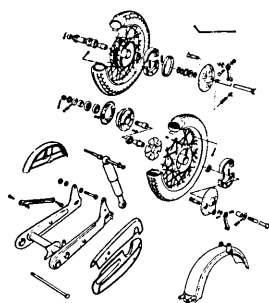


⑥

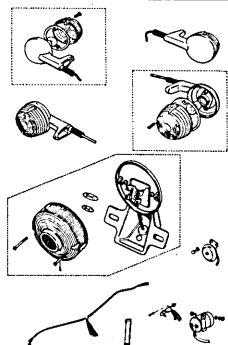

⑦

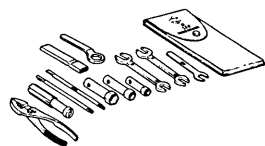


⑧

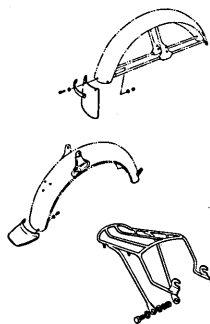

⑨


Muffer - Cylinder Head - Air Cleaner

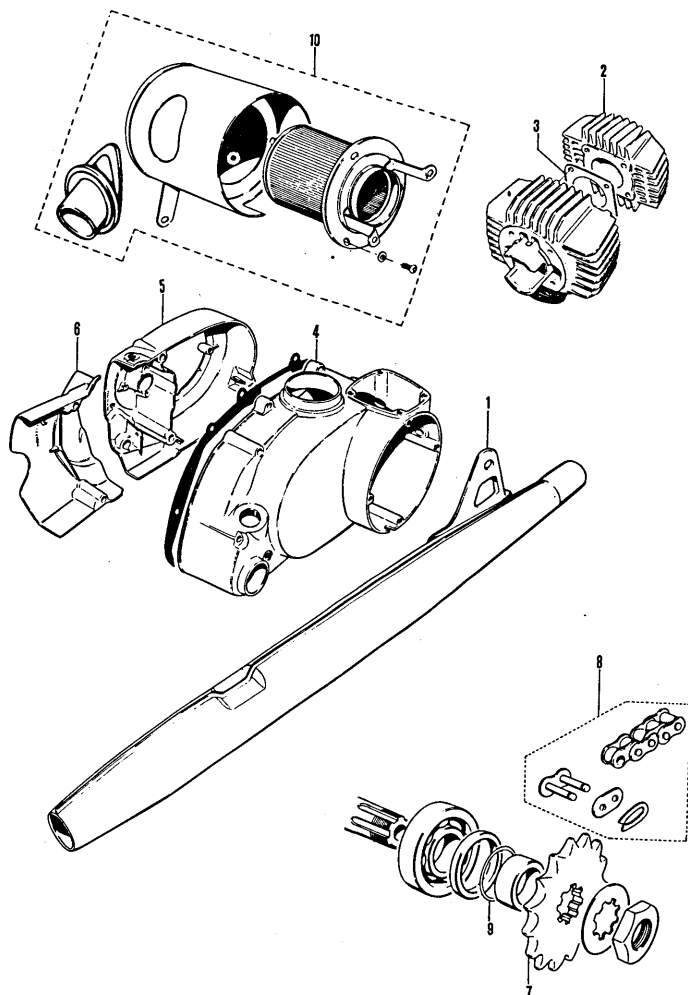

Muffler - Cylinder Head - Air Cleaner

Ref.No.	Part No.	Description	Q'ty	Remarks
1	14301-21200	Muffler Ass'y	1	
2	11111-12400	Cylinder Head	1	
3	11141-12400	Cylinder Head Gasket	1	
4	11341-12003	Crankcase RH Cover	1	
5	11351-12002	Crankcase LH Cover	1	
6	11361-12001	Engine Sprocket Cover	1	
7	27511-20700	Engine Sprocket	1	N.T.=14
8	27600-08010	Drive Chain Ass'y	1	#428X108L
9	09280-20001	Engine Sprocket O Ring	1	d.=1(0.04), I.D.=19.5(0.77)
10-1	13700-12021-676	Air Cleaner Ass'y	1	
10-2	13700-12021-621	Air Cleaner Ass'y	1	
10-3	13700-12021-619	Air Cleaner Ass'y	1	


Gear Shifting

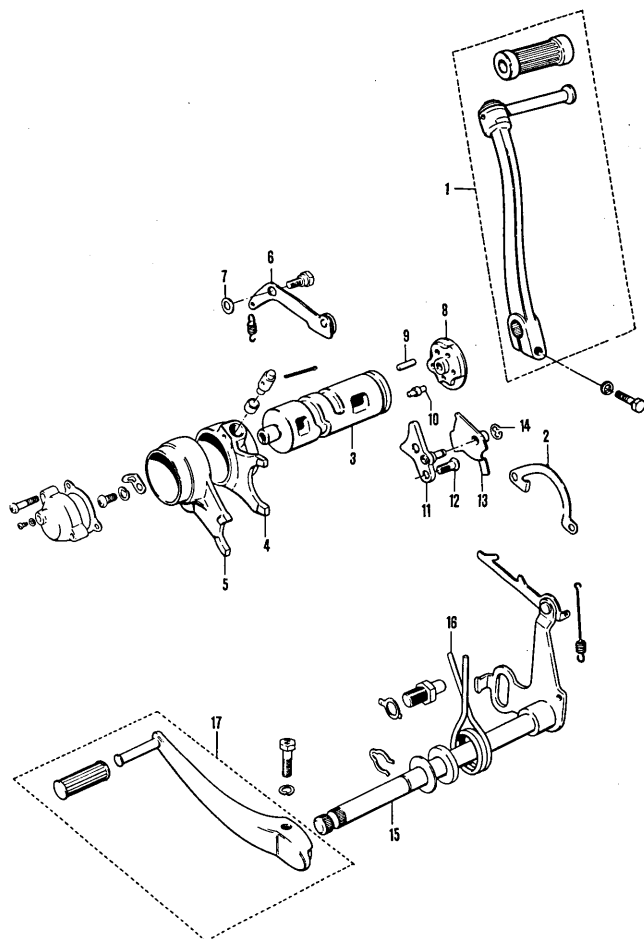

Gear Shifting

Ref.No.	Part No.	Description	Q'ty	Remarks
1	25600-05620	Gear Shifting Lever Ass'y	1	
2	24741-12100	Countershaft Bearing Retainer	1	
3	25311-12102	Gear Shifting Cam	1	
4	25211-12100	Low Speed Gear Shifting Fork	1	
5	25221-12100	High Speed Gear Shifting Fork	1	
6	25350-12101	Shifting Cam Stopper	1	
7	09160-06022	Shifting Cam Stopper Washer	1	
8	25380-12130	Shifting Cam Stopper Plate	1	
9	09261-04003	Shifting Cam Pin	3	
10	09209-04006	Shifting Cam Stopper Pin	1	
11	25340-12101	Shifting Cam Guide	1	
12	02121-06168	Cross Head Screw	2	
13	25370-12100	Shifting Cam Stopper Pawl	1	
14	08332-11059	E Ring	1	
15	25510-12100	Shifting Shaft	1	
16	09444-26005	Shifting Shaft Return Spring	1	
17	26300-12100	Kick Starter Lever Ass'y	1	


Frame - Fuel Tank - Frame LH Cover

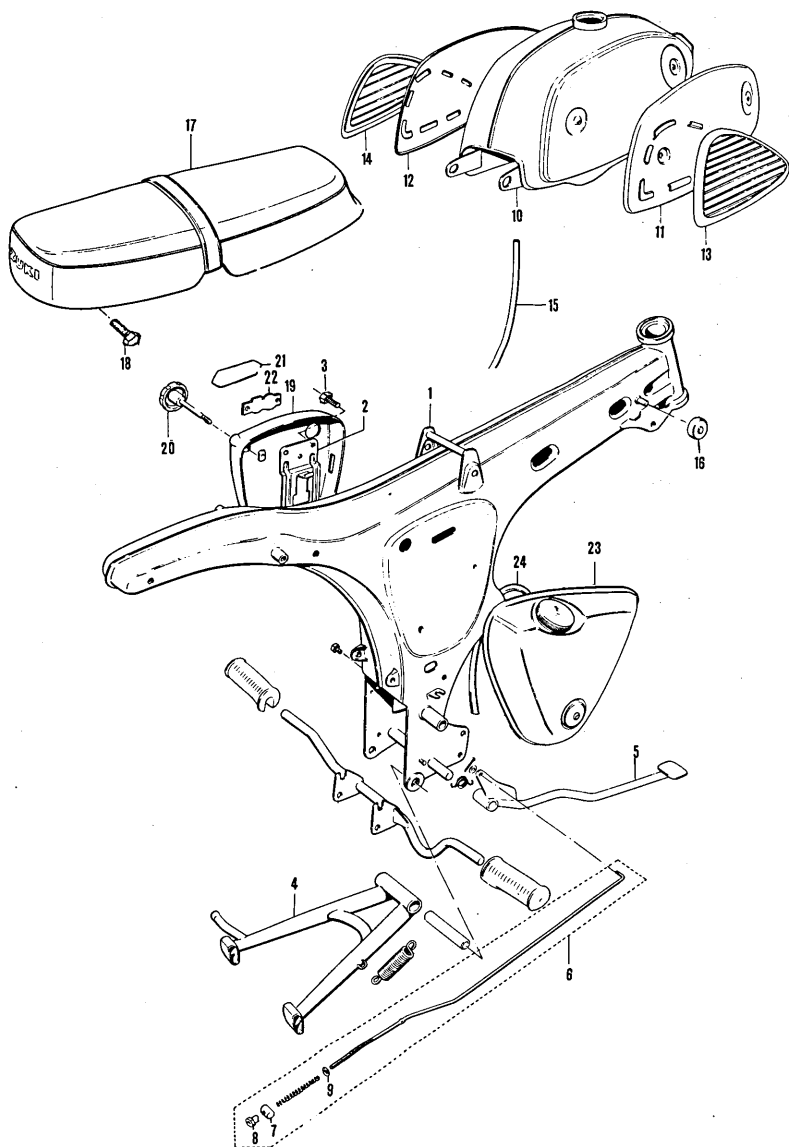

Frame - Fuel Tank - Frame LH Cover

Ref.No.	Part No.	Description	Q'ty	Remarks
1-1	41100-21200-019	Frame	1	
1-2	41100-21200-156	Frame	1	
1-3	41100-21200-157	Frame	1	
2	41540-05100	Battery Holder	1	
3	09128-06004	Battery Holder Screw	3	
4	42100-23200	Center Stand	1	
5	43110-21200	Brake Pedal	1	
6	43300-21201	Brake Rod Ass'y	1	
7	09209-11002	•Brake Cam Lever Pin	1	
8	09150-06001	•Brake Rod Adjuster Nut	1	
9	08322-21068	•Flat Washer	1	
10-1	44110-23200-618	Fuel Tank	1	
10-2	44110-23200-617	Fuel Tank	1	
10-3	44110-23200-616	Fuel Tank	1	
11	44170-21200	Fuel Tank RH Side Cover	1	
12	44180-21200	Fuel Tank LH Side Cover	1	
13	44251-21000	RH Knee Grip	1	
14	44252-21000	LH Knee Grip	1	
15	09343-05021	Fuel Hose	1	L.=390(15.35)
16	09329-10005	Fuel Tank Front Damper	2	
17	45100-21600-369	Dual Seat Ass'y	1	
18	01121-08258	Small Hexagon Bolt	2	
19-1	47211-21001-019	Frame LH Cover	1	
19-2	47211-21001-156	Frame LH Cover	1	
19-3	47211-21001-157	Frame LH Cover	1	
20	47130-01000	Frame LH Cover Knob	1	


Frame - Fuel Tank - Frame LH Cover

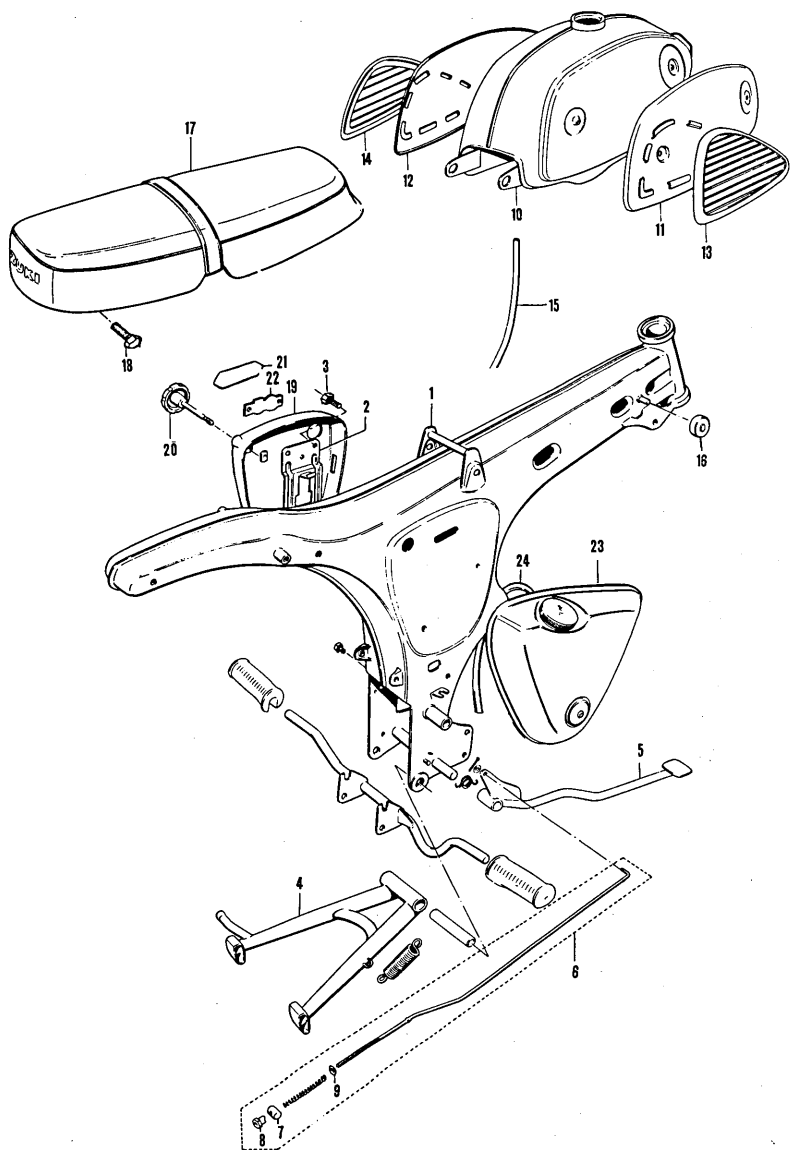

Frame - Fuel Tank - Frame LH Cover

Ref.No.	Part No.	Description	Q'ty	Remarks
21	68141-12600	Frame Cover Emblem	1	
22	68132-23200	100 Emblem	1	
23-1	44610-21000-019	Oil Tank	1	
23-2	44610-21000-156	Oil Tank	1	
23-3	44610-21000-157	Oil Tank	1	
24	09344-05032	Oil Tank Breather Line	1	







Front Fork

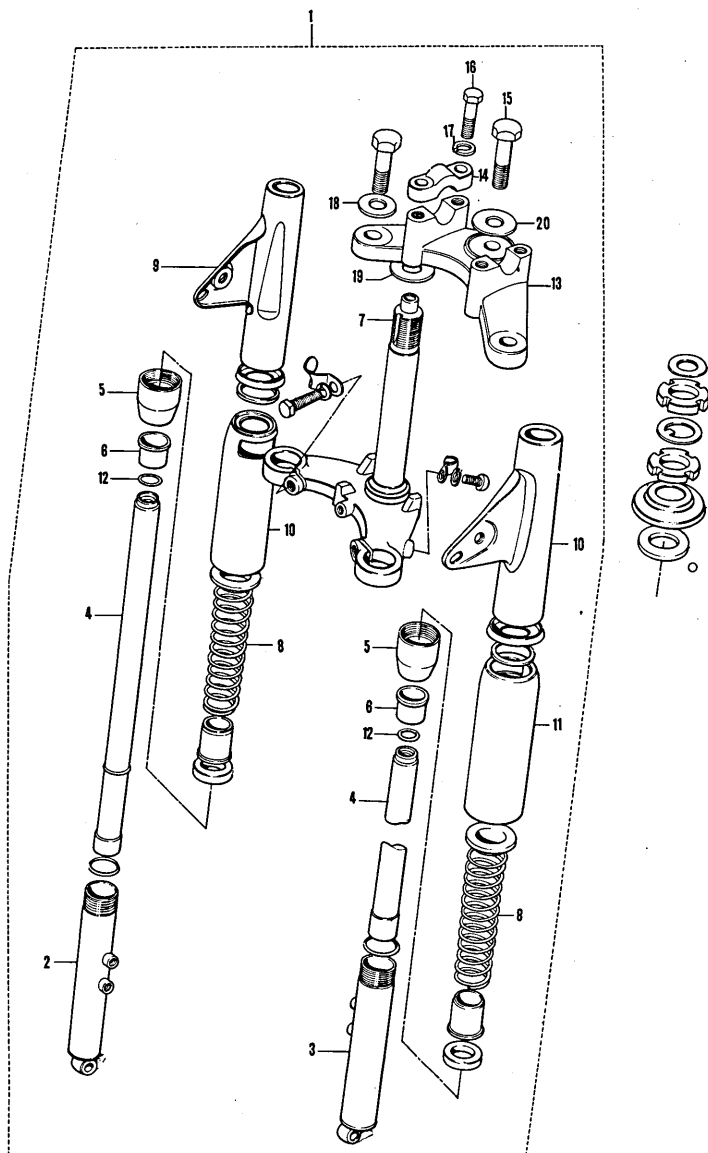

Front Fork

Ref.No.	Part No.	Description	Q'ty	Remarks
1-1	51100-23210-635	Front Fork Ass'y	1	
1-2	51100-23210-623	Front Fork Ass'y	1	
1-3	51100-23210-622	Front Fork Ass'y	1	
2	51130-21010-126	•Fork RH Outer Tube	1	
3	51140-21010-126	•Fork LH Outer Tube	1	
4	51110-23010	•Inner Tube	2	
5	51150-03011	•Outer Tube Nut	2	
6	51152-03011	•Inner Tube Guide	2	
7	51410-22010	•Steering Stem	1	
8	51171-20010	•Fork Spring	2	
9-1	51530-23010-019	•Head Lamp RH Bracket	1	
9-2	51530-23010-156	•Head Lamp RH Bracket	1	
9-3	51530-23010-157	•Head Lamp RH Bracket	1	
10-1	51540-23010-019	•Head Lamp LH Bracket	1	
10-2	51540-23010-156	•Head Lamp LH Bracket	1	
10-3	51540-23010-157	•Head Lamp LH Bracket	1	
11-1	51511-03012-019	•Fork Outer Cover	2	
11-2	51511-03012-156	•Fork Outer Cover	2	
11-3	51511-03012-157	•Fork Outer Cover	2	
12	51181-22010	•Inner Tube Upper O Ring	2	
13	51311-22010	•Steering Stem Head	1	
14	56211-22010	•Handle Holder	2	
15	51351-20010	•Steering Stem Head Bolt	3	
16	01221-08307	•Crown Bolt	4	
17	08321-21088	•Lock Washer	4	
18	51356-07010	•Steering Stem Head Washer	2	
19	51357-22010	•Steering Stem Head Lower Washer	1	
20	51356-22010	•Steering Stem Head Upper Washer	1	






Handlebar - Handle Switch - Cables - Head Lamp

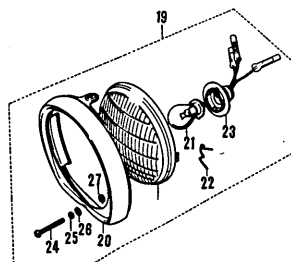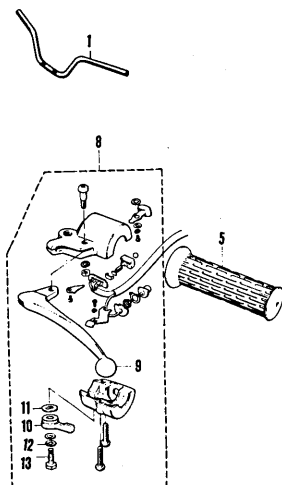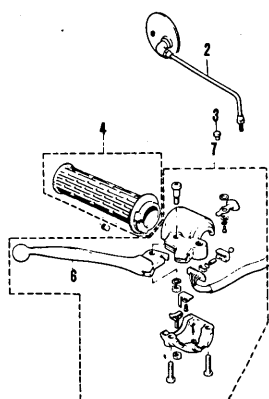

Handlebar - Handle Switch - Cables - Head Lamp

Ref.No.	Part No.	Description	Q'ty	Remarks
1	56111-20710	Handlebar	1	
2	56500-19600	Rear View Mirror Ass'y	1	
3	09250-06001	Rear View Mirror Plug	1	
4	57110-20010	Throttle Grip	1	
5	57211-20010	LH Grip	1	
6	57300-20710	RH Switch Ass'y	1	
7	57421-20010	•Brake Lever	1	
8	57500-21010	LH Switch Ass'y	1	
9	57621-20010	•Clutch Lever	1	
10	58721-03011	•Starter Lever	1	
11	58722-03010	•Starter Lever Washer	1	
12	08321-21068	•Lock Washer	1	
13	01111-06128	•Hexagon Bolt	1	
14	58100-01741	Brake Cable Ass'y	1	L.=1070(42.12), L.=40(1.57)
15	58200-12300	Clutch Cable Ass'y	1	L.=1020(40.16), L.=96(3.78)
16	58300-12700	Throttle Cable Ass'y	1	L1=650(25.59), L2=467(18.39) L3=326(14.96)
17	58410-05700	Starter Cable	1	L.=930(36.61), L.=63(2.48)
18-1	51810-07001-019	Head Lamp Housing	1	
18-2	51810-07001-156	Head Lamp Housing	1	
18-3	51810-07001-157	Head Lamp Housing	1	
19	35100-23020	Head Lamp Ass'y	1	
20	35111-23020	•Head Lamp Rim	1	
21	09471-06024	•Head Lamp Bulb	1	6V, 25/25W
22	35128-03611	•Clamp Spring	3	
23	35171-12120	•Head Lamp Socket	1	


Handlebar - Handle Switch - Cables - Head Lamp

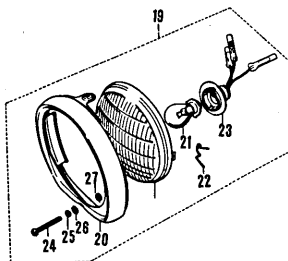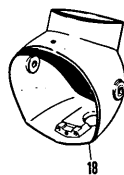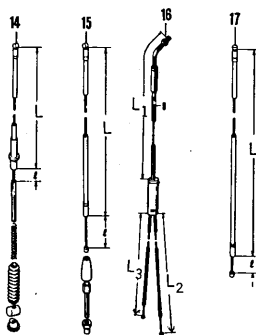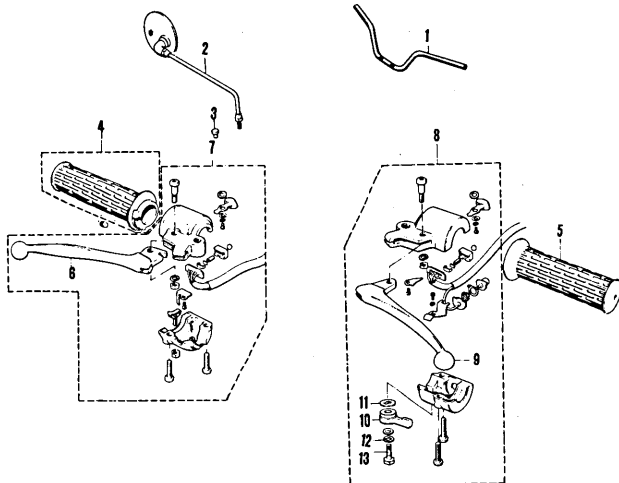

Handlebar - Handle Switch - Cables - Head Lamp

Ref.No.	Part No.	Description	Q'ty	Remarks
24	02113-05357	•Screw	1	
25	08321-21058	•Lock Washer	1	
26	08322-21058	•Flat Washer	1	
27	35189-01320	•Head Lamp Spacer	1	
28	34910-12330	Speedometer Cable Assy	1	L.=790(31.10)
29	34911-12330	•Speedometer Inner Cable	1	L.=790(31.10)


Fender - Wheel - Rear Swinging Arm

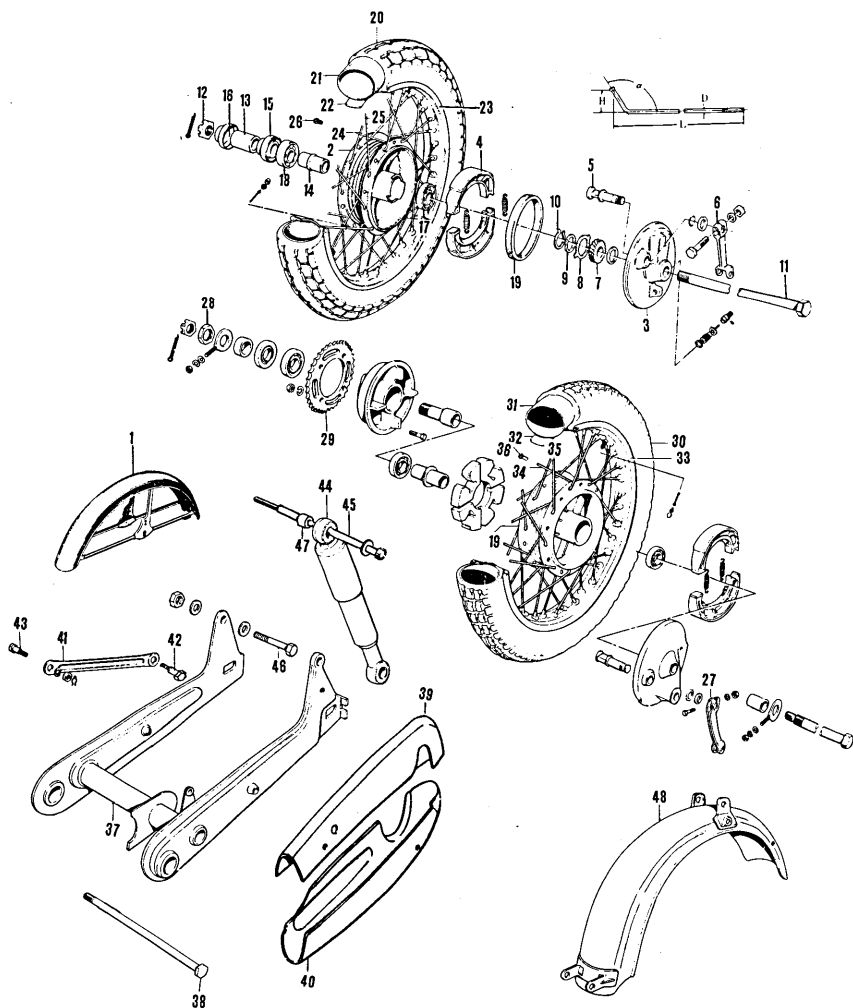

Fender - Wheel - Rear Swinging Arm

Ref.No.	Part No.	Description	Q'ty	Remarks
1	53110-12600	Front Fender	1	
	54100-23200	Front Hub Ass'y	1	
2	54110-01004	•Front Hub Drum	1	
3	54210-03004	•Front Hub Panel	1	
4	54410-01002	•Brake Shoe	2	
5	54441-01000	•Brake Cam Shaft	1	
6	54451-03001	•Front Brake Cam Lever	1	
7	54611-21200	•Speedometer Gear	1	
8	54661-03000	•Speedometer Gear Driver	1	
9	09160-16005	•Speedometer Gear Thrust Washer	1	
10	08331-11159	•Circlip	1	
11	54710-03601	•Front Axle	1	
12	08314-11108	•Castle Nut	1	
13	09180-10003	•Front Axle Left Spacer	1	
14	54730-01000	•Front Hub Bearing Spacer	1	
15	09284-15001	•Front Hub Oil Seal	1	
16	54892-01000	•Front Hub Dust Seal	1	
17	08143-63000	•Ball Bearing	1	
18	08113-62000	•Ball Bearing	1	
19	09283-43001	•Front Hub Panel Oil Seal	1	
20	55100-14010	Front Tire	1	2.50-18
21	55200-14010	Inner Tube	1	2.50-18
22	55261-14010	Inner Tube Protector	1	
23	55311-12120	Wheel Rim	1	1.40X18
	55300-21807	Front Spoke Set	1	


Fender - Wheel - Rear Swinging Arm

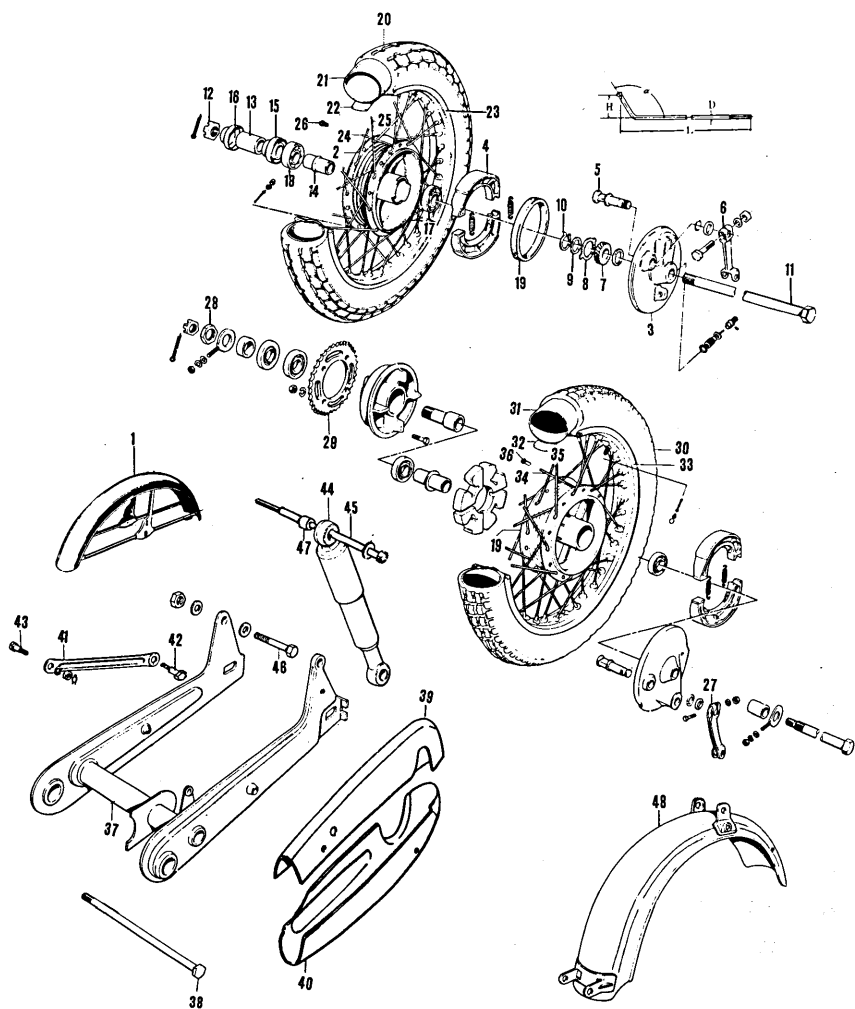

Fender - Wheel - Rear Swinging Arm

Ref.No.	Part No.	Description	Q'ty	Remarks
24	55321-21220	•Inner Spoke	18	L.=172.5(6.79),H.=6.3(0.25) D.=2.9(0.11),α.=99.5°
25	55322-21220	•Outer Spoke	18	L.=172(6.77),H.=7.5(0.30) D.=2.9(0.11),α.=84.5°
26	55325-03020	•Spoke Nipple	36	
	64100-01620	Rear Hub Ass'y	1	
27	64451-20000	•Rear Brake Cam Lever	1	
28	09140-16005	•Rear Sprocket Drum Shaft Nut	1	
29	64511-12760	Rear Sprocket	1	N.T.=37
30	65100-12110	Rear Tire	1	2.50-17
31	55200-14010	Inner Tube	1	2.50-17
32	55261-14010	Inner Tube Protector	1	
33	55311-12120	Wheel Rim	1	
	65300-12828	Spoke Set	1	
34	65321-12120	•Inner Spoke	18	L.=173.5(6.83),H.=8.3 (0.27),D.=3.2(0.13),α.=100°
35	65322-12120	•Outer Spoke	18	L.=173(6.81),H.=8.3(0.33) D.=3.2(0.13),α.=84.5°
36	65322-03020	•Spoke Nipple	36	
37-1	61101-21812-019	Rear Swinging Arm	1	
37-2	61101-21812-156	Rear Swinging Arm	1	
37-3	61101-21812-157	Rear Swinging Arm	1	
38	61211-20000	Rear Swinging Arm Pivot Shaft	1	
39	61310-12600-126	Chain Case Upper Half	1	
40	61320-12600-126	Chain Case Lower Half	1	
41	64310-21200	Rear Torque Link	1	
42	64331-01000	Rear Torque Link Bolt	1	
43	09119-08012	Rear Torque Link Front Bolt	1	
44-1	62100-23210-019	Rear Shock Absorber Ass'y	2	
44-2	62100-23210-156	Rear Shock Absorber Ass'y	2	


Fender - Wheel - Rear Swinging Arm

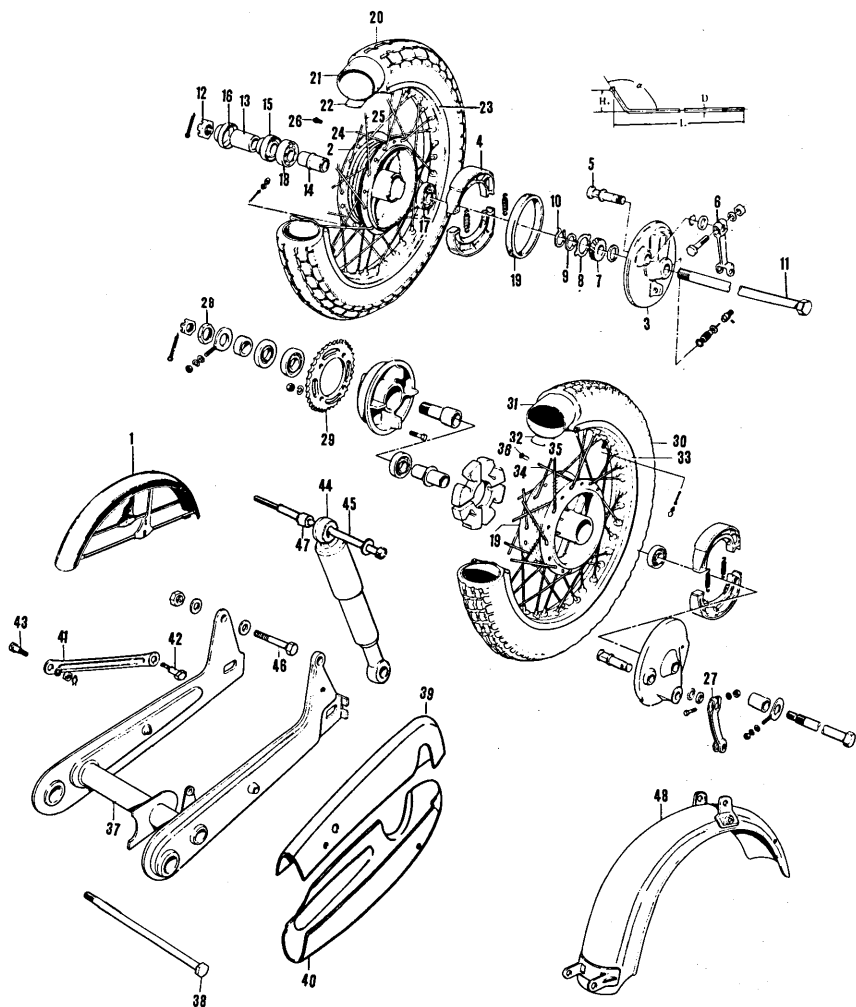

Fender - Wheel - Rear Swinging Arm

Ref.No.	Part No.	Description	Q'ty	Remarks
44-3	62100-23210-157	Rear Shock Absorber Ass'y	2	
45	62311-23200	Rear Shock Absorber Upper Shaft	1	
46	09100-10046	Rear Shock Absorber Lower Bolt	2	
47	62431-23200	Rear Shock Absorber Upper Spacer	2	10X20X10.2(0.39X0.79X0.40)
48	63110-23200	Rear Fender	1	


Tail / Brake Lamp - Turn Signal

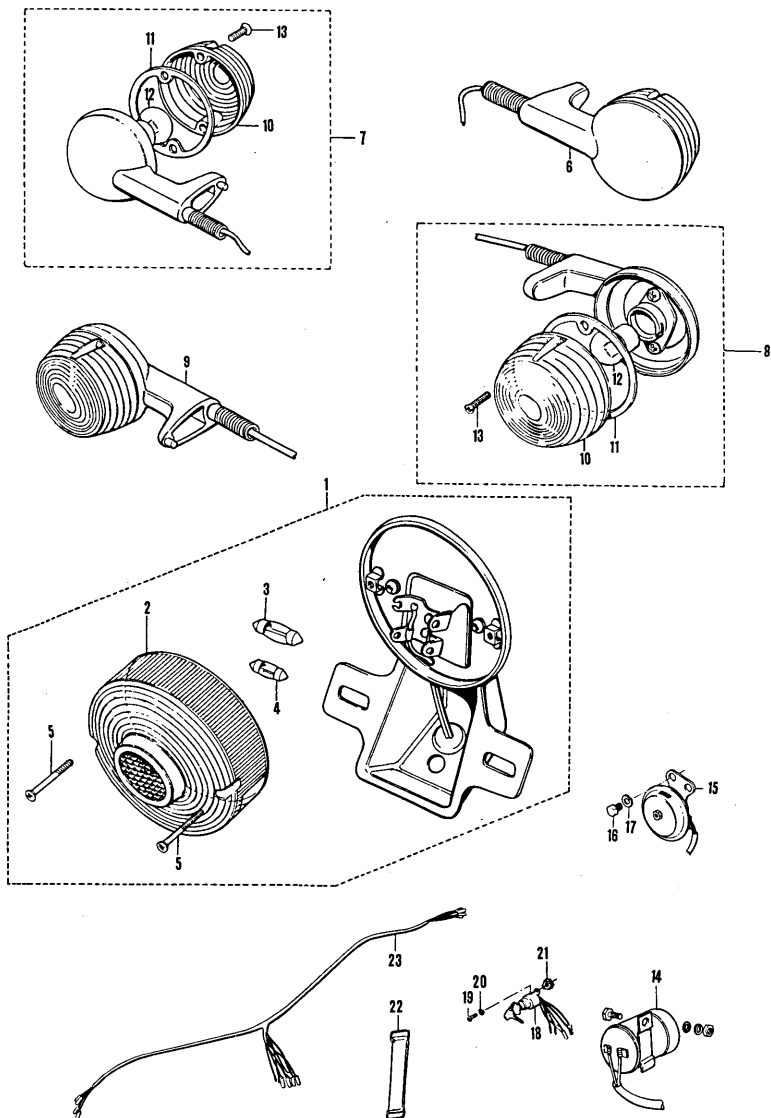

Tail / Brake Lamp - Turn Signal

Ref.No.	Part No.	Description	Q'ty	Remarks
1	35710-21010	Tail/Brake Lamp Ass'y	1	
2	35712-20010	•Tail/Brake Lamp Lens	1	
3	09471-06007	•Brake Lamp Bulb	1	6V,10W
4	09471-06020	•Tail Lamp Bulb	1	6V,3W
5	02131-03358	•Cross Head Screw	2	
6	35601-21011	RH Front Turn Signal Ass'y	1	
7	35602-21011	LH Front Turn Signal Ass'y	1	
8	35603-21011	RH Rear Turn Signal Ass'y	1	
9	35604-21011	LH Rear Turn Signal Ass'y	1	
10	35612-20010	•Turn Signal Lamp Lens	4	
11	35613-06111	•Lens Gasket	4	
12	09471-06021	•Lamp Bulb	4	6V,8W
13	35623-06110	•Lens Screw	8	
14	38610-12110	Turn Signal Relay	1	
15	38500-22030	Horn	1	
16	01111-08128	Hexagon Bolt	2	
17	08321-21088	Lock Washer	2	
18	37110-03612	Ignition Switch Ass'y	1	
19	02111-06128	Cross Head Screw	2	
20	08321-21068	Lock Washer	2	
21	08311-11068	Hexagon Nut	2	
22	09462-00007	Battery Band	1	
23	36610-22001	Main Wiring Harness	1	


Tool Set

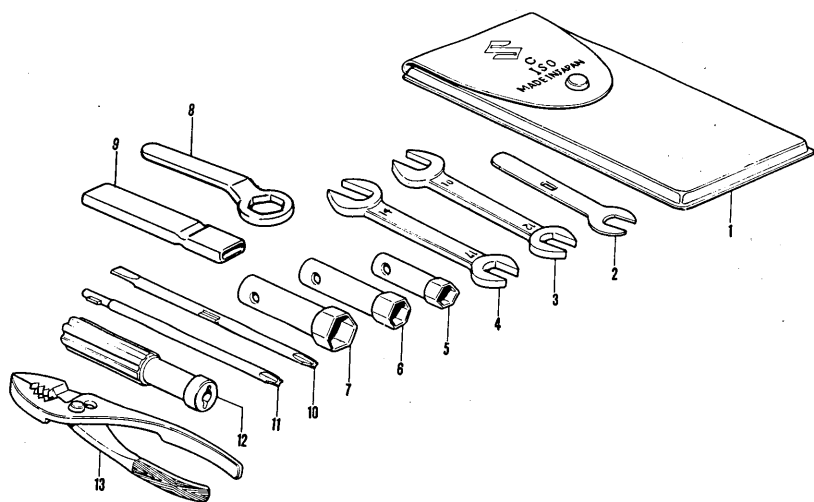

Tool Set

Ref.No.	Part No.	Description	Q'ty	Remarks
	09800-00108	Tool Set	1	
1	09811-00115	•Tool Bag	1	
2	09813-00025	•8 Open End Wrench	1	
3	09813-00006	•10X12 Open End Wrench	1	
4	09813-00009	•14X17 Open End Wrench	1	
5	09816-00001	•10 Box Wrench	1	
6	09816-00004	•14 Box Wrench	1	
7	09816-00007	•21 Box Wrench	1	
8	09817-00103	•22 Offset Wrench	1	
9	09817-00005	•Wrench Handle	1	
10	09814-00001	•Combination Screw Driver	1	
11	09814-00004	•Cross Screw Driver	1	
12	09814-00007	•Driver Grip	1	
13	09812-00001	•135 mm Pliers	1	

OPTIONAL

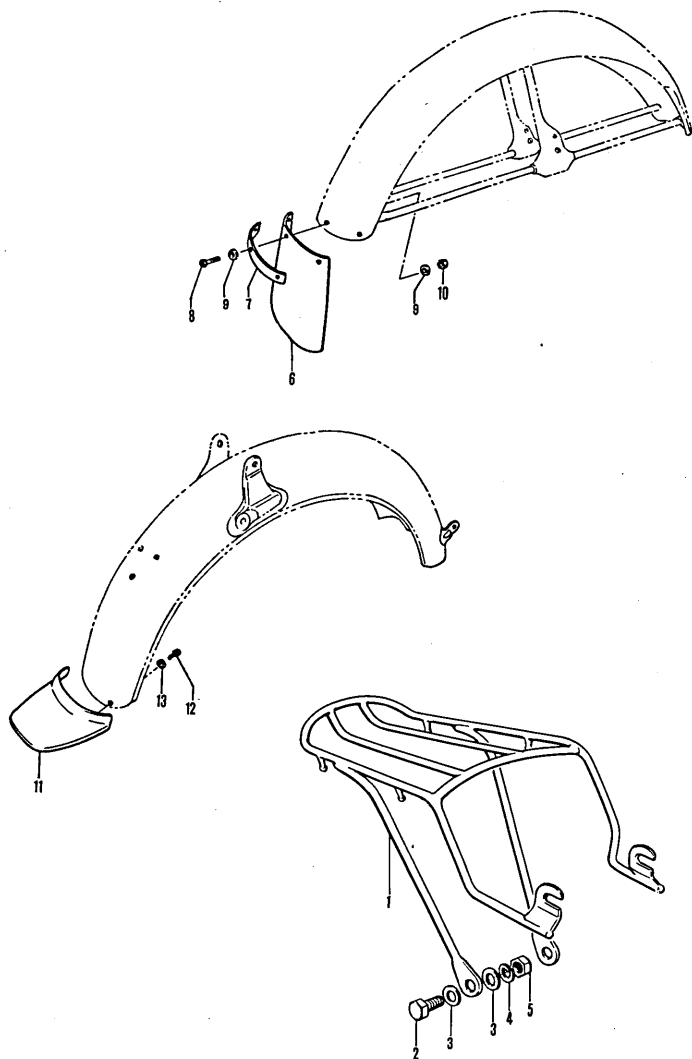


OPTIONAL

Ref.No.	Part No.	Description	Q'ty	Remarks
1	46310-23200	Carrier	1	
2	01111-06128	Hexagon Bolt	2	
3	08322-21068	Flat Washer	4	
4	08321-21068	Lock Washer	2	
5	08311-11068	Hexagon Nut	2	
6	53311-01200	Front Fender Mud Guard	1	
7	53321-09100	Front Fender Mud Guard Plate	1	
8	02111-04108	Cross Head Screw	3	
9	08322-21048	Flat Washer	6	
10	08311-31048	Hexagon Nut	3	
11	63310-12701	Rear Fender Extension	1	
12	01111-05108	Hexagon Bolt	2	
13	08321-21058	Lock Washer	2	


SPECIAL TOOL




Special Tools




1




2




3

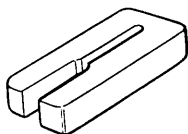


4

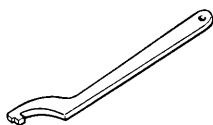


5

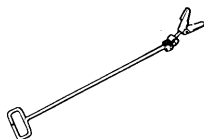


6

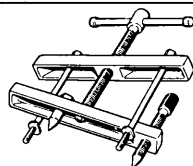

7




8




9




10

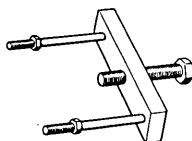


11

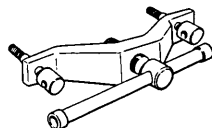


12

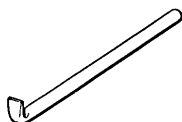


13

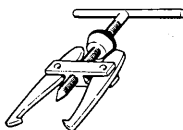

14

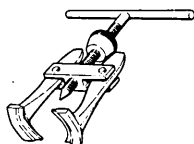

15

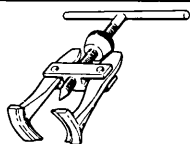

16



17



18


Special Tools

Ref. No. Tool No. Tool Name			Applicable to														
			50cc			70cc		100cc		125cc		250cc		350cc		500cc	
			F50 U50	K50 K50D K50-2 K50D-2	A50 A50D A50-2	U70 A70 A70-2	A100-2 A100 A100 A100 A100	B100P KT120 KT120 KT120 KT120	K125 K125-2 K125-2 K125-2	T125 T125 T125 T125-2	T250 T250 T250 T250	TS250 TS250 TS250 TS250	T350 T350 T350 T350	T500-2 T500 T500 T500			
1	09910-10110	6mm Stud Installing Tool	o	o	o	o	o	o	o	o	o	o	o	o	o		
2	09910-10710	8mm Stud Installing Tool															
3	09910-11510	10mm Stud Installing Tool															
4	09910-20111	Piston Holder	o	o	o	o	o	o	o	o	o	o	o	o	o		
5	09910-60610	Exhaust Pipe Ring Nut Wrench	o	o	o	o	o	o	o	o	o	o	o	o	o		
6	09910-70110	Exhaust Pipe Cleaner	o	o	o	o	o	o	o	o	o	o	o	o	o		
7	09910-80112	Crankcase Separating Tool	o	o	o	o	o	o	o	o	o	o	o	o	o		
8	09911-92010	Crankshaft Center Oil Seal Positioning Tool															
9	09911-92020	Crankshaft Right Oil Seal Positioning Tool															
10	09911-92030	Crankshaft Center Oil Seal Positioning Tool															
11	09913-20611	Outer Valve Seat Remover Only U50	o	o	o	o	o	o	o	o	o	o	o	o	o		
12	09913-20810	Outer Valve Seat Remover															
13	09913-50110	Oil Seal Remover	o	o	o	o	o	o	o	o	o	o	o	o	o		
14	09913-60910	Bearing Puller	o	o	o	o	o	o	o	o	o	o	o	o	o		
15	09913-61110	Bearing Puller															
16	09913-61510	Bearing Puller															
17	09913-70110	Bearing & Oil Seal Installing Tool															
18	09913-70122	Bearing & Oil Seal Installing Tool	o	o	o	o	o	o	o	o	o	o	o	o	o		


Special Tools




19




20

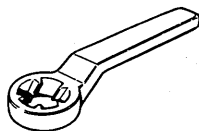


21




22




23

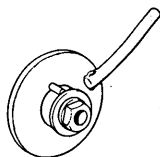


24




25




26




27



28

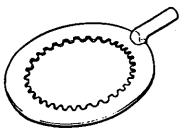


29

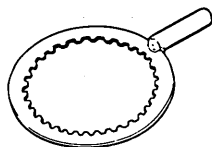


30




31




32




33

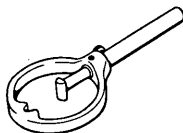

34

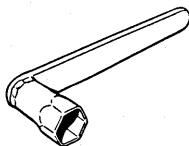

35

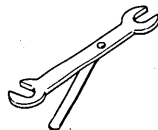

36

















Special Tools

Ref. No. Tool No. Tool Name			Applicable to												
			50cc		70cc	100cc	120cc	125cc	250cc	350cc	500cc				
			F50 U50 K50 K50D K50-2 K50D-2 * Not for K50D-1	A50 A50 A50-2 K50D-2	U70 A70 A70-2	A100-2 A100 A100 AC100 AC100	B100P K125 KT120 TC120 B120	T125 T125-2 T125-2	T250 TS250	T350 T350	T500 T500				
19	09913-80110	Bearing & Oil Seal Installing Tool	* o												
20	09920-10111	Primary Pinion Puller	* o												
21	09920-11610	Primary Pinion Holder													
22	09920-20310	Clutch Spring Hook		o		o									
23	09920-30112	Clutch Assembling Tool	* o												
24	09920-30212	Clutch Assembling Tool	o		o										
25	09920-40110	Clutch Outer Plate Holder	* o												
26	09920-50210	Clutch Sleeve Hub Holder			o										
27	09920-50310	Clutch Sleeve Hub Holder			o										
28	09920-50611	Clutch Sleeve Hub Holder	o												
29	09920-50920	Clutch Sleeve Hub Holder													
30	09920-51510	Clutch Sleeve Hub Holder							o						
31	09920-60310	Clutch Sleeve Hub Holder Handle		o		o									
32	09920-70111	Snap Ring Opener	o	o	o	o	o	o	o	o	o	o	o	o	o
33	09920-80210	Top Gear Holder	o		o										
34	09921-10111	Engine Sprocket Holder	o	o	o	o	o	o	o	o	o	o	o	o	o
35	09930-10111	Spark Plug Wrench	Only U50 o	o	o	o	o	o	o	o	o	o	o	o	o
36	09930-20111	Point Wrench with 0.35mm Gauge	o	o	o	o	o	o	o	o	o	o	o	o	o

Special Tools

Printed in Japan


Special Tools

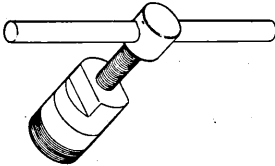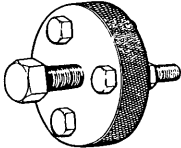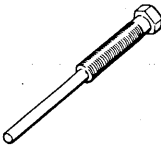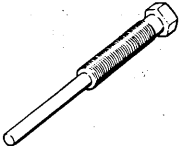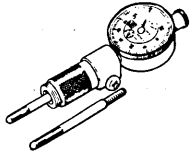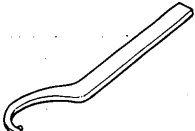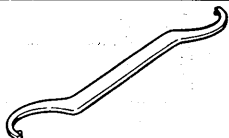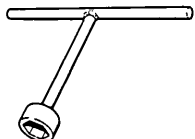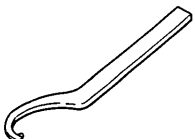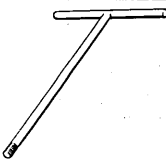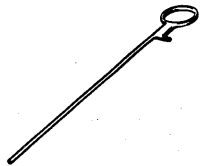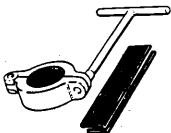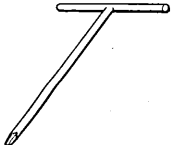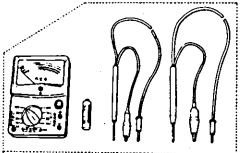 37	 38	 39
 40	 41	 42
 43	 44	 45
 46	 47	 48
 49	 50	 51
 52	 53	 54

Ref. No. Tool No. Tool Name			Applicable to										
			50cc		70cc		100cc	120cc	125cc	250cc	350cc	500cc	
			F50 K50 U50	A50 K500 A50-2 K500-2	U70	A70 A70-2	A100-2 A100 A5100 A100 A100	K125 K125 K125-2 K125-2	T125 T125 T125-2 T125-2	T250 T250 T250	T350 T350 T350	T500-2 T500 T500	
37	09930-30113	Rotor Remover	o	o	o	o	o	o		o			
38	09930-30711	Rotor Remover											
39	09930-31110	Rotor Remover											
40	09930-40111	Rotor Holder	o	o	o	o	o	o		o			
41	09930-50110	Armature Remover	Only K500										
42	09930-50810	Armature Remover											
43	09931-00111	Timing Gauge	o	o	o	o	o	o		o			
44	09932-11910	Main Switch Tool	Only F50										
45	09940-10121	Steering Stem Nut Wrench											
46	09940-10611	Steering Stem Lock Nut Wrench	o		o								
47	09940-20110	Steering Stem Lock Nut Wrench	o	o	o	o	o	o		o			
48	09940-30110	Front Fork Assembling Tool	o	o	o	o	o	o		o			
49	09940-40112	Front Fork Oil Level Gauge		o									
50	09940-60111	Spoke Nipple Wrench	o	o	o	o	o	o		o			
51	09941-00110	Front Fork Outer Tube Nut Wrench Set		o	o	o	o	o		o			
52	09900-07403	T Type Cross Head Screw Driver (For 6mm Screw)	o	o	o	o	o	o		o			
53	09900-25001	Pocket Tester	o	o	o	o	o	o		o			
54	09900-27002	Timing Tester	o	o	o	o	o	o		o			

Special Tools

55

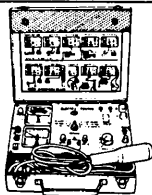

56



Special Tools

Ref. No.		Applicable to										
		50cc			70cc		100cc	120cc	125cc	250cc	350cc	500cc
		F50 U50	K50 K50D K50-2 K50D-2	A50 A50 A50-2	U70	A70 A70-2	A100-2 A100 A100 AC100	B100PK125 K120K125-2 TC120 B120	T125 T125-2	T250 T250	T350	T500-2 T500
55	09900-28101	Electro Tester	0	0	0	0	0	0	0	0	0	0
56	09900-28401	Hydrometer	0	0	0	0	0	0	0	0	0	0

Printed in Japan



SUZUKI MOTOR CO., LTD.

Head Office P.O.Box 116. Hamamatsu Japan

SUZUKI A100. AS100. A100-2. ASS100

PARTS CATALOGUE

Printed in August, 1969
Published in August, 1969

Editor : SUZUKI MOTOR Co., LTD.

Export parts section

Reprint Prohibited

9 1 1 0 2 N

SUZUKI MOTOR CO., LTD



Head Office:

P.O.Box 116, Hamamatsu, Japan

Tokyo Branch:

2-2-8, Higashi-Shinbashi, Minato-ku,
Tokyo, Japan

U.S. SUZUKI MOTOR CORPORATION:

13767 Freeway Drive, Santa Fe Springs,
California 90670, U.S.A.